



I5 User Manual

Jun 22, 2026

Contents

1	System Settings	4
1.1	Restore Default Settings	4
1.2	Custom Settings	4
2	Device Feature Settings	5
2.1	Aiming Light	5
2.2	Illumination Mode	5
2.3	Illumination Brightness	6
2.4	Beeper	6
3	Trigger Settings	7
3.1	Scan Mode	7
3.2	Same Barcode Read Mode	8
3.3	Decode Time	10
3.4	Sleep Time	10
3.5	Auto Sensing Sensitivity	11
3.6	Decode Data Verification	12
4	Interface Settings	12
4.1	Output Mode	13
4.2	USB Keyboard	13
4.3	USB Virtual COM	13
4.4	Serial	13
4.5	Serial Baud Rate	14
4.6	Serial Data Bits	14
4.7	Serial Parity	15
4.8	Serial Stop Bits	15
5	Keyboard Settings	16
5.1	International Keyboard	16
5.2	QR Keyboard Output	19
5.3	UTF-8 QR Keyboard Output	20
5.4	Letter Case Conversion	21
5.5	Caps Lock	21
5.6	GS Character Conversion	22
5.7	Function Key Mapping	23
6	Data Editing	24
6.1	Output format	24
6.2	Barcode Information	24
6.3	Prefix	26
6.4	Suffix	39
6.5	Barcode Identifier	41
6.6	Terminator	43
7	Barcode Settings	44
7.1	Supported Symbologies	44
7.2	General Symbology Switches	44
7.3	1D Symbology Settings	45

7.4	2D and Composite Code Settings	68
7.5	Decode Length Settings	74
8	Appendix	80
8.1	Decimal Digits	80
8.2	ASCII Code Table	81
8.3	Function Keys	95



Start Setup

 
1 System Settings

Important

On this page, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

1.1 Restore Default Settings

This restores all scanner settings to the factory defaults.

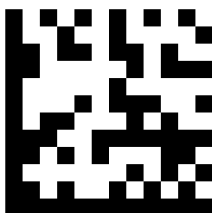

Restore Default Settings

 
1.2 Custom Settings

Save Custom Settings

Save frequently used settings.

Load Custom Settings

Load the saved custom settings.

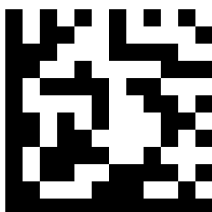


Save Custom Settings





 Start Setup

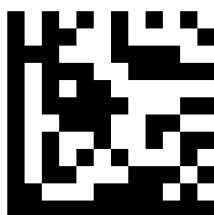


Load Custom Settings

2 Device Feature Settings


Important

On this page, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

 
2.1 Aiming Light

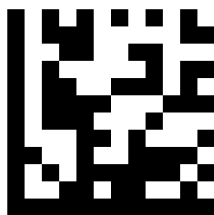

Enable During Scanning

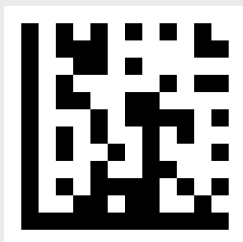 

* Always Enable

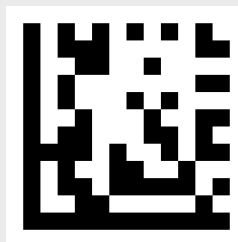 


Disable

2.2 Illumination Mode






 
Start Setup

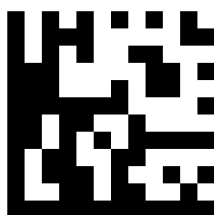

* Enable During Scanning

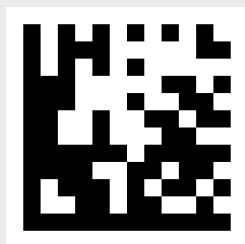 


Always Enable

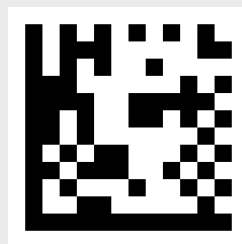 


Disable

 
2.3 Illumination Brightness

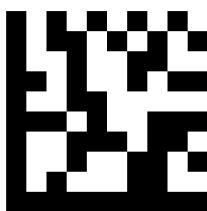

* High Brightness

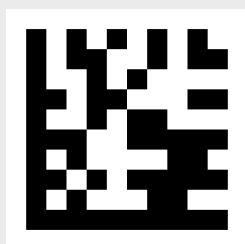 

Medium Brightness

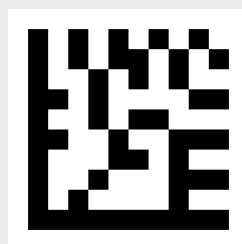 


Low Brightness

2.4 Beeper





 Start Setup

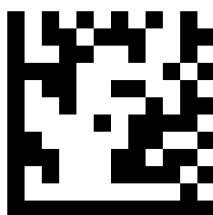

* Enable



Disable

3 Trigger Settings

 
Important

On this page, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

3.1 Scan Mode

Level Trigger

Scanning starts while the scan key is held down and ends after a successful decode or when the read timeout is reached.

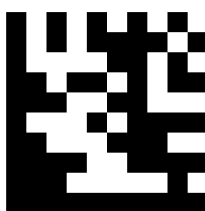

* Level Trigger

 
Auto Sensing

Scanning starts when image changes are detected and ends when the read timeout is reached.





Start Setup

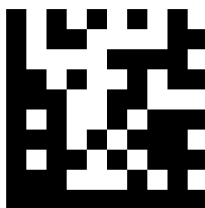

Auto Sensing

Continuous Scanning

Continuously read one or multiple barcodes. The same-code interval setting defines the decode order. Press and release the scan key to start or stop scanning.



Continuous Scanning

3.2 Same Barcode Read Mode

In auto sensing, continuous scanning, and pulse trigger modes, you can configure how repeated reads of the same barcode are handled.

Note

By default, the same barcode is not read again within 500 ms. The interval can be set to 0~5000 ms, where 0 means no interval.

Suppress Repeated Reads

If the same barcode is read repeatedly within the suppression period, it is ignored and not output, and the timer restarts.

Interval Read

If the same barcode is read repeatedly within the interval, it is ignored and not output. It is output again after the interval expires.

Do Not Repeat Same Barcode

The same barcode is not output repeatedly.

Example: Suppress repeated reads of the same barcode within 100 ms.

1. Scan “Start Setup” .
2. Scan the “Suppress Repeated Reads” setting barcode.
3. Scan the “Read Interval” setting barcode.



 


Start Setup


4. Scan the 1 setting barcode in *Decimal Digits*.
5. Scan the 0 setting barcode in *Decimal Digits*.
6. Scan the 0 setting barcode in *Decimal Digits*.
7. Scan “End Setup” .

i Example: Read the same barcode again after a 1-second interval.


1. Scan “Start Setup” .
2. Scan the “Interval Read” setting barcode.
3. Scan the “Read Interval” setting barcode.
4. Scan the 1 setting barcode in *Decimal Digits*.
5. Scan the 0 setting barcode in *Decimal Digits*.
6. Scan the 0 setting barcode in *Decimal Digits*.
7. Scan the 0 setting barcode in *Decimal Digits*.
8. Scan “End Setup” .

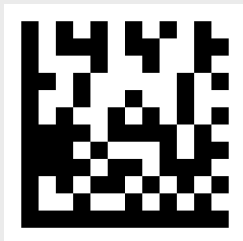

* Suppress Repeated Reads

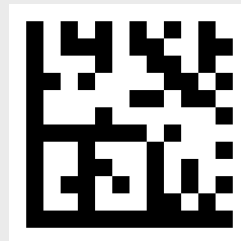 

Interval Read

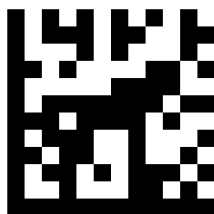 


Do Not Repeat Same Barcode





 
Start Setup

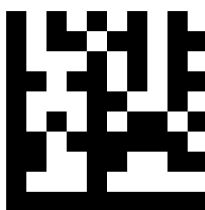


Read Interval (ms)

3.3 Decode Time

 
(This setting is not supported in continuous scanning mode.)

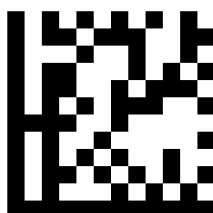

* 5 Seconds

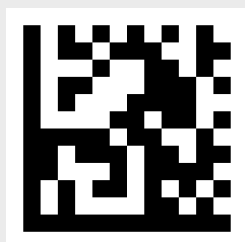 


10 Seconds

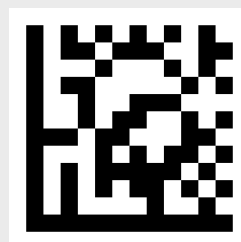 


No Limit

 3.4 Sleep Time

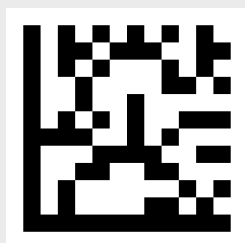

Disable

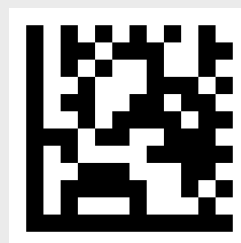 


1 Second






 
Start Setup

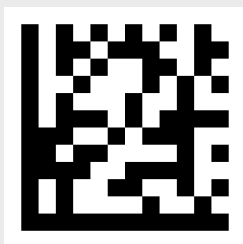


2 Seconds

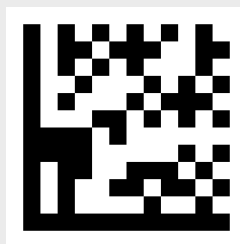 


3 Seconds

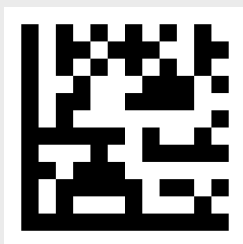 


5 Seconds

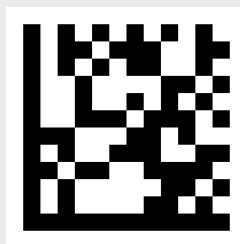 

7 Seconds

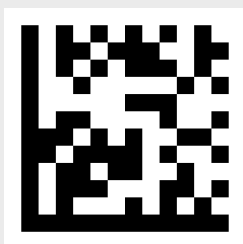 

* 10 Seconds

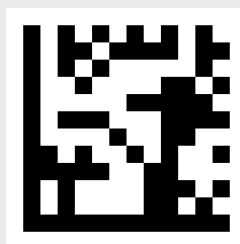 


15 Seconds

3.5 Auto Sensing Sensitivity






 
Start Setup

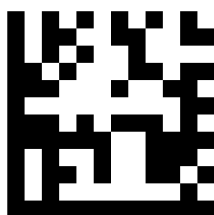

Low Sensitivity

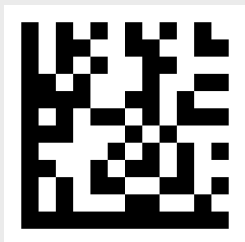 


* Medium Sensitivity

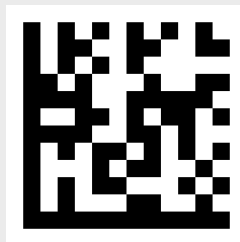 


High Sensitivity

 
3.6 Decode Data Verification

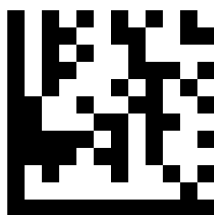

* Disable

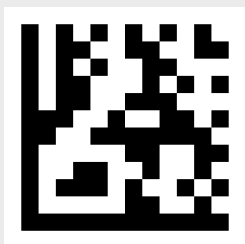 

Output After Reading Twice

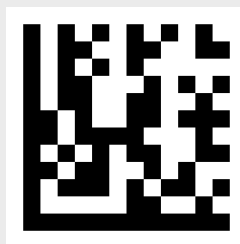 

Output After Reading Three Times

4 Interface Settings





 
Start Setup

Important

On this page, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.


4.1 Output Mode

4.2 USB Keyboard

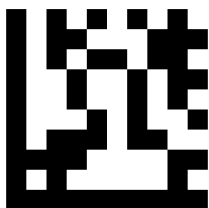

* USB Keyboard Output

 4.3 USB Virtual COM

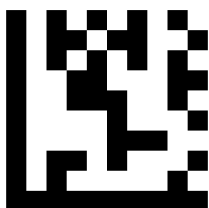


USB Virtual COM Output

4.4 Serial






 Start Setup

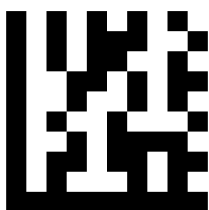


Serial Output

 
4.5 Serial Baud Rate

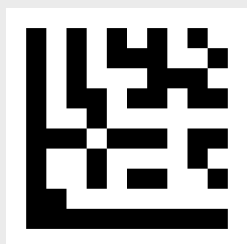


* 9600

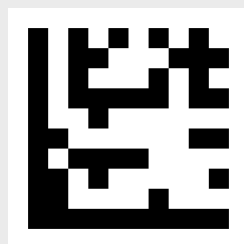 


19200

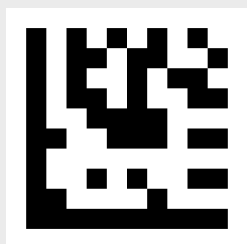 


38400

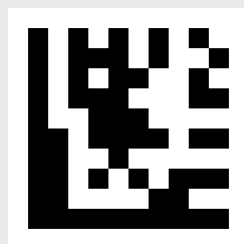 

57600

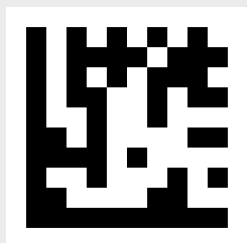 

115200

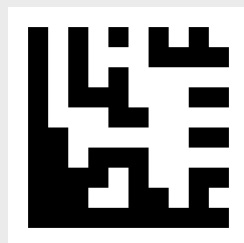 


230400

4.6 Serial Data Bits






 Start Setup

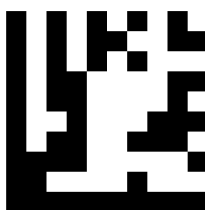


7 Data Bits

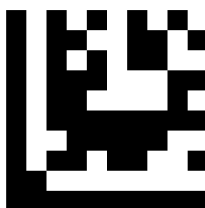 


* 8 Data Bits

 
4.7 Serial Parity

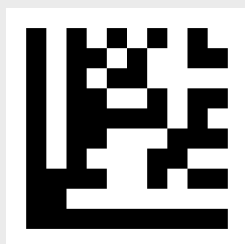

* No Parity

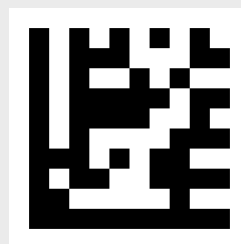 

Odd Parity

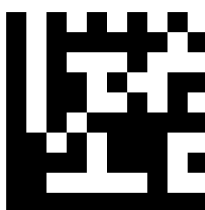 

Even Parity

4.8 Serial Stop Bits

 




Start Setup



* One Stop Bit

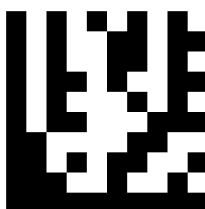


Two Stop Bits

5 Keyboard Settings


Important

On this page, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

 
5.1 International Keyboard

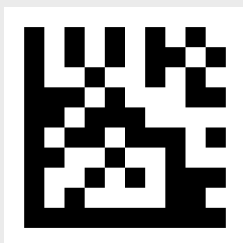


* US

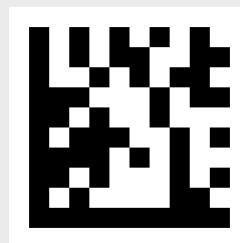 

Belgium

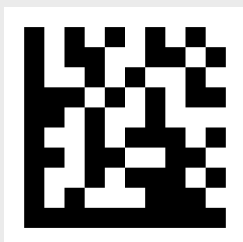 

United Kingdom

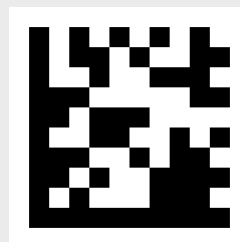 


Denmark






 
Start Setup

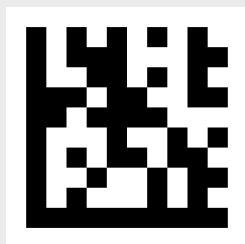


France

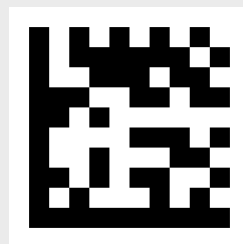 


Germany

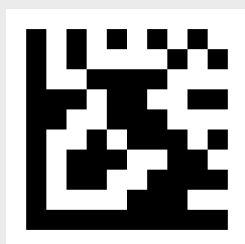 


Italy

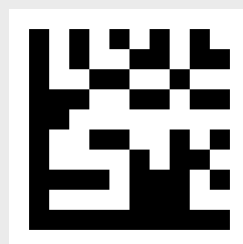 


Norway

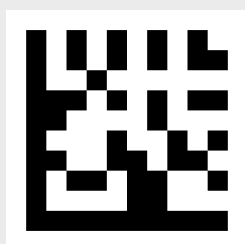 


Portugal

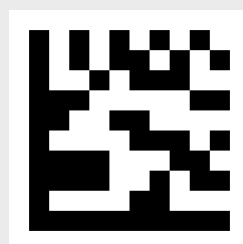 

Spain

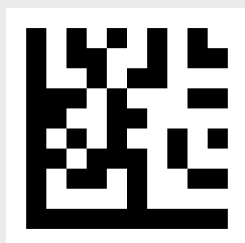 

Sweden

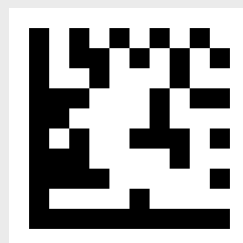 


Switzerland






 
Start Setup

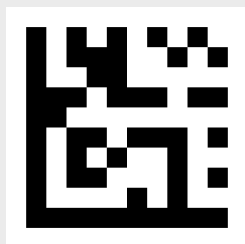


Japan

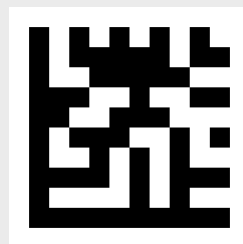 


Hungary

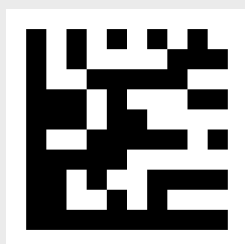 


Czech Republic

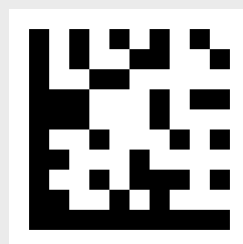 


Slovakia

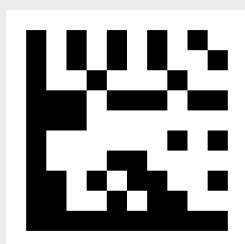 


Romania

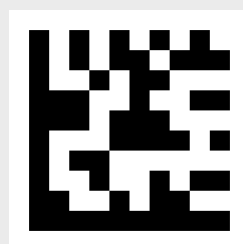 

Croatia

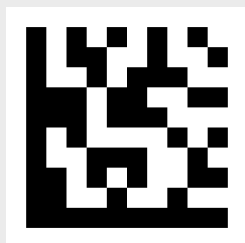 

Poland

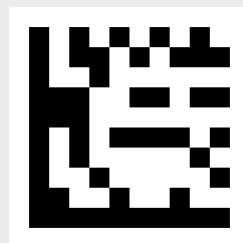 


Turkey Q






 
Start Setup

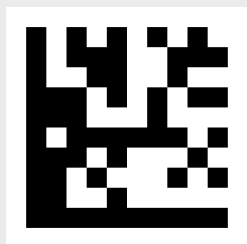

Brazil

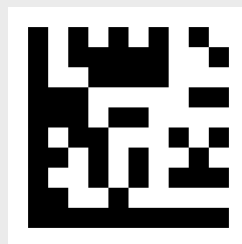 


Russia

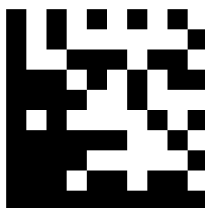 


Bulgaria

5.2 QR Keyboard Output

 GB2312 Simplified Chinese

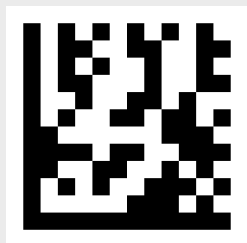


* Notepad, Excel

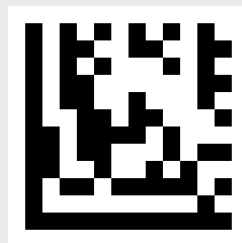 


Word Output

 Multilingual Generic Output (requires plugin settings)

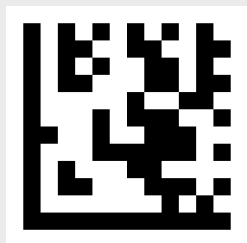

UTF-8 - Multilingual Generic Output

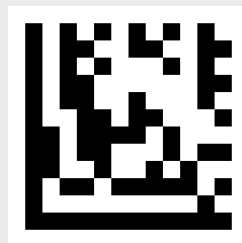 


Code Page / Word Output






Start Setup

 
5.3 UTF-8 QR Keyboard Output

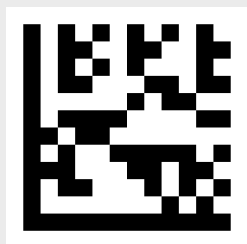


Thailand

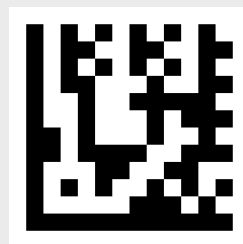 


Russia

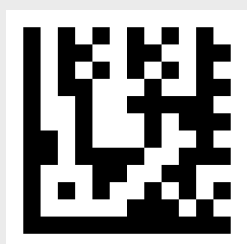 


Bulgaria

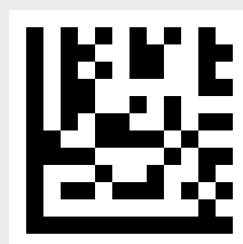 


Turkey

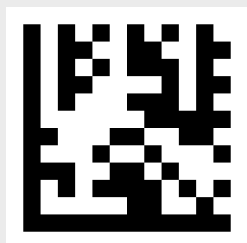 


Brazil

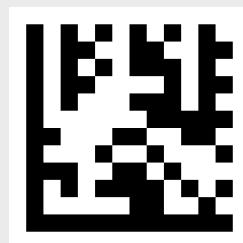 

Germany

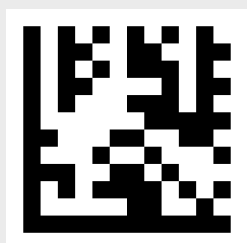 

France

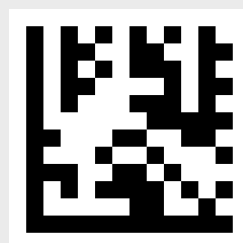 


Italy






 
Start Setup

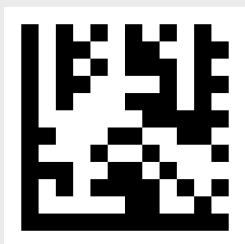


Spain

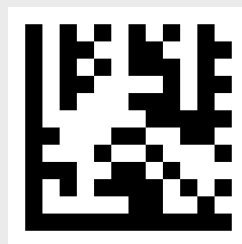 

Portugal

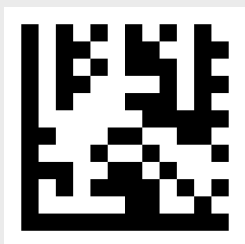 


Malaysia

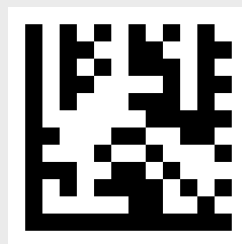 


Indonesia

 
5.4 Letter Case Conversion

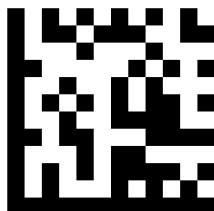

* Disable

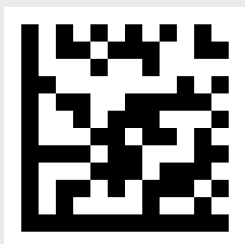 

Convert to Uppercase

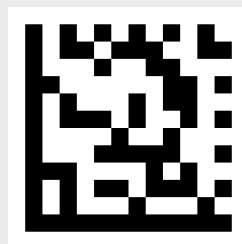 


Convert to Lowercase

5.5 Caps Lock






 Start Setup

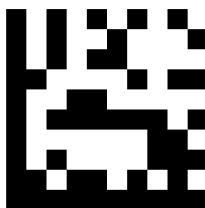

* Disable Caps Lock

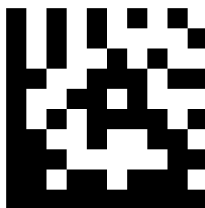 

Enable Caps Lock

5.6 GS Character Conversion

Convert the GS character in keyboard mode to another ASCII code.

Example: Convert the GS character to #.

1. Scan “Start Setup” .
2. Scan the “Convert GS Character” setting barcode.
3. Scan the # setting barcode in *ASCII Code Table*.
4. Scan “End Setup” .

Example: Convert the GS character to Enter.

1. Scan “Start Setup” .
2. Scan the “Convert GS Character” setting barcode.
3. Scan the Enter setting barcode in *ASCII Code Table*.
4. Scan “End Setup” .

 
Example: Restore the default GS character setting.

1. Scan “Start Setup” .
2. Scan the “Disable GS Character Conversion” setting barcode.
3. Scan “End Setup” .





Start Setup

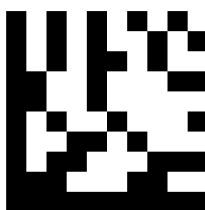


* Disable GS Character Conversion




Convert GS Character

 5.7 Function Key Mapping

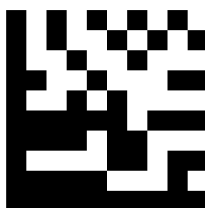

Disable

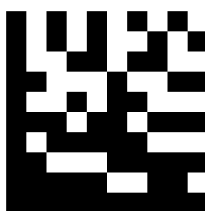 

* Enable



* Ctrl Char Mode





Start Setup



Alt + Unicode Mode

6 Data Editing

Important

On this page, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

6.1 Output format

The following is the data output format.

Field	Length / Description
Barcode Information	4 bytes
Prefix	4 bytes
AIM ID	•
Barcode Data	•
Suffix	4 bytes
Terminator	1 byte

6.2 Barcode Information

Important

For this procedure, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

1. By default, barcode information is not output.
2. Use a serial command or scan a setting barcode to enable or disable barcode information output.



**Warning**

This function is supported only in serial mode and is not supported in USB keyboard mode.

The format is defined as follows:

Field	Length / Description
Start Flag	0x03 (1 byte)
Barcode Symbology Code	1 byte, hexadecimal
Barcode Length	2 bytes, range 0x0001 ~ 0xFFFF

 
Barcode symbology codes are as follows:

Code	Barcode Type
0x41	PDF417
0x42	Micro PDF417
0x43	Data Matrix
0x44	QR Code
0x45	Micro QR
0x46	Aztec
0x47	MaxiCode
0x61	UPC-A
0x62	UPC-E
0x63	EAN-8
0x64	EAN-13
0x65	Code 128
0x66	Code 39
0x67	Code 93
0x68	Code 32
0x69	Code 11
0x6A	Codabar
0x6B	Plessey
0x6C	MSI Plessey
0x6D	Interleaved 2 of 5
0x6E	IATA 2 of 5
0x6F	Matrix 2 of 5
0x70	Straight 2 of 5
0x71	Pharmacode
0x72	GS1 DataBar 14
0x73	GS1 DataBar Expanded
0x74	GS1 DataBar Limited
0x75	Composite Code-A
0x76	Composite Code-B
0x77	Composite Code-C





Start Setup

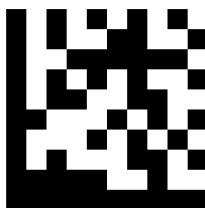

* Disable



Enable

6.3 Prefix

Important

For this procedure, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

Add output characters before barcode data. Up to 4 characters can be set.

Example: Add the character a before all barcode data

1. Scan “Start Setup” .
2. Scan the “Set Prefix for All Symbologies” setting barcode.
3. Scan the _a setting barcode in *ASCII Code Table*.
4. Scan “End Setup” .

Example: Remove the prefix

1. Scan “Start Setup” .
2. Scan the “Disable Prefix for All Symbologies” setting barcode.
3. Scan “End Setup” .

Example: Add the characters &13 before EAN-13 barcode data

1. Scan “Start Setup” .
2. Scan the “Set EAN-13 Prefix” setting barcode.



 


Start Setup


3. Scan the & setting barcode in *ASCII Code Table*.
4. Scan the 1 setting barcode in *ASCII Code Table*.
5. Scan the 3 setting barcode in *ASCII Code Table*.
6. Scan “End Setup” .

i Example: Remove the EAN-13 prefix


1. Scan “Start Setup” .
2. Scan the “Disable EAN-13 Prefix” setting barcode.
3. Scan “End Setup” .

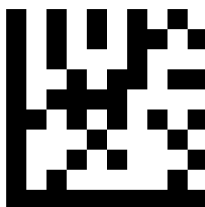

* Disable Prefix for All Symbolologies

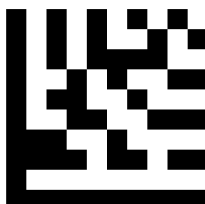 

Set Prefix for All Symbolologies

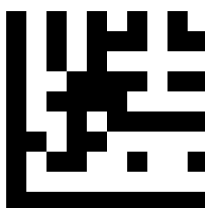 


Set UPC-A Prefix





 
Start Setup

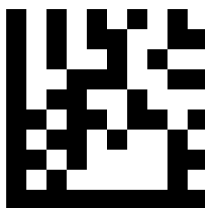


Disable UPC-A Prefix



 
Set UPC-E Prefix

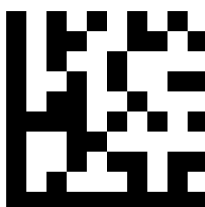

Disable UPC-E Prefix

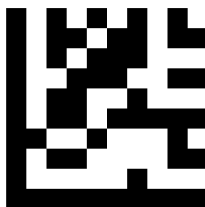 

Set EAN-8 Prefix

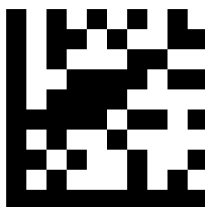 


Disable EAN-8 Prefix






 
Start Setup

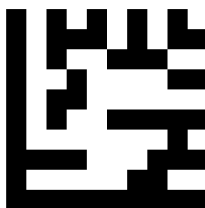


Set EAN-13 Prefix

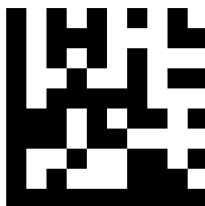 

Disable EAN-13 Prefix

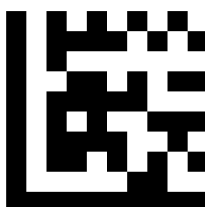 

Set Code 128 Prefix

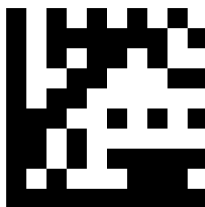 

Disable Code 128 Prefix

 


Set Code 39 Prefix







Start Setup

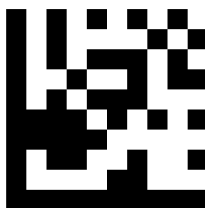

Disable Code 39 Prefix

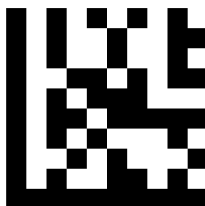 


Set Code 93 Prefix

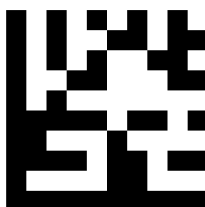 

Disable Code 93 Prefix



 Set Code 32 Prefix

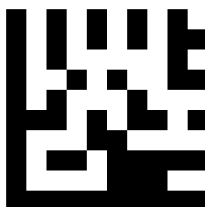


Disable Code 32 Prefix






 
Start Setup

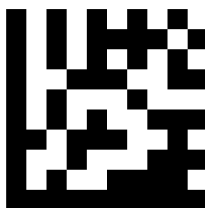


Set Code 11 Prefix

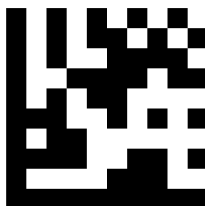 


Disable Code 11 Prefix

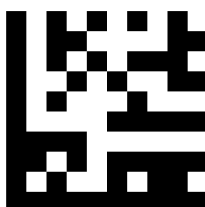 

Set Codabar Prefix

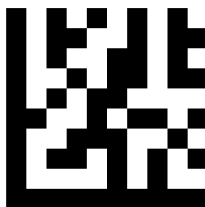 

Disable Codabar Prefix

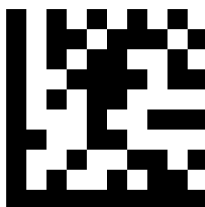 


Set Plessey Prefix






 
Start Setup

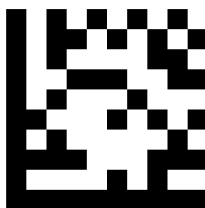


Disable Plessey Prefix

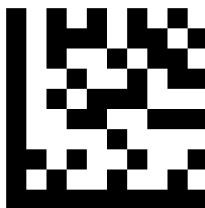 


Set MSI Plessey Prefix

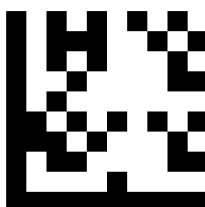 

Disable MSI Plessey Prefix

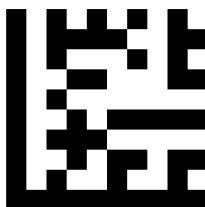 

Set Interleaved 2 of 5 Prefix

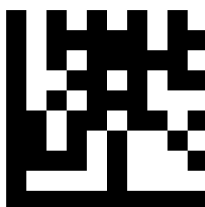 


Disable Interleaved 2 of 5 Prefix






 Start Setup

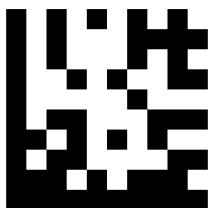


Set IATA 2 of 5 Prefix

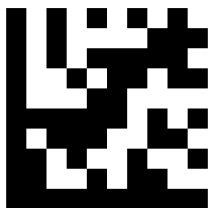 


Disable IATA 2 of 5 Prefix



 Set Matrix 2 of 5 Prefix

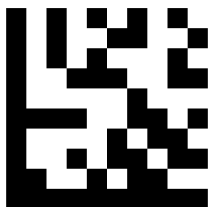

Disable Matrix 2 of 5 Prefix

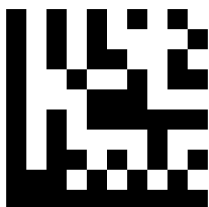 

Set Straight 2 of 5 Prefix

 





Start Setup




Disable Straight 2 of 5 Prefix

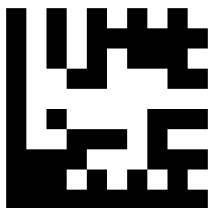


Set Pharmacode Prefix

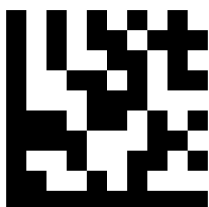 

Disable Pharmacode Prefix

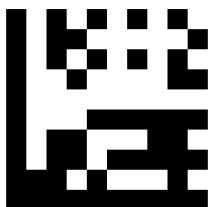 

Set GS1 DataBar 14 Prefix

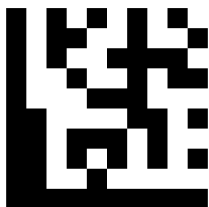 

Disable GS1 DataBar 14 Prefix

 





Start Setup




Set GS1 DataBar Expanded Prefix

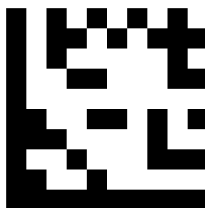


Disable GS1 DataBar Expanded Prefix

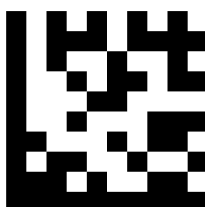 

Set GS1 DataBar Limited Prefix

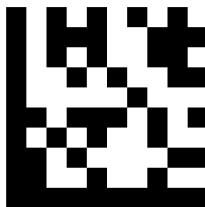 

Disable GS1 DataBar Limited Prefix

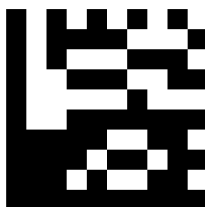 


Set Composite Code A Prefix






 
Start Setup

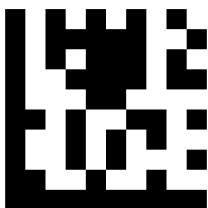


Disable Composite Code A Prefix

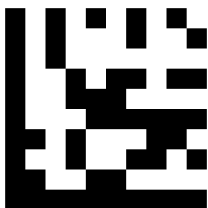 


Set Composite Code B Prefix

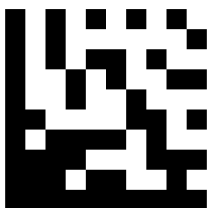 

Disable Composite Code B Prefix

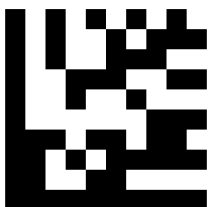 

Set Composite Code C Prefix

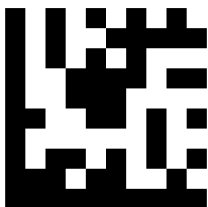 

Disable Composite Code C Prefix





 
Start Setup




Set PDF417 Prefix




Disable PDF417 Prefix

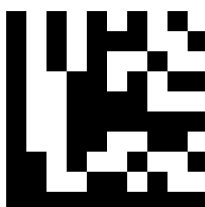

Set Micro PDF417 Prefix

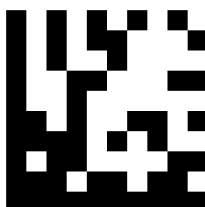 

Disable Micro PDF417 Prefix

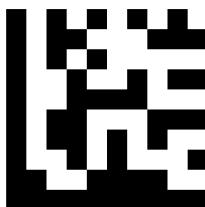 


Set Data Matrix Prefix






 
Start Setup

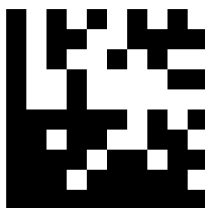


Disable Data Matrix Prefix

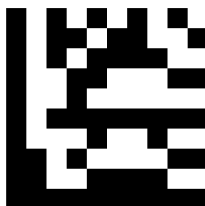 


Set QR Code Prefix

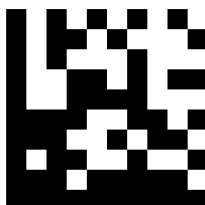 

Disable QR Code Prefix

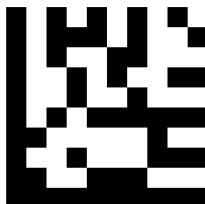 

Set Micro QR Prefix

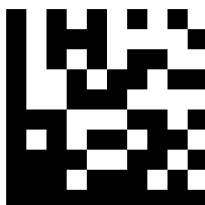 


Disable Micro QR Prefix






 
Start Setup

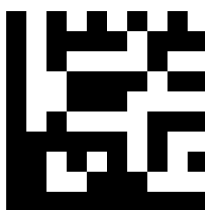


Set Aztec Prefix

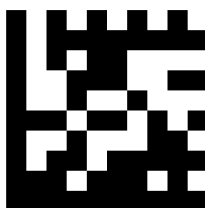 

Disable Aztec Prefix

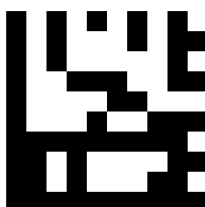 

Set MaxiCode Prefix

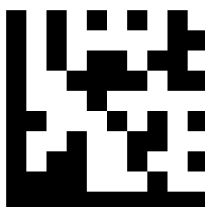 

Disable MaxiCode Prefix

6.4 Suffix

Add output characters after barcode data. Up to 4 characters can be set.

Example: Add the character a after all barcode data

1. Scan “Start Setup” .
2. Scan the “Set All SymbolologiesSuffix” setting barcode.
3. Scan the a setting barcode in *ASCII Code Table*.
4. Scan “End Setup” .



**i Example: Remove the suffix**

1. Scan “Start Setup” .
2. Scan the “Disable All SymbolologiesSuffix” setting barcode.
3. Scan “End Setup” .

i Example: Add the characters &13 after EAN-13 barcode data

1. Scan “Start Setup” .
2. Scan the “Set EAN-13 Suffix” setting barcode.
3. Scan the & setting barcode in *ASCII Code Table*.
4. Scan the 1 setting barcode in *ASCII Code Table*.
5. Scan the 3 setting barcode in *ASCII Code Table*.
6. Scan “End Setup” .

i Example: Remove the EAN-13 suffix

1. Scan “Start Setup” .
2. Scan the “Disable EAN-13 Suffix” setting barcode.
3. Scan “End Setup” .

i Note

The source document does not provide extractable suffix setting barcode images for this section. The suffix options are listed below for now and can be restored to scannable items after the missing images are added.

Applicable Symbology	Setting Item	Disable Item
All Symbologies	Set Suffix for All Symbologies	* Disable Suffix for All Symbologies
UPC-A	Set UPC-A Suffix	Disable UPC-A Suffix
UPC-E	Set UPC-E Suffix	Disable UPC-E Suffix
EAN-8	Set EAN-8 Suffix	Disable EAN-8 Suffix
EAN-13	Set EAN-13 Suffix	Disable EAN-13 Suffix
Code 128	Set Code 128 Suffix	Disable Code 128 Suffix
Code 39	Set Code 39 Suffix	Disable Code 39 Suffix
Code 93	Set Code 93 Suffix	Disable Code 93 Suffix
Code 32	Set Code 32 Suffix	Disable Code 32 Suffix

continues on next page





Table 2 – continued from previous page

 
Applicable Symbology	Setting Item	Disable Item
Code 11	Set Code 11 Suffix	Disable Code 11 Suffix
Codabar	Set Codabar Suffix	Disable Codabar Suffix
Plessey	Set Plessey Suffix	Disable Plessey Suffix
MSI Plessey	Set MSI Plessey Suffix	Disable MSI Plessey Suffix
Interleaved 2 of 5	Set Interleaved 2 of 5 Suffix	Disable Interleaved 2 of 5 Suffix
IATA 2 of 5	Set IATA 2 of 5 Suffix	Disable IATA 2 of 5 Suffix
Matrix 2 of 5	Set Matrix 2 of 5 Suffix	Disable Matrix 2 of 5 Suffix
Straight 2 of 5	Set Straight 2 of 5 Suffix	Disable Straight 2 of 5 Suffix
Pharmacode	Set Pharmacode Suffix	Disable Pharmacode Suffix
GS1 DataBar 14	Set GS1 DataBar 14 Suffix	Disable GS1 DataBar 14 Suffix
GS1 DataBar Expanded	Set GS1 DataBar Expanded Suffix	Disable GS1 DataBar Expanded Suffix
GS1 DataBar Limited	Set GS1 DataBar Limited Suffix	Disable GS1 DataBar Limited Suffix
Composite Code A	Set Composite Code A Suffix	Disable Composite Code A Suffix
Composite Code B	Set Composite Code B Suffix	Disable Composite Code B Suffix
Composite Code C	Set Composite Code C Suffix	Disable Composite Code C Suffix
PDF417	Set PDF417 Suffix	Disable PDF417 Suffix
Micro PDF417	Set Micro PDF417 Suffix	Disable Micro PDF417 Suffix
Data Matrix	Set Data Matrix Suffix	Disable Data Matrix Suffix
QR Code	Set QR Code Suffix	Disable QR Code Suffix
Micro QR	Set Micro QR Suffix	Disable Micro QR Suffix
Aztec	Set Aztec Suffix	Disable Aztec Suffix
MaxiCode	Set MaxiCode Suffix	Disable MaxiCode Suffix

6.5 Barcode Identifier


Important

For this procedure, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.




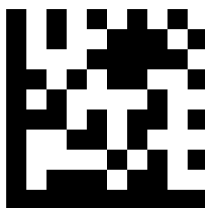

* Disable Barcode Identifier

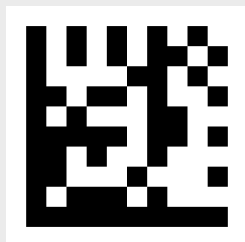 

Enable AIM Barcode Identifier

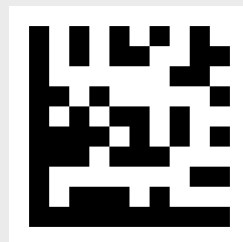 

Enable NETUM Barcode Identifier

Barcode Identifier Table

Symbology	NETUM	AIM
UPC-A	A	E
UPC-E	E	E
EAN-8	FF	E
EAN-13	F	E
Code 128	K	C
Code 39	M	A
Code 93	L	G
Code 32	M	A
Code 11	O	H
Codabar	N	F
Plessey	P	P
MSI / Plessey	a	M
Interleaved 2 of 5	I	I
IATA 2 of 5	Z	R
Matrix 2 of 5	G	X
Straight 2 of 5	S	S
Pharmacode	H	X
GS1 DataBar 14	RS	e
GS1 DataBar Expanded	RX	e
GS1 DataBar Limited	RL	e
Composite CC-A	m	e
Composite CC-B	n	e
Composite CC-C	i	e
PDF417	r	L
Micro PDF417	s	L
Data Matrix	t	d

continues on next page





Start Setup


Table 3 – continued from previous page

Symbology	NETUM	AIM
QR Code	u	Q
Micro QR	j	Q
Aztec	e	Z
MaxiCode	v	U


6.6 Terminator

Important

 
For this procedure, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

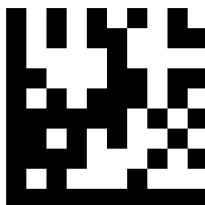


none

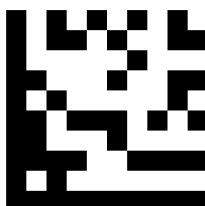 

* Carriage Return / CR

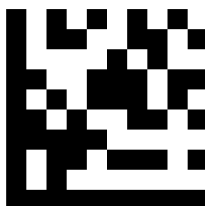 

CR / LF

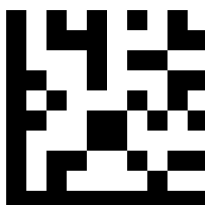 

TAB





7 Barcode Settings

Important

On this page, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

7.1 Supported Symbolologies

Symbolology	Status
UPC-A	* Enable
UPC-E	* Enable
EAN-8	* Enable
EAN-13	* Enable
Code 128 / GS1-128	* Enable
Code 39	* Enable
Code 93	* Enable
Code 32	Disable
Code 11	Disable
Codabar	* Enable
Plessey	Disable
MSI Plessey	* Enable
Interleaved 2 of 5	* Enable
IATA 2 of 5	Disable
Matrix 2 of 5	Disable
Straight 2 of 5	Disable
Pharmacode	Disable
GS1 DataBar 14	* Enable
GS1 DataBar 14 Stacked	Disable
GS1 DataBar Expanded	* Enable
GS1 DataBar Expanded Stacked	Disable
GS1 DataBar Limited	* Enable
Composite Code-A	Disable
Composite Code-B	Disable
Composite Code-C	Disable
PDF417	* Enable
MicroPDF417	* Enable
Data Matrix	* Enable
QR Code	* Enable
Micro QR	* Enable
Aztec	Disable
MaxiCode	Disable

7.2 General Symbology Switches



 


Start Setup

Important


For settings in this group, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

Enable All Barcodes

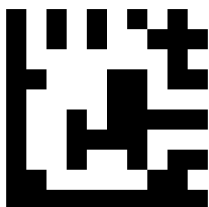


Enable All Barcodes

 Enable 1D Barcodes Only

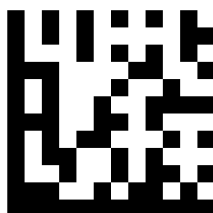

Enable 1D Barcodes Only

 Enable 2D Barcodes Only

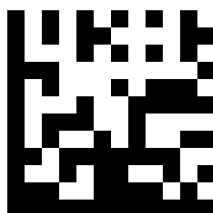

Enable 2D Barcodes Only

7.3 1D Symbology Settings

Important

 
For settings in this group, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

UPC-A






Start Setup

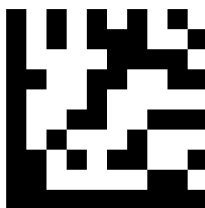


* Enable UPC-A



 Disable UPC-A

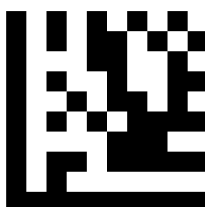

* Transmit Leading Digit

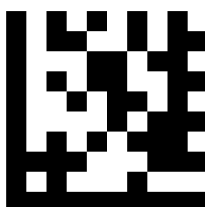 

Do Not Transmit Leading Digit

 


* Enable Check Digit







Start Setup

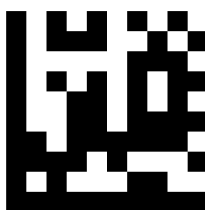


Disable Check Digit

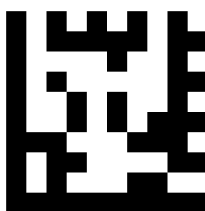 


Enable EAN-13 Conversion

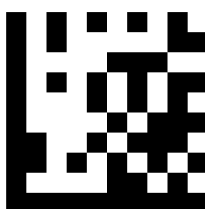 

* Disable EAN-13 Conversion

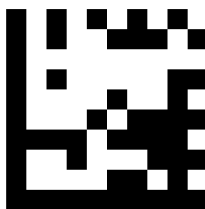 

Enable UPC-A 2/5-digit Addenda

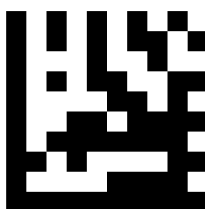 


* Disable UPC-A 2/5-digit Addenda






 Start Setup

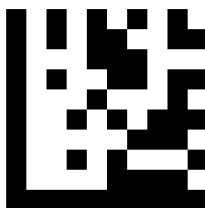


Read Only UPC-A 2/5-digit Addenda

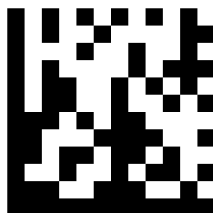 


* Read UPC-A and UPC-A 2/5-digit Addenda

 
UPC-E

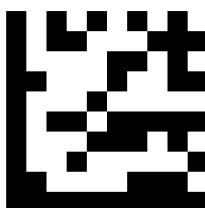

* Enable UPC-E

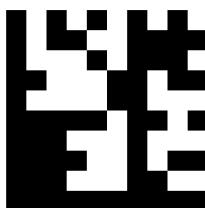 

Disable UPC-A

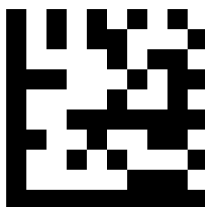 


* Transmit Leading Digit






 
Start Setup

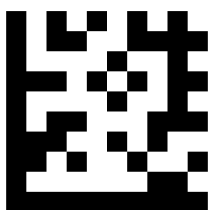


Do Not Transmit Leading Digit

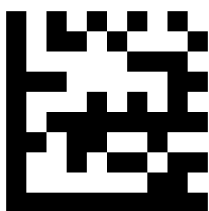 


* Enable Check Digit

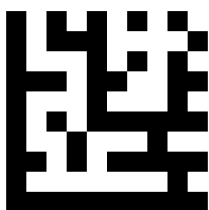 

Disable Check Digit

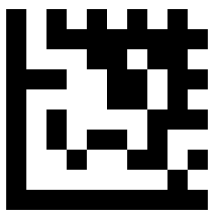 

Enable UPC-A Conversion

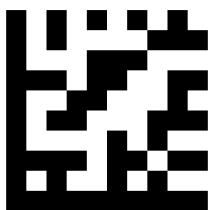 


* Disable UPC-A Conversion






 
Start Setup

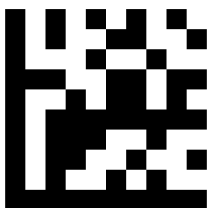

Enable UPC-E 2/5-digit Addenda

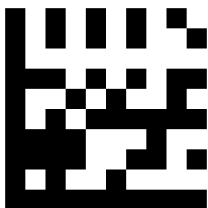 

* Disable UPC-E 2/5-digit Addenda

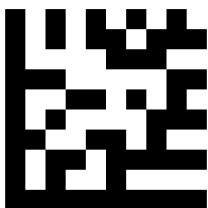 


Read Only UPC-E 2/5-digit Addenda



* Read UPC-E and UPC-E 2/5-digit Addenda

 EAN-8

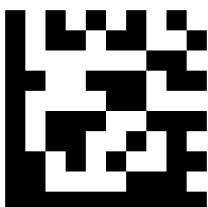


* Enable EAN-8






 
Start Setup

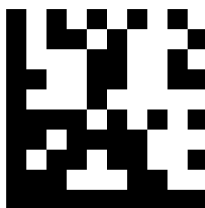


Disable EAN-8

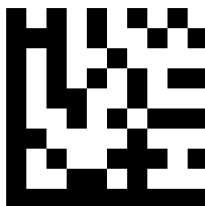 


* Transmit Check Digit

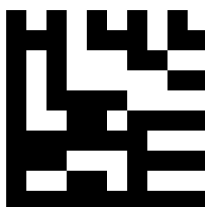 

Do Not Transmit Check Digit

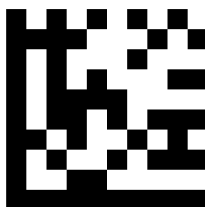 

Enable EAN-13 Conversion

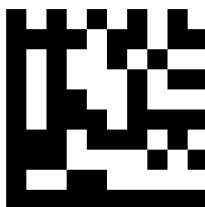 


* Disable EAN-13 Conversion






 
Start Setup

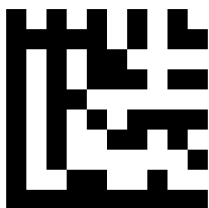


Enable EAN-8 2/5-digit Addenda

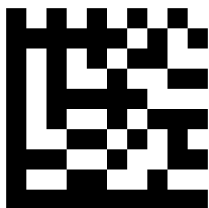 

* Disable EAN-8 2/5-digit Addenda

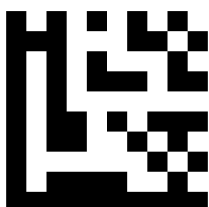 


Read Only EAN-8 2/5-digit Addenda

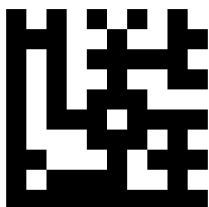 

* Read EAN-8 and EAN-8 2/5-digit Addenda

 EAN-13

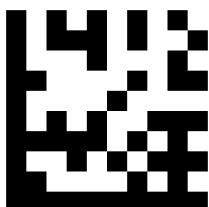


* Enable EAN-13






 Start Setup

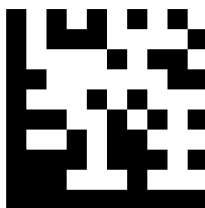

Disable EAN-13

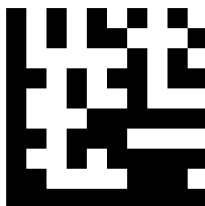 


* Transmit Check Digit



Do Not Transmit Check Digit



 Enable ISBN Conversion

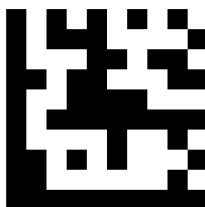


* Disable ISBN Conversion






 
Start Setup

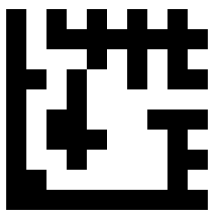


Enable ISSN Conversion

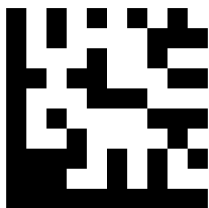 


* Disable ISSN Conversion

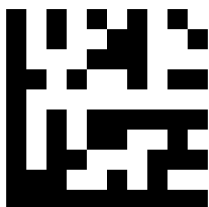 

Enable EAN-13 2/5-digit Addenda

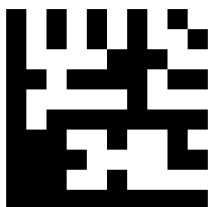 

* Disable EAN-13 2/5-digit Addenda

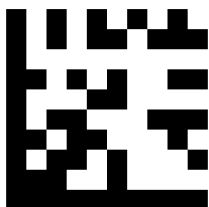 


Read Only EAN-13 2/5-digit Addenda






 Start Setup

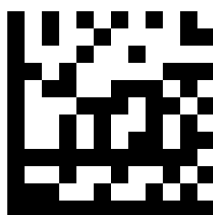


* Read EAN-13 and EAN-13 2/5-digit Addenda

 Code 128 / GS1-128

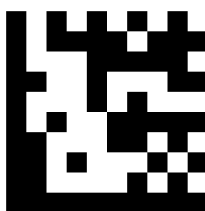


* Enable Code 128 / GS1-128

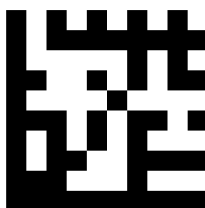 


Disable Code 128 / GS1-128

 Code 39

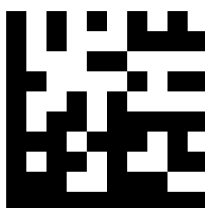

* Enable Code 39

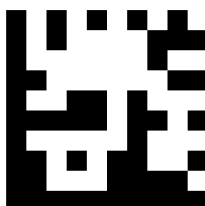 


Disable Code 39






 
Start Setup

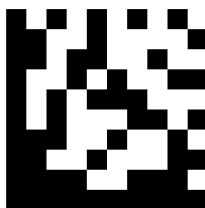


Enable Code 39 Full ASCII Function

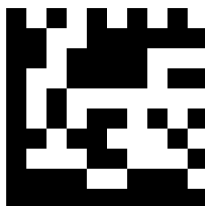 

* Disable Code 39 Full ASCII Function

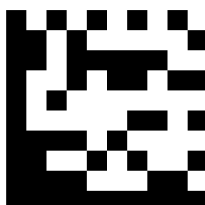 

Transmit Start/Stop Characters

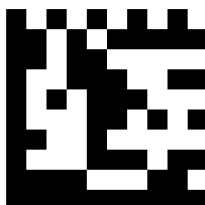 


* Do Not Transmit Start/Stop Characters






 
Start Setup

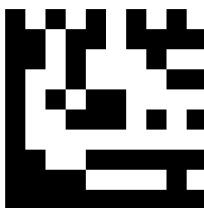

* No Verification

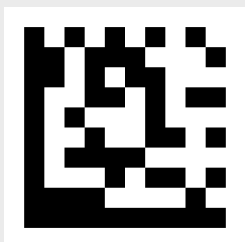 


Verify and Transmit

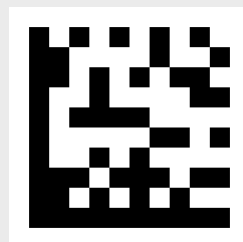 


Verify Without Transmitting

 Code 93

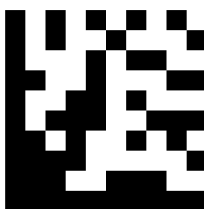


Enable Code 93

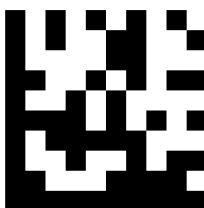 

* Disable Code 93

 Code 32

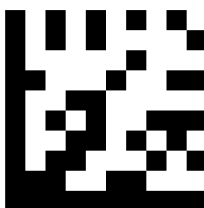


Enable Code 32






 Start Setup

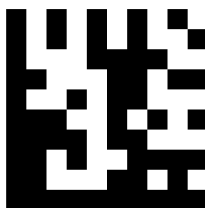


* Disable Code 32

 
Code 11

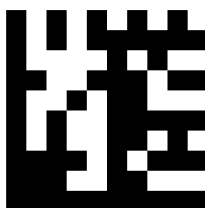


Enable Code 11

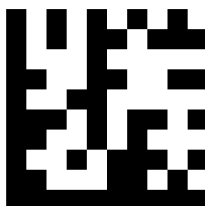 

* Disable Code 11

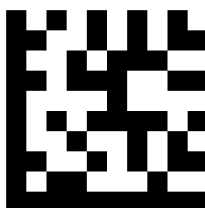 

* Transmit Check Digit

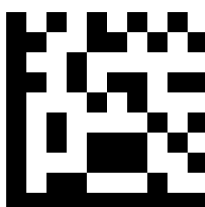 


Do Not Transmit Check Digit






Start Setup

 
Codabar

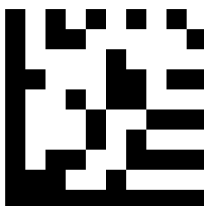


* Enable Codabar

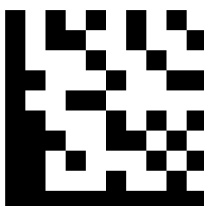 


Disable Codabar

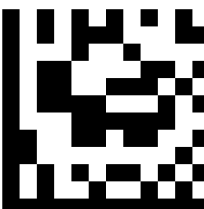 


* No Verification

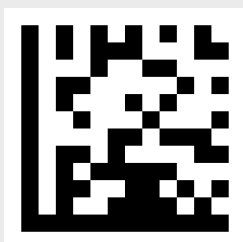 

Verify and Transmit

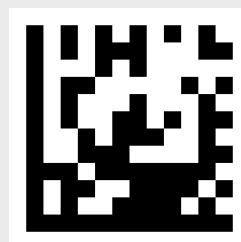 

Verify Without Transmitting

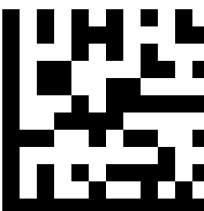 


Transmit Start/Stop Characters






 Start Setup

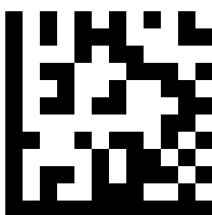


* Do Not Transmit Start/Stop Characters

 Plessey

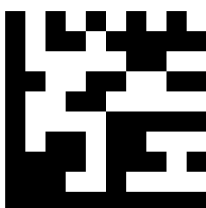


Enable Plessey

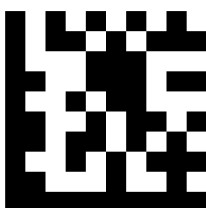 


* Disable Plessey

 MSI Plessey

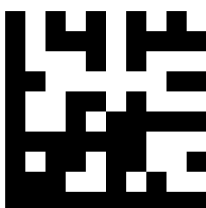

* Enable MSI Plessey

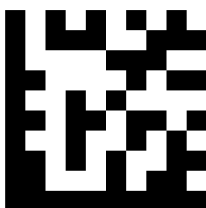 


Disable MSI Plessey





 
Start Setup

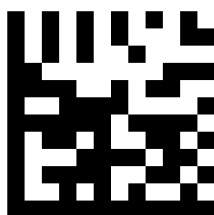


No Verification



 
* Mod 10 Verification

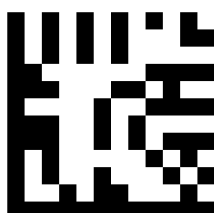

Mod 10/10 Verification

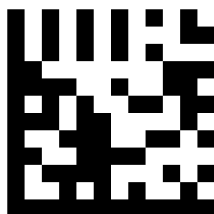 

Mod 11/10 Verification

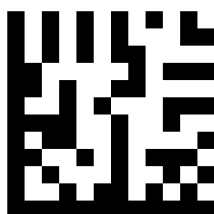 


* Transmit Check Digit






 Start Setup

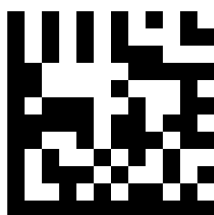


Do Not Transmit Check Digit

 
Interleaved 2 of 5

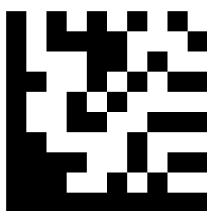


* Enable Interleaved 2 of 5

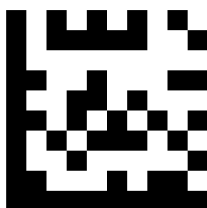 

Disable Interleaved 2 of 5

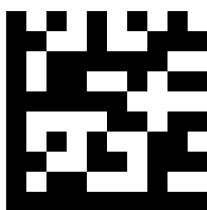 

* No Verification

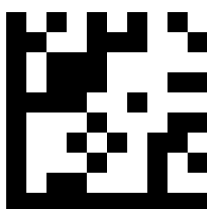 


Verify and Transmit






Start Setup

 IATA 2 of 5

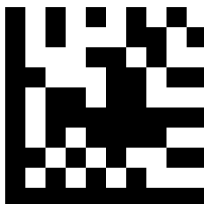


Enable IATA 2 of 5

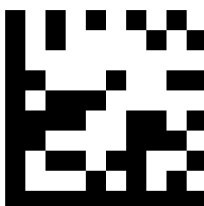 


* Disable IATA 2 of 5

 Matrix 2 of 5

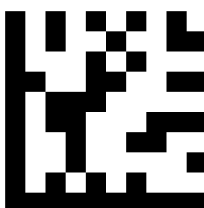

Enable Matrix 2 of 5

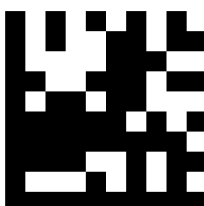 

* Disable Matrix 2 of 5

Straight 2 of 5

 


Enable Straight 2 of 5






Start Setup

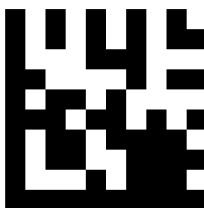


* Disable Straight 2 of 5

 Pharmacode

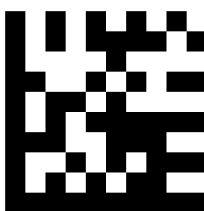


Enable Pharmacode

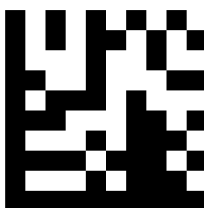 


* Disable Pharmacode

 GS1 DataBar 14

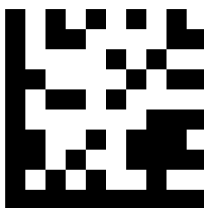

* Enable GS1 DataBar 14

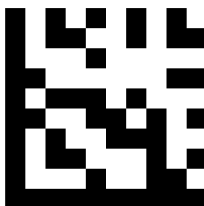 

Disable GS1 DataBar 14

 





Start Setup



Enable GS1 DataBar 14 Stacked

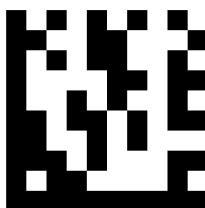

* Disable GS1 DataBar 14 Stacked

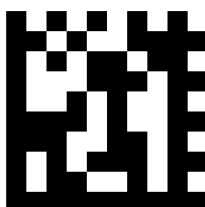 


* Output AI (01) Characters



Do Not Output AI (01) Characters

 GS1 DataBar Expanded

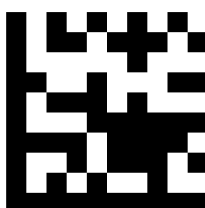


* Enable GS1 DataBar Expanded






 
Start Setup

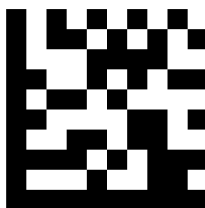

Disable GS1 DataBar Expanded

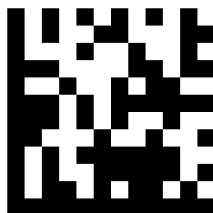 

Enable GS1 DataBar Expanded Stacked

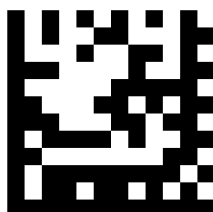 

* Disable GS1 DataBar Expanded Stacked

 


* Output AI (01) Characters






Start Setup

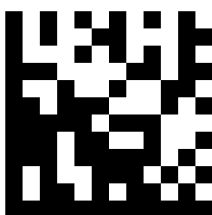


Do Not Output AI (01) Characters

 
GS1 DataBar Limited

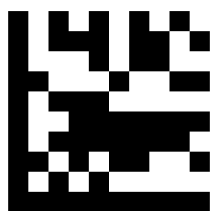


* Enable GS1 DataBar Limited

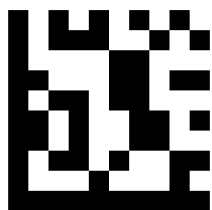 

Disable GS1 DataBar Limited

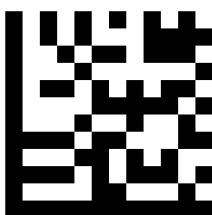 

* Output AI (01) Characters

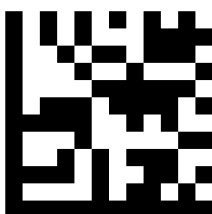 

Do Not Output AI (01) Characters





 
Start Setup

7.4 2D and Composite Code Settings


Important

For settings in this group, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

Composite Code-A

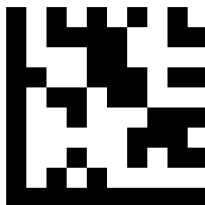


Enable Composite Code-A

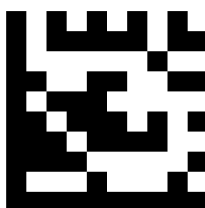 


* Disable Composite Code-A

 Composite Code-B

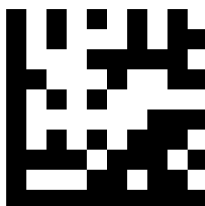

Enable Composite Code-B

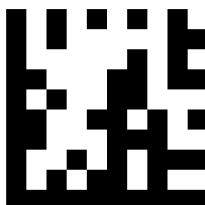 


* Disable Composite Code-B






Start Setup

 Composite Code-C

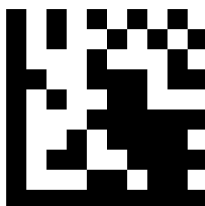

Enable Composite Code-C

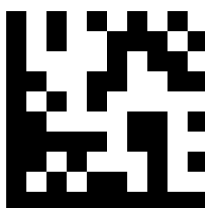 

* Disable Composite Code-C

PDF417



* Enable PDF417



Disable PDF417

Micro PDF417

 




Start Setup




* Enable MicroPDF417

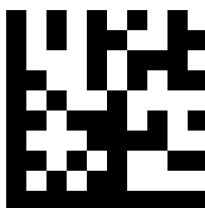

Disable Micro PDF417

 
Data Matrix

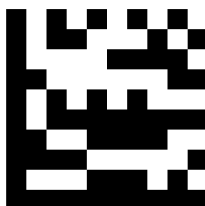

* Enable Data Matrix



 Disable Data Matrix

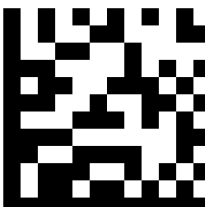


* Enable Mirror Decode






 
Start Setup

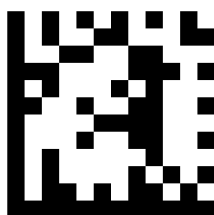

Disable Mirror Decode

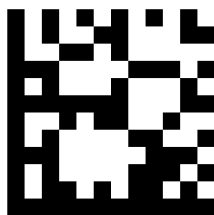 


* Enable Rectangular Data Matrix

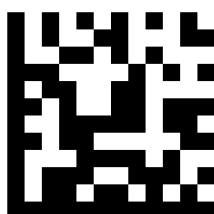 


Disable Rectangular Data Matrix

 QR Code

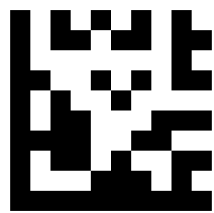

* Enable QR Code

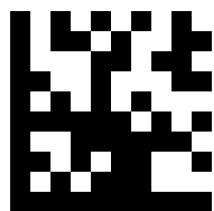 


Disable QR Code






 Start Setup

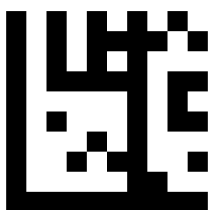


* Enable Mirror Decode

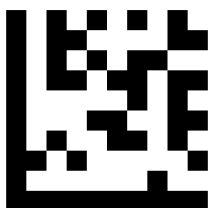 


Disable Mirror Decode

 Micro QR

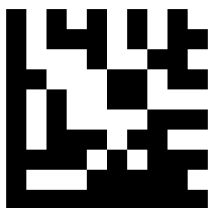


* Enable Micro QR

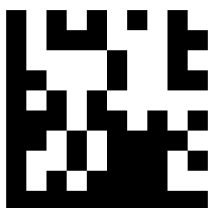 

Disable Micro QR

 Aztec

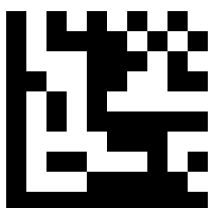


Enable Aztec





 
Start Setup

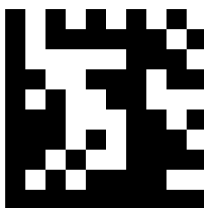

* Disable Aztec




 * Enable Mirror Decode

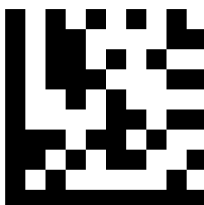

Disable Mirror Decode

 MaxiCode

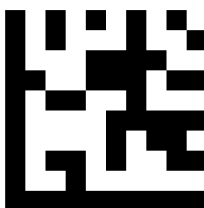

Enable MaxiCode



* Disable MaxiCode





7.5 Decode Length Settings

Important

For settings in this group, perform settings in the order: Start Setup -> Function Setting Barcode -> End Setup.

The following settings limit the readable length for each symbology; Code 128 is used as the example.

Restrict to a Single Length

Restrict reading to barcodes of a single length. For example, set Code 128 to read only barcodes with a length of 14 characters.

Example

1. Scan “Start Setup” .
2. Scan the Code 128 “Restrict to a Single Length” setting barcode.
3. Scan the 1 setting barcode in *ASCII Code Table*.
4. Scan the 4 setting barcode in *ASCII Code Table*.
5. Scan “End Setup” .

Restrict to Two Different Lengths

Restrict reading to barcodes of two different lengths. For example, set Code 128 to read barcodes with lengths of 2 and 14 characters.

Example

1. Scan “Start Setup” .
2. Scan the Code 128 “Restrict to Two Different Lengths” setting barcode.
3. Scan the 0 setting barcode in *ASCII Code Table*.
4. Scan the 2 setting barcode in *ASCII Code Table*.
5. Scan the 1 setting barcode in *ASCII Code Table*.
6. Scan the 4 setting barcode in *ASCII Code Table*.
7. Scan “End Setup” .

Restrict to a Length Range

Restrict reading to barcodes within a length range. For example, set Code 128 to read barcodes with lengths from 08~14 characters.





Start Setup

Example


1. Scan “Start Setup” .
2. Scan the Code 128 “Restrict to a Length Range” setting barcode.
3. Scan the 0 setting barcode in *ASCII Code Table*.
4. Scan the 8 setting barcode in *ASCII Code Table*.
5. Scan the 1 setting barcode in *ASCII Code Table*.
6. Scan the 4 setting barcode in *ASCII Code Table*.
7. Scan “End Setup” .

any length


Example

1. Scan “Start Setup” .
2. Scan the Code 128 “Any Length” setting barcode.
3. Scan “End Setup” .

 
Code 128

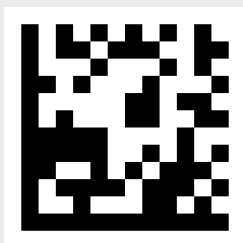


Restrict to a Single Length

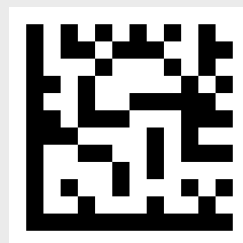 

Restrict to Two Different Lengths

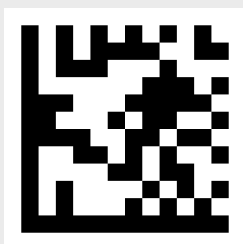 

Restrict to a Length Range

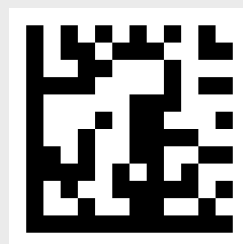 


* Any Length






Start Setup

 
Code 39

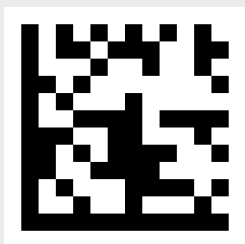


Restrict to a Single Length

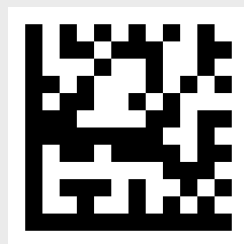 

Restrict to Two Different Lengths

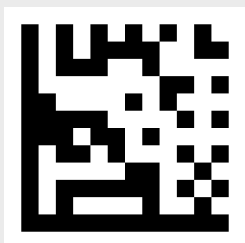 


Restrict to a Length Range

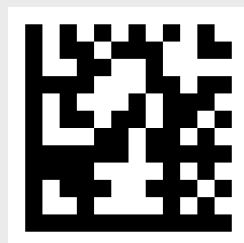 


* Any Length

 
Code 93

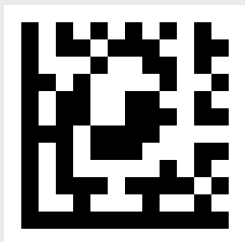


Restrict to a Single Length

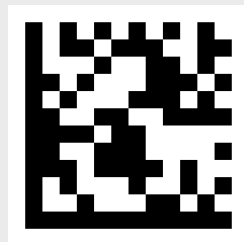 

Restrict to Two Different Lengths

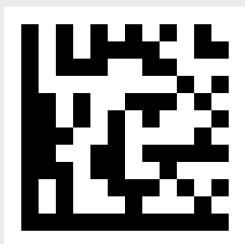 

Restrict to a Length Range

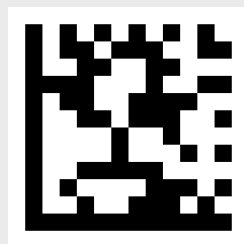 


* Any Length






Start Setup

 
Codabar

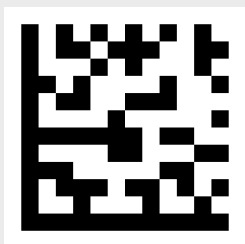


Restrict to a Single Length

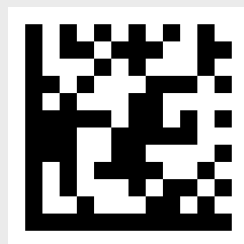 

Restrict to Two Different Lengths

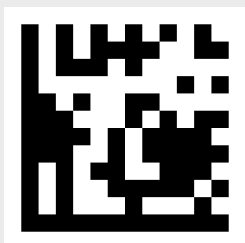 


Restrict to a Length Range

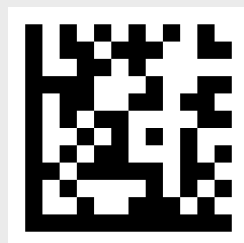 


* Any Length

 
Interleaved 2 of 5

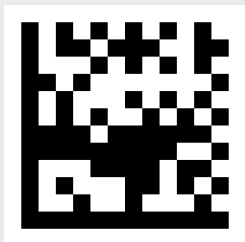


Restrict to a Single Length

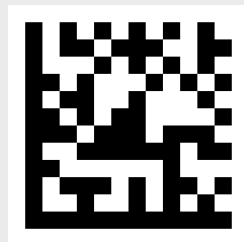 

Restrict to Two Different Lengths

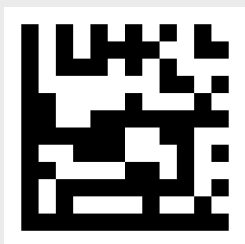 

Restrict to a Length Range

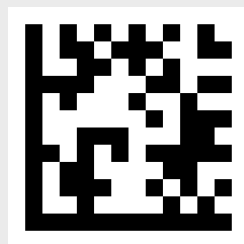 


* Any Length






Start Setup

 
Code 11

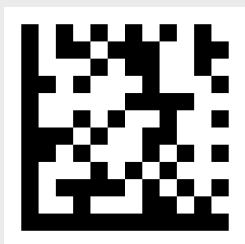


Restrict to a Single Length

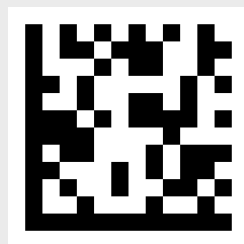 

Restrict to Two Different Lengths

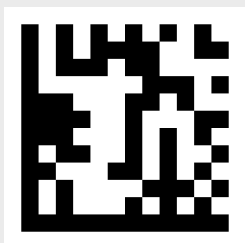 


Restrict to a Length Range

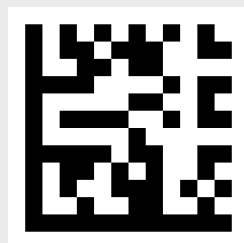 


* Any Length

 
MSI Plessey

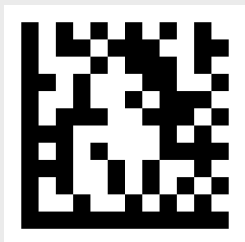


Restrict to a Single Length

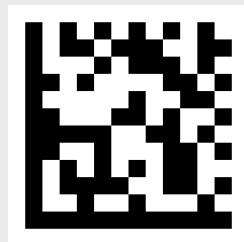 

Restrict to Two Different Lengths

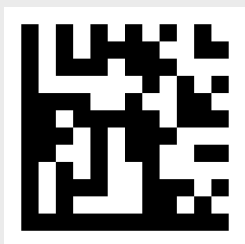 

Restrict to a Length Range

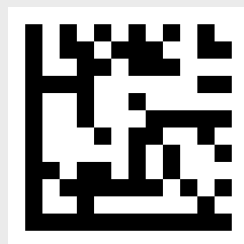 


* Any Length






Start Setup

 
Matrix 2 of 5

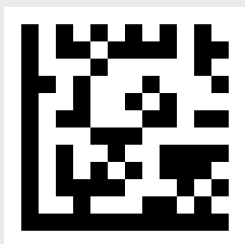


Restrict to a Single Length

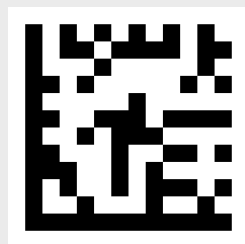 

Restrict to Two Different Lengths

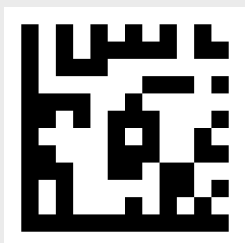 

Restrict to a Length Range

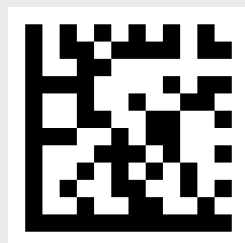 











* Any Length





8 Appendix

          8.1 Decimal Digits

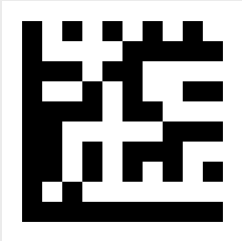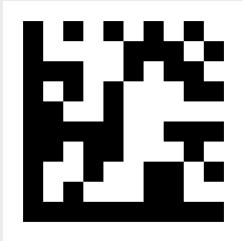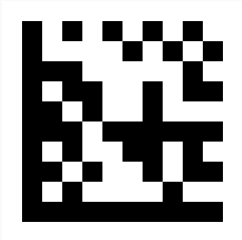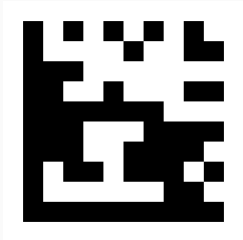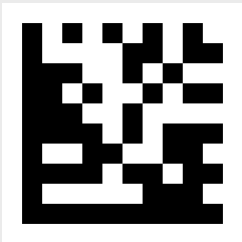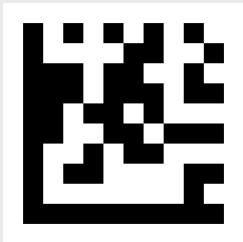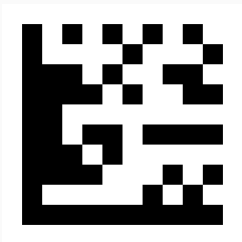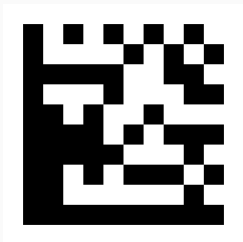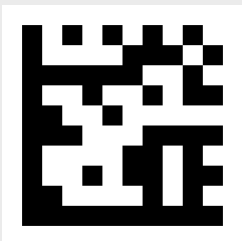
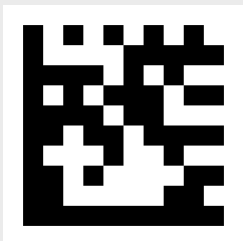
Digit	Setting Barcode	Digit	Setting Barcode
0		1	
2		3	
4		5	
6		7	
8		9	





8.2 ASCII Code Table

  Control Characters (Function Key Mapping)

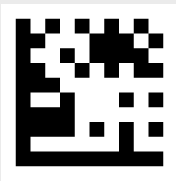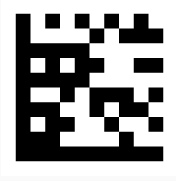Hex	Dec	ASCII	Ctrl Char Mode	Alt + Unicode Mode
00	0	Null	Ctrl+@	Alt + 000
01	1	Home	Ctrl+A	Alt + 001
02	2	End	Ctrl+B	Alt + 002
03	3	Up Arrow	Ctrl+C	Alt + 003
04	4	Down Arrow	Ctrl+D	Alt + 004
05	5	Left Arrow	Ctrl+E	Alt + 005
06	6	Right Arrow	Ctrl+F	Alt + 006
07	7	Null	Ctrl+G	Alt + 007
08	8		Backspace	Alt + 008
09	9		TAB	Alt + 009
0A	10	Null	Ctrl+J	Alt + 010
0B	11	Null	Ctrl+K	Alt + 011
0C	12	Null	Ctrl+L	Alt + 012
0D	13		Enter	Enter
0E	14	Page Up	Ctrl+N	Alt + 014
0F	15	Page Down	Ctrl+O	Alt + 015
10	16	F11	Ctrl+P	Alt + 016
11	17	Null	Ctrl+Q	Alt + 017
12	18	Null	Ctrl+R	Alt + 018
13	19	Null	Ctrl+S	Alt + 019
14	20	Null	Ctrl+T	Alt + 020
15	21	F12	Ctrl+U	Alt + 021
16	22	F1	Ctrl+V	Alt + 022
17	23	F2	Ctrl+W	Alt + 023
18	24	F3	Ctrl+X	Alt + 024
19	25	F4	Ctrl+Y	Alt + 025
1A	26	F5	Ctrl+Z	Alt + 026
1B	27	F6	Ctrl+[	Alt + 027

continues on next page

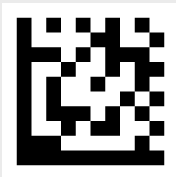 
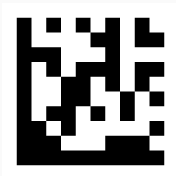 
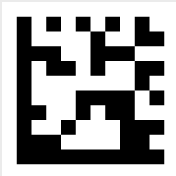 
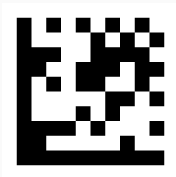 
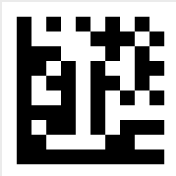 
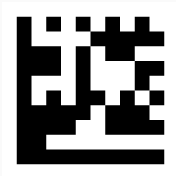 




Table 5 – continued from previous page

Hex	Dec	ASCII	Ctrl Char Mode	Alt + Unicode Mode
1C	28	F7	Ctrl+\	Alt + 028
1D	29	F8	Ctrl+]	Alt + 029
1E	30	F9	Ctrl+^	Alt + 030
1F	31	F10	Ctrl+_	Alt + 031

Printable Characters and Delete

Hex	Dec	ASCII	Setting Barcode
20	32	SPACE	
21	33	!	
22	34	"	
23	35	#	
24	36	\$	
25	37	%	





continues on next page





Start Setup

    Table 6 – continued from previous page

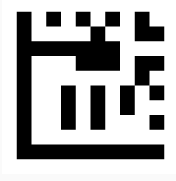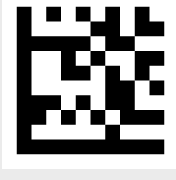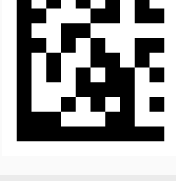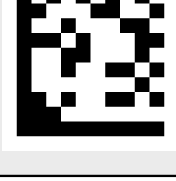Hex	Dec	ASCII	Setting Barcode
26	38	&	
27	39	'	
28	40	(	
29	41	)	
2A	42	*	
2B	43	+	
2C	44	,	







continues on next page





Start Setup

      Table 6 – continued from previous page

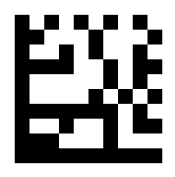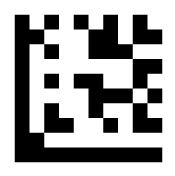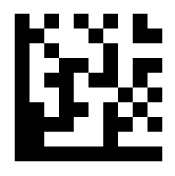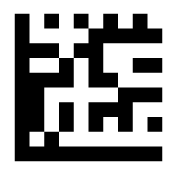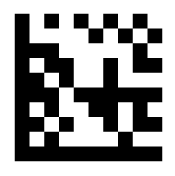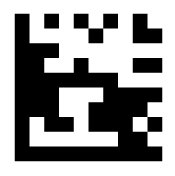Hex	Dec	ASCII	Setting Barcode
2D	45	–	
2E	46	.	
2F	47	/	
30	48	0	
31	49	1	
32	50	2	
33	51	3	







continues on next page





Start Setup

      Table 6 – continued from previous page

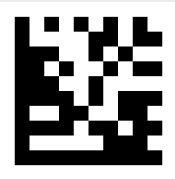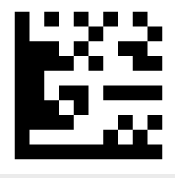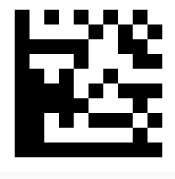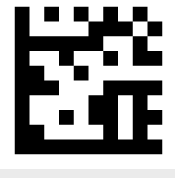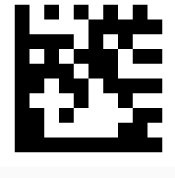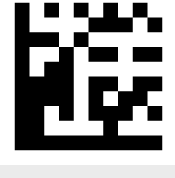Hex	Dec	ASCII	Setting Barcode
34	52	4	
35	53	5	
36	54	6	
37	55	7	
38	56	8	
39	57	9	
3A	58	:	





continues on next page





Start Setup

    Table 6 – continued from previous page

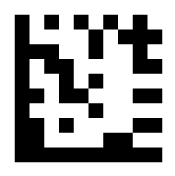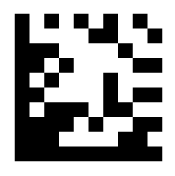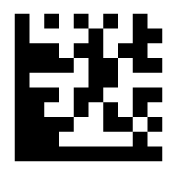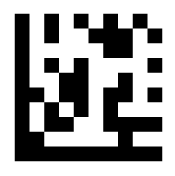Hex	Dec	ASCII	Setting Barcode
3B	59	;	
3C	60	<	
3D	61	=	
3E	62	>	
3F	63	?	
40	64	@	
41	65	A	



continues on next page





Start Setup

  Table 6 – continued from previous page

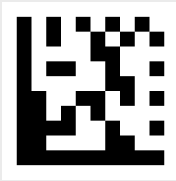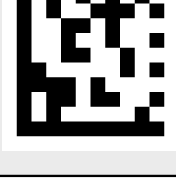Hex	Dec	ASCII	Setting Barcode
42	66	B	
43	67	C	
44	68	D	
45	69	E	
46	70	F	
47	71	G	
48	72	H	





continues on next page





Start Setup

    Table 6 – continued from previous page

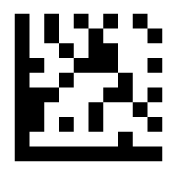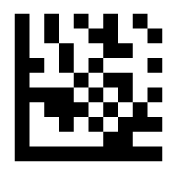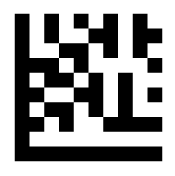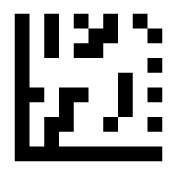Hex	Dec	ASCII	Setting Barcode
49	73	I	
4A	74	J	
4B	75	K	
4C	76	L	
4D	77	M	
4E	78	N	
4F	79	O	




continues on next page





Start Setup

   Table 6 – continued from previous page

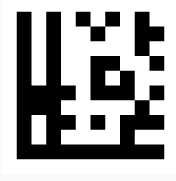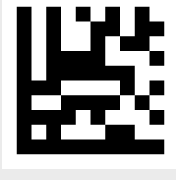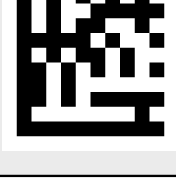Hex	Dec	ASCII	Setting Barcode
50	80	P	
51	81	Q	
52	82	R	
53	83	S	
54	84	T	
55	85	U	
56	86	V	







continues on next page





Start Setup

      Table 6 – continued from previous page

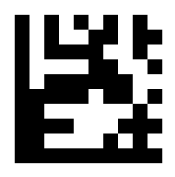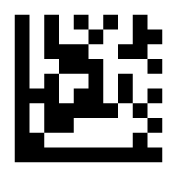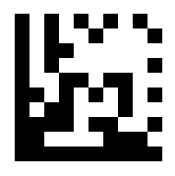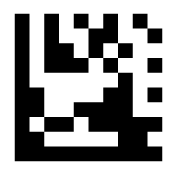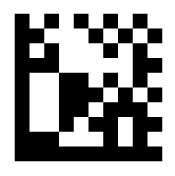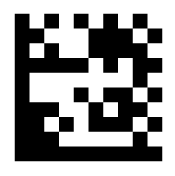Hex	Dec	ASCII	Setting Barcode
57	87	W	
58	88	X	
59	89	Y	
5A	90	Z	
5B	91	[	
5C	92	\	
5D	93	]	




continues on next page





Start Setup

   Table 6 – continued from previous page

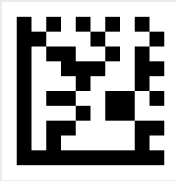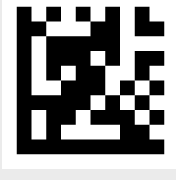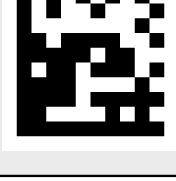Hex	Dec	ASCII	Setting Barcode
5E	94	^	
5F	95	_	
60	96	`	
61	97	a	
62	98	b	
63	99	c	
64	100	d	







continues on next page





Start Setup

      Table 6 – continued from previous page

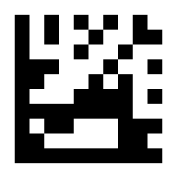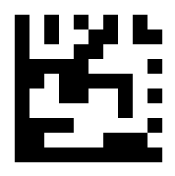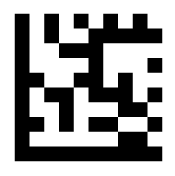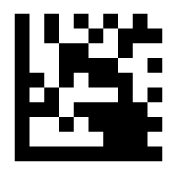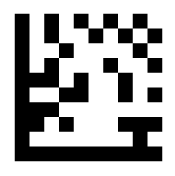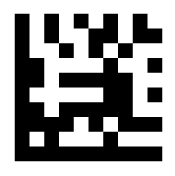Hex	Dec	ASCII	Setting Barcode
65	101	e	
66	102	f	
67	103	g	
68	104	h	
69	105	i	
6A	106	j	
6B	107	k	




continues on next page





Start Setup

   Table 6 – continued from previous page

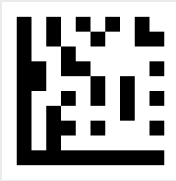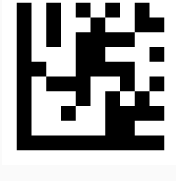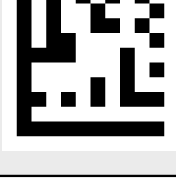Hex	Dec	ASCII	Setting Barcode
6C	108	l	
6D	109	m	
6E	110	n	
6F	111	o	
70	112	p	
71	113	q	
72	114	r	







continues on next page





Start Setup

      Table 6 – continued from previous page

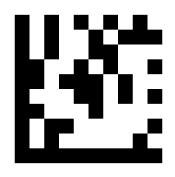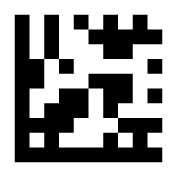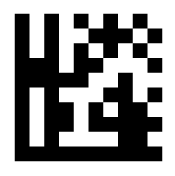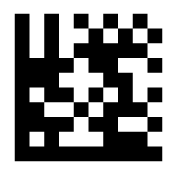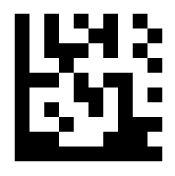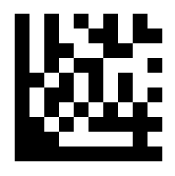Hex	Dec	ASCII	Setting Barcode
73	115	s	
74	116	t	
75	117	u	
76	118	v	
77	119	w	
78	120	x	
79	121	y	


continues on next page





Start Setup

 Table 6 – continued from previous page










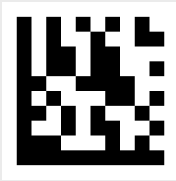
Hex	Dec	ASCII	Setting Barcode
7A	122	z	
7B	123	{	
7C	124		
7D	125	}	
7E	126	~	
7F	127	Delete	

8.3 Function Keys





          Start Setup

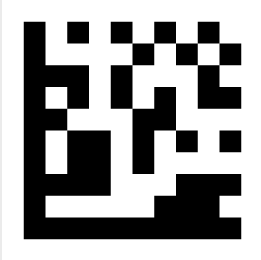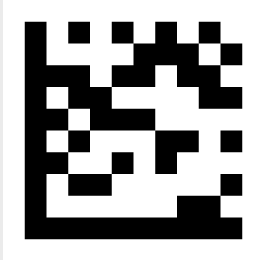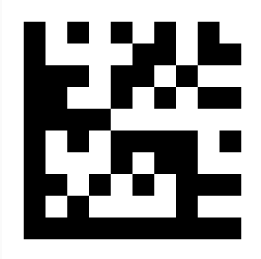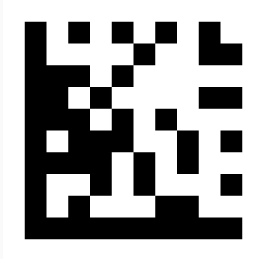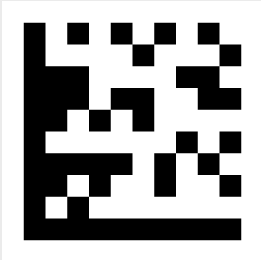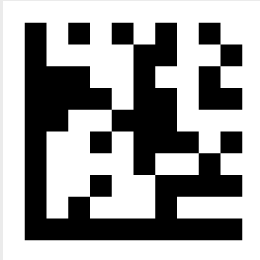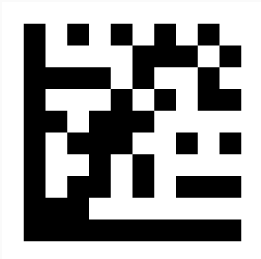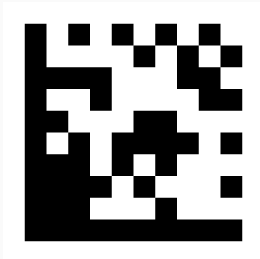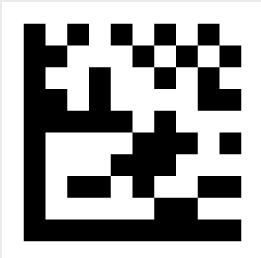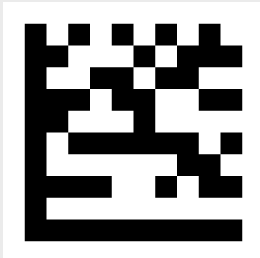Key	Setting Barcode	Key	Setting Barcode
Insert		Delete	
Home		End	
Up Arrow		Down Arrow	
Left Arrow		Right Arrow	
Shift		ESC	











continues on next page





Start Setup

          Table 7 – continued from previous page

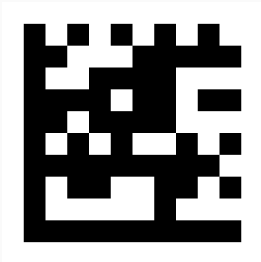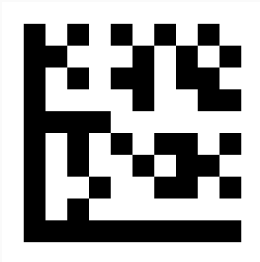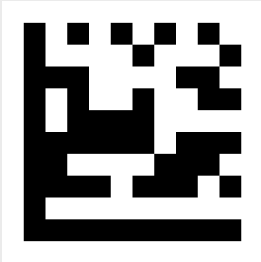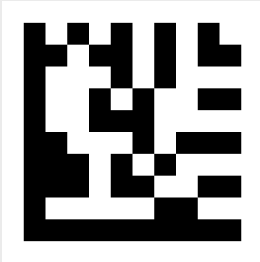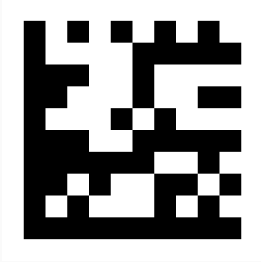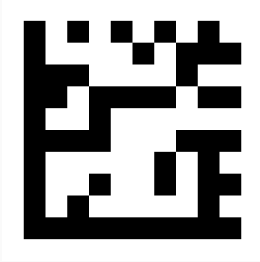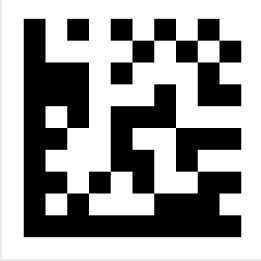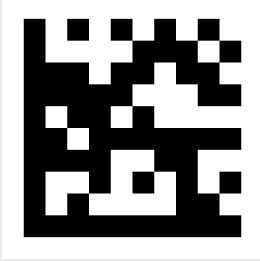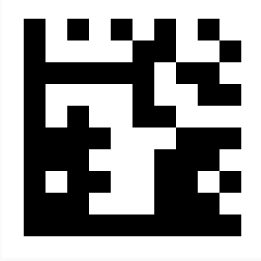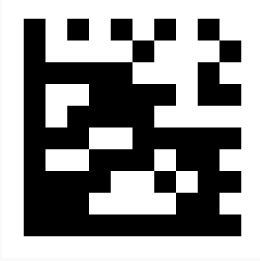Key	Setting Barcode	Key	Setting Barcode
Page Up		Page Down	
F1		F2	
F3		F4	
F5		F6	
F7		F8	




continues on next page





Start Setup

   Table 7 – continued from previous page

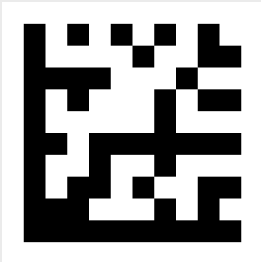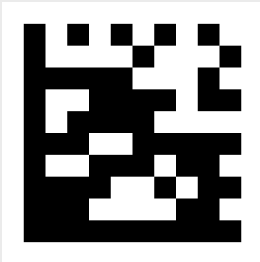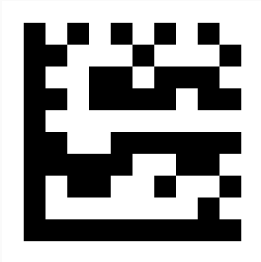Key	Setting Barcode	Key	Setting Barcode
F9		F10	
F11		F12	