



NT-1875L Barcode Scanner User Manual

Release v1.1.0

2026-08-14

Contents

1	System Settings	4
1.1	Start	4
1.2	Prompt Output	6
2	Device Feature Settings	11
2.1	Lighting And Aiming	11
3	Trigger Settings	13
3.1	Scan Mode	13
4	Interface Settings	22
4.1	Communication Mode	22
4.2	Command	26
4.3	Packet Format	28
5	Keyboard Settings	28
5.1	keyboardlayout	28
5.2	Keyboard Type	32
5.3	Keyboard Letter Case Conversion	32
5.4	Keyboard Character Transmission Time Interval	33
5.5	Quick Setting Of Keyboard Character Transmission Time Interval	34
5.6	Keyboard Control Character Output Mode	34
6	Data Editing	35
6.1	BarCode ID	35
6.2	Terminator	36
6.3	Prefix	36
6.4	Suffix	38
6.5	Add Prefix Based On Barcode Type	39
6.6	Add Suffix Based On Barcode Type	41
6.7	Hide Fixed Characters	43
6.8	Keep Barcode Data Based On Length	44
6.9	Hide Barcode Data Based On Length	47
6.10	Hide Barcode Data Of Any Length Based On Barcode Type	49
6.11	Hide Any Length of Leading Data by Symbology	51
6.12	Hide Any Length of Trailing Data by Symbology	53
6.13	Insert Custom Data	54
6.14	Data Replacement	56
6.15	Line Feed And Carriage Return	58
6.16	URL Switch	58
6.17	Invoicing Function	59
6.18	GS1 Rules Enabled	60
7	Character Settings	60
7.1	Character Set	60
8	Barcode Settings	61
8.1	Barcode Global Operations	61
8.2	Code 128	66
8.3	UCC/EAN-128/GS1-128	69

8.4	EAN-8	71
8.5	EAN-13	73
8.6	ISSN	74
8.7	ISBN	75
8.8	UPC-E	75
8.9	UPC-A	78
8.10	ITF25	80
8.11	NEC25/COOP25	83
8.12	MATRIX25	86
8.13	IND25	89
8.14	STD25	91
8.15	Code 39	93
8.16	Codabar	97
8.17	Code 93	101
8.18	Code 11	103
8.19	MSI Plessey	106
8.20	GS1 DataBar/RSS	109
8.21	Composite Code	109
8.22	TELEPEN	109
8.23	TRIOPTIC	110
8.24	HONG KONG 2 OF 5/CHINA POST	110
8.25	Korea Post/Korea Post	110
8.26	PDF417	111
8.27	QR Code	112
8.28	Data Matrix (DM)	113
8.29	Aztec Code	115
9	Appendix	115
9.1	Numeric Barcode	115
9.2	Code ID	117
9.3	AIM ID	118
9.4	ASCII Code Comparison Table	119
9.5	Barcode Types	122

1 System Settings

1.1 Start

Manual Instructions

This manual includes symbology settings, function settings (lighting, keyboard type and factory reset, etc.) and interface settings. If you need to change the functions you need, just scan the configuration according to the Parameter Barcode below. All with (*) indicate factory default values.

Version Information

Scan the “Version Information” Parameter Barcode to allow the host to quickly read the current device version.



Version Information

Parameter Barcode Scanning

By turning on the Parameter Barcode function, you can configure the parameters of the Scan Engine by scanning the Parameter Barcode.

Note

When modifying the configuration through the Parameter Barcode, the entire current flag bit list will be saved to the memory, that is, the configuration configured through the serial port but not saved will also be saved together.




Disable




* Enable

Transmit Parameter Barcode Data

Whether to output the Parameter Barcode content, you can configure the parameters of the Scan Engine by scanning the following Parameter Barcode.

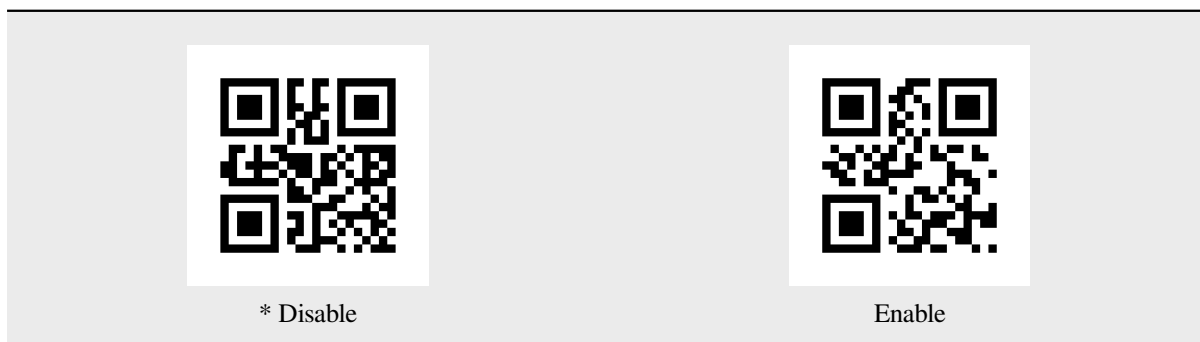

User Default Settings

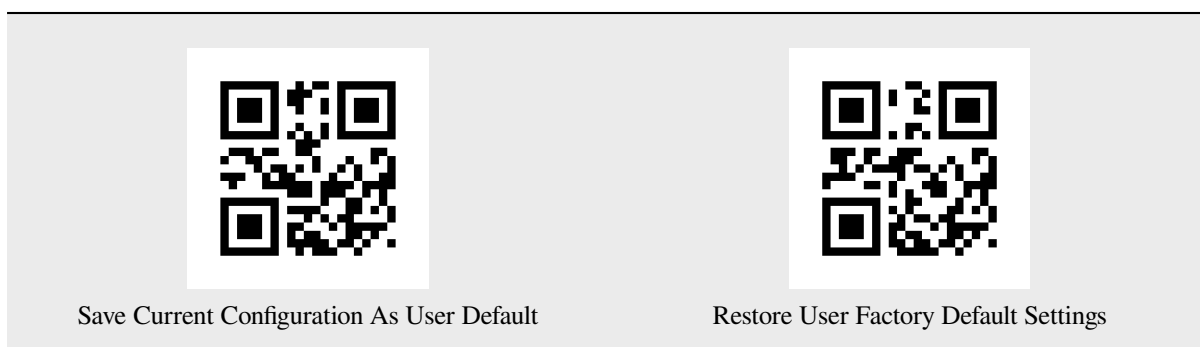

Users can save their frequently used configurations as user default settings. By scanning “Save current settings as user default settings”, the current configuration information of the device can be saved as user default settings information. After this operation, the new configuration information will replace the original user default settings information. By scanning “Restore User Default Settings”, the Scan Engine can be switched to user default settings.

Power Control

Sleep Mode

This parameter determines the power mode of the module. In sleep mode, the Scan Engine enters sleep state as much as possible (can be awakened by wake-up command)



* Sleep Mode

Continuous Working Mode

In continuous working mode, the Scan Engine is still awake after each decoding attempt.



Continuous Working Mode

1.2 Prompt Output

Beep Related

Buzzer Type

Scan the following Parameter Barcode to set the buzzer as a passive or active buzzer.



* Passive



Active

Volume Level

Users can adjust the buzzer volume according to the application environment and personal habits by Scanning the following Parameter Barcode.



Mute



Bass



Alto



* Treble

Power-on Beep

	
Disable	* Enable

Parameter Entry Beep

	
Disable	* Enable

Decode Beep

	
Disable	* Enable

Decode Beeper Tone

The resonant frequency of the buzzer used by the user may be different from the default frequency. You can adjust the frequency of the decoding beep by scanning the following Parameter Barcode. Default is 2700Hz.

Scan the “Buzzer Frequency” Parameter Barcode



Buzzer Frequency

Scan the “Numeric Barcode” . For example, if the frequency is 1500Hz, sweep 1, 5, 0, 0; if the frequency is 2700Hz, sweep 2, 7, 0, 0

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Decode Beep Quick Setting

 1000Hz	 1500Hz
 2000Hz	 2500Hz
 *2700Hz	 3000Hz
 3500Hz	

Decode Beep Duration

Users can set the duration of the decoding beep as needed, the default is 50ms.

Scan the “Beep Sound Duration” Parameter Barcode



Beeper Duration

Scan the “Numeric Barcode” . For example, if the duration is 50ms, scan 5,0; if the duration is 200ms, scan 2,0,0

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Quickly Set The Decode Beep Duration



30ms



*50ms



70ms



100ms



200ms



300ms

2 Device Feature Settings

2.1 Lighting And Aiming

Illumination

The lighting can provide auxiliary lighting for shooting and reading, and the beam shines on the reading target, improving the reading performance and the ability to adapt to weak ambient light. Users can set it to one of the following states according to the application environment:

Normal lighting (default setting): The lighting lights up when shooting and reading, and turns off at other times;

The lighting is always on: the lighting will continue to glow after the Scan Engine is turned on;

No lighting: The light does not come on under any circumstances.



AIM

The projected aiming beam helps users find the optimal reading distance when shooting for reading. According to the application environment, users can

Choose any of the modes below.

Aiming Normal (default setting): The Scan Engine only projects the aiming beam when shooting and reading;

Aiming always on: After the Scan Engine is powered on, it will continue to project the aiming beam;

No Aiming: The aiming beam is extinguished under any circumstances.



* AIM For Normal



No Aiming



AIM For Constant Light

Reminder Light Related Alert Light Function Type




* Decoding Hints



Power Prompt

Decode Success Indicator

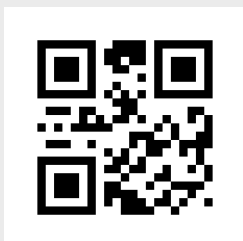

Disable




* Enable

Decoding Success Prompt Light Control Method


Mode 0: long off after power on, on when decoding is successful, on for a specified time and then off.

Method 1: Always on after power-on, off when decoding is successful, and on after a specified period of time.

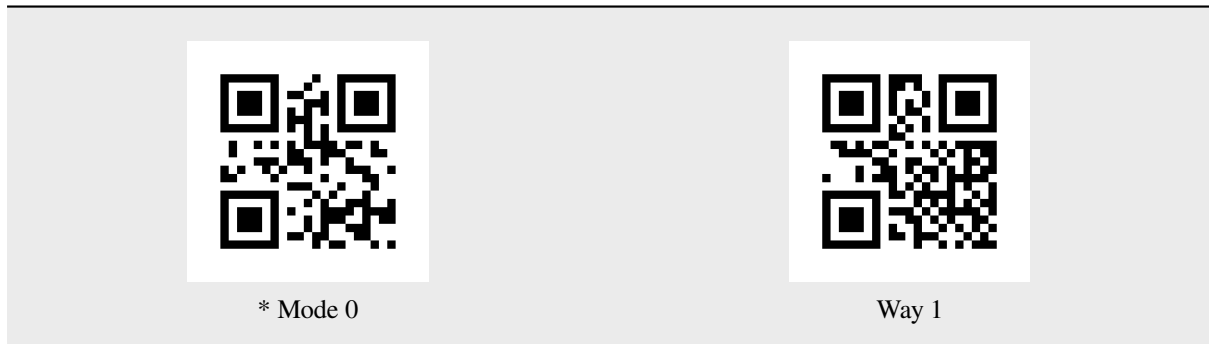

Decoding Status NR Output

NR is the abbreviation of No Read. Before releasing the Trigger Button, if the barcode cannot be decoded within the timeout period, the “NR” message is allowed to be output; when this function is disabled, no message can be output to the host even if the barcode cannot be decoded.

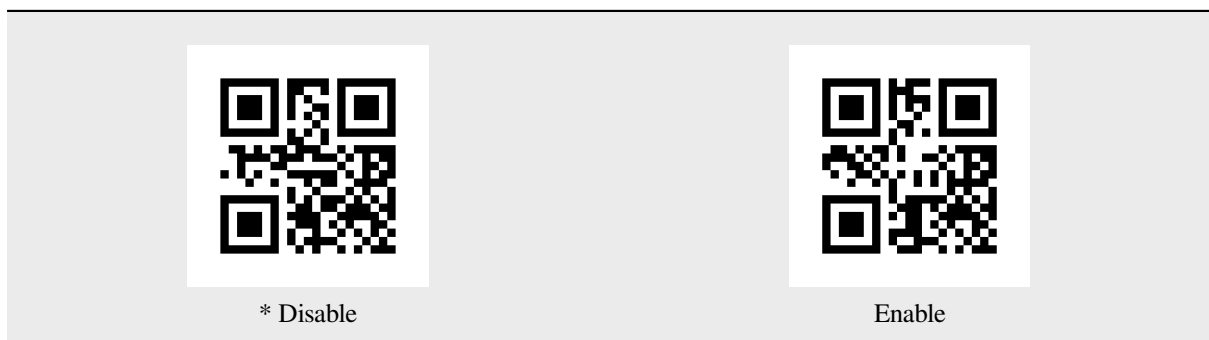

3 Trigger Settings

3.1 Scan Mode

Common Scan Modes

Key Hold

In Button Hold Mode, press and hold the button to scan. Releasing the button, a successful decode, or expiration of the Decode Timeout ends the scan session.



Key Hold

Single Button Trigger

In Single Button Trigger Mode, press the button to start scanning. Releasing the button does not stop scanning; the scan session ends after a successful decode or when the Decode Timeout expires.



Single Button Trigger

Continuous Mode

Once configured, the Scan Engine starts scanning immediately without a trigger. After a successful decode or when the Decode Timeout expires, it waits for the Scan Interval and then automatically starts the next scan session.



Continuous Mode

Presentation Mode

In Presentation Mode, the Scan Engine monitors ambient brightness and starts scanning when the brightness changes. The scan session ends after a successful decode or when the Decode Timeout expires, after which ambient-brightness monitoring resumes.



Presentation Mode

Sensitivity

Sensitivity refers to the degree of detection of scene changes in sensor reading mode. When the Scan Engine determines that the scene change degree meets the requirements, it will switch from the monitoring state to the reading state.



Image Stabilization Duration Setting

The image stabilization time refers to the time that the Scan Engine that detects scene changes needs to wait for the image to stabilize before reading the code in the sensor reading mode. The image stabilization time setting range is: 0-65535ms, and the default value is: 300ms.

Scan the “Stabilization Duration” Parameter Barcode



Image Stabilization Time

Scan the “Numeric Barcode” . For example, if the duration is 100ms, scan 1, 0, 0; if the duration is 1005ms, scan 1, 0, 0, 5

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Quick Setting Of Image Stabilization Duration

 100ms	 200ms
 *300ms	 400ms
 500ms	 1000ms

Command Trigger Mode

Use host commands to start or stop scanning by the Scan Engine. A successful decode or expiration of the Decode Timeout ends the scan session. For command details, refer to the product command documentation.

Note

Trigger And End Commands Are Valid In Any Mode

Special Scan Modes

Screen Fast Mode

This special-purpose mode is not available in standard product versions. It is intended for applications that require rapid decoding of barcodes displayed on screens. Contact the supplier if you need this mode.

High-Speed Scan Mode

This special-purpose mode is not available in standard product versions. It is intended for rapid decoding of barcodes on paper by fixed-mount Scan Engines, Presentation Scanners, and similar products. Contact the supplier to enable this mode.

Single Reading Time

The duration of a single code reading refers to the longest reading attempt time allowed after triggering the reading and failing to read successfully. When this time is exceeded, the reading state will be exited. The range of single code reading time is: 0-65535ms, default: 5000ms.

Single Reading Time Setting

Scan the “single reading time” Parameter Barcode



Single Reading Time

Scan the “Numeric Barcode” . For example, if the duration is 100ms, scan 1, 0, 0; if the duration is 1005ms, scan 1, 0, 0, 5

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Quick Setting Of Single Reading Time



Same Symbol Timeout

To prevent repeated reads in Continuous Mode and Presentation Mode, the Scan Engine rejects the same barcode until the Same Symbol Timeout has elapsed. Range: 0-65535 ms. Default: 0 ms.

Same Symbol Timeout Setting

Scan the “Same Symbol Timeout” Parameter Barcode



Same Symbol Timeout

Scan the “Numeric Barcode”. For example, if the interval is 100ms, scan 1, 0, 0; if the interval is 1005ms, scan 1, 0, 0, 5

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Same Symbol Timeout Quick Settings

 * 0ms	 100ms
 300ms	 500ms
 1000ms	 3000ms
 5000ms	 10000ms
 Infinite Delay (do Not Read The Same Code)	

Reading Interval Time

The interval between two readings in continuous mode. Regardless of whether the last reading was successful or failed, it will automatically enter the next reading after this time. This setting mainly applies to continuous mode

Default: 500ms, range: 0-65535ms

Reading Interval Setting

Scan the “Reading Interval Time” Parameter Barcode



Reading Interval Time

Scan the “Numeric Barcode” . For example, if the interval is 100ms, scan 1, 0, 0; if the interval is 1005ms, scan 1, 0, 0, 5

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Quickly Set The Reading Interval Time

 0 ms	 *500ms
 1000ms	 2000ms
 5000ms	 10000ms

4 Interface Settings

4.1 Communication Mode

USB HID-KBW

When the Scan Engine is connected to the host using a USB cable, the Scan Engine can be configured as a standard keyboard input by scanning the USB KBW Parameter Barcode.



USB HID-KBW

USB COM

When the Scan Engine is connected to the host using a USB cable, the Scan Engine can be configured into virtual serial port output mode by scanning the USB COM Parameter Barcode.



USB COM

serial

The serial communication interface is a common way to connect the Scan Engine to the host device (such as PC, POS, etc.). When the Scan Engine is connected to the host using a serial port cable, the system defaults to the serial communication mode. When using the serial communication interface, the communication parameter configuration between the Scan Engine and the host device must completely match to ensure smooth communication and correct content.



TTL-232 Serial Port

The serial communication interface of the Scan Engine uses TTL level signals (TTL-232). This interface can adapt to most system architectures. If the system needs to use RS232 architecture, an external conversion circuit needs to be added.

The default serial communication parameters of the Scan Engine are shown in Table 2-1.

Serial Communication Parameter Table 2-1

Parameter	default
Baud Rate	115200
Check Digit	none
Data Bits	8
stop bit	1

Baud Rate

When the Scan Engine communicates with the host through TTL-232/RS232, the same communication parameters must be set for normal communication, including transmission rate, verification, flow control, etc. The transmission rate is the baud rate, and the default baud rate is 115200.

	
600	1200
	
2400	4800
	
9600	14400
	
19200	38400
	
57600	*115200

Check Digit



* No Parity



Odd



Even

stop bit




* 1 Bit



2 People

Data Bits

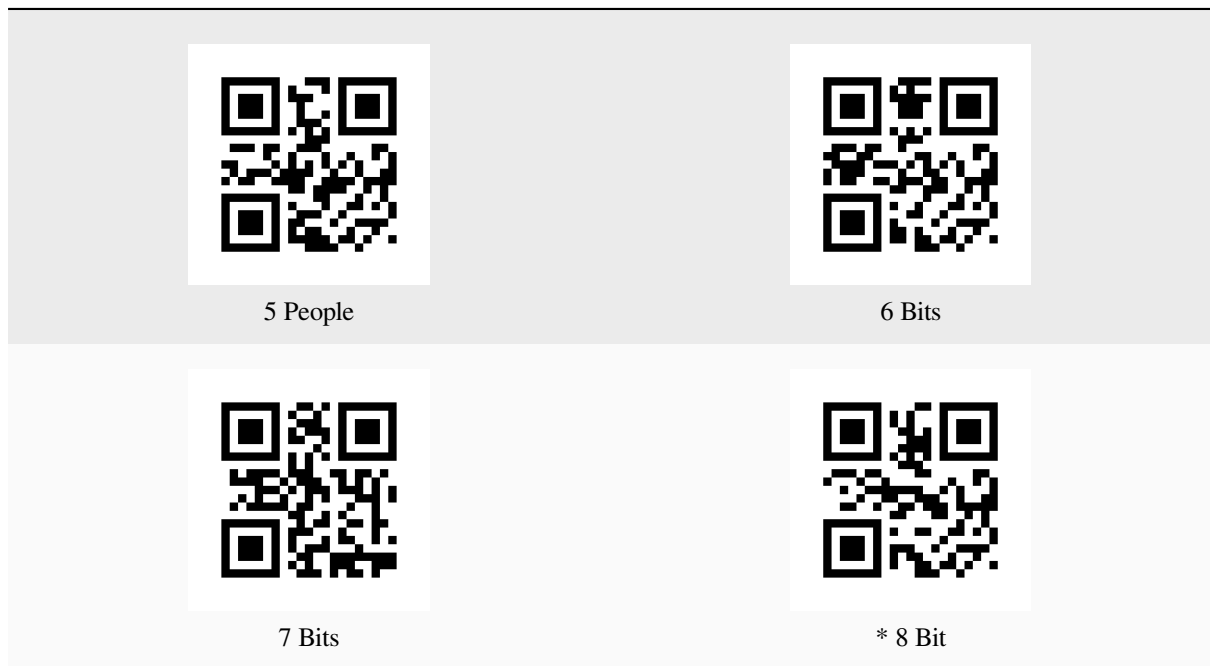

USB HID-POS

When the device is used as a HID device, you can Scan the following Parameter Barcode and select the HID POS device mode.



HID POS

4.2 Command

Format

Instruction composition: Instructions use ASCII strings and are composed as follows

- Parameter Barcode
- Instruction Type
- The default checksum is “99”

Instruction Type

Instruction Type	Command
Permanent Setting Instructions	Parameter Barcode+ ” >;99’ ”
Temporary Setup Instructions	Parameter Barcode+ ” ^;99”
Query Command	Parameter Barcode+ ” ?;99”
The Return Command Is Correct	Parameter Barcode+ ” \$;99”
Return Command Error	Parameter Barcode+ ” *;99”

Function	Send	Return Correctly	Error Return	Remark
Setup Instructions	>!0010201.>;99	>!0010201.\$;99	>!0010201.*;99	
Query Command	>!0010201.?;99	>!001020X.\$;99	>!0010201.*;99	X Query Value

For example: to set the terminator to carriage return and line feed, the Parameter Barcode is >!0010201.

Special instructions involve permanent setting instructions, please do not use them frequently. If it is shipped from the factory or is set occasionally, it is recommended to use the permanent setting command. If the settings are modified every time the code is read, please use the temporary setting command. Frequent use of the permanent setting command will affect the service life of the scanning device.

Detailed instructions can be found in Appendix D.

Answer

After being enabled, the host sends commands and the Scan Engine will respond accordingly.



Disable



* Enable

Command Beep

After being enabled, when the Scan Engine receives an instruction, there will be a sound prompt.



Disable



* Enable

4.3 Packet Format

Decode Data

Identifier	Status	Type	Length	Barcode Types	Data	Check
0x99 0xDD		0x06				


Field Description

Field Name	Size	Description
Identifier	2 Bytes	Fixed 0x99, 0xDD
Status	1 Byte	bit0: permanent changebit1: repeated sendingbit2: command beep
Type	1 Byte	Type Of Instruction
Length	4 Bytes	High byte first (low address), low byte last (high address), does not include check digits
Barcode Types	1 Byte	See Appendix F For Details
Data	Variable	Decode Data
Check	1 Byte	XOR Check

When ACK is enabled, the host receives the decode data command and must reply ACK to the Scan Engine.

Toggle

When enabled, decoded data will be sent in packet format.

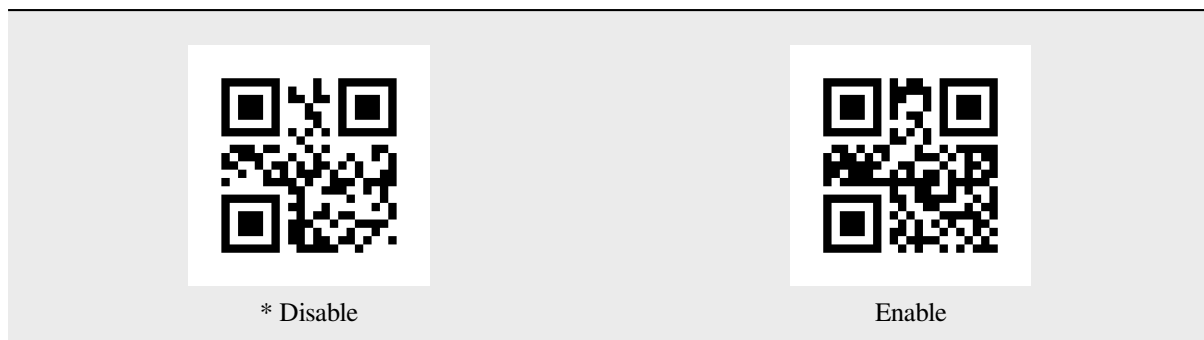

5 Keyboard Settings

5.1 keyboardlayout

In order to allow hosts in various countries to use the device, settings can be made by reading the “keyboard” of the corresponding country.



* USA



Belgium



Brazil, Portuguese (Brazilian ABNT)



Denmark



Finland



France



Austria, Germany



Greece



Hungary



Italy



latin america, south american countries



Netherlands



Norway



Poland



Portugal



Romania



Russia



Slovakia



Spain



Sweden



Türkiye F



Turkish Q



United Kingdom



Japan



Czech Republic



Thailand K



Ukraine



Arab Region 101



Croatia, Slovenia




Korea




5.2 Keyboard Type

When the virtual keyboard is enabled, correct English letters, English symbols and numeric data can be output in any keyboard language mode. When using the virtual keyboard, you must ensure that the numeric keys on the small keyboard are enabled.

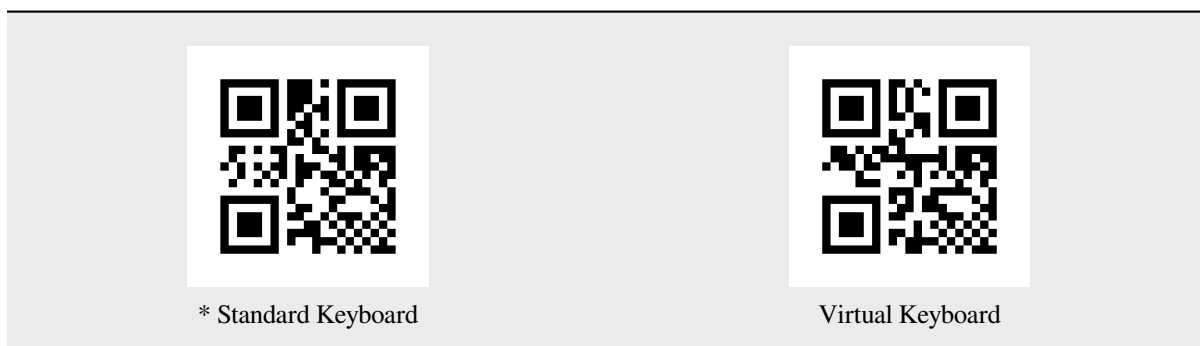

5.3 Keyboard Letter Case Conversion

Letter conversion, when outputting barcodes with letter content, the output result can be configured to be all uppercase or all lowercase. For example, if the barcode content is: ab123dE, if you scan the “convert to uppercase” barcode, the output result is: AB123DE; if you scan the “convert to lowercase” barcode, the output result is: abc123de; by default, uppercase and lowercase are not converted.

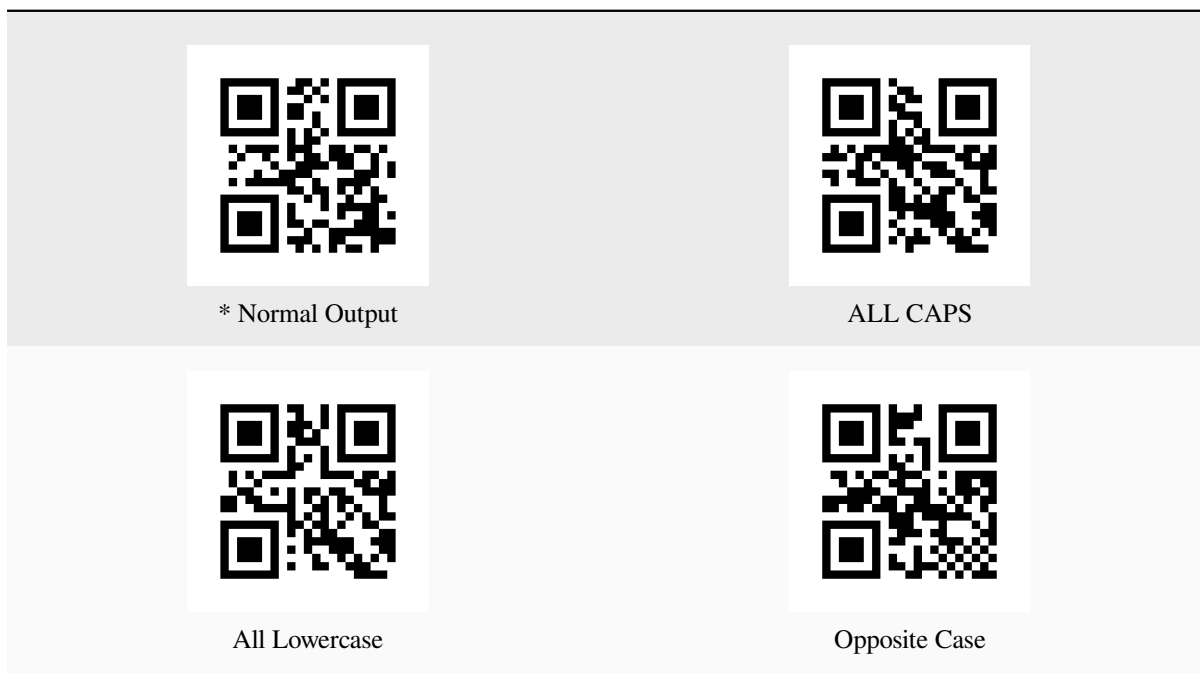

5.4 Keyboard Character Transmission Time Interval

We can improve compatibility and reduce the probability of data loss by setting the transmission time interval between keyboard characters. Time interval setting range: 0-65535ms, default value: 5ms.

Scan the “Character Transmission Interval” Parameter Barcode



Character Transmission Time Interval

Scan the “Numeric Barcode” . For example, if the duration is 10ms, scan 1,0; if the duration is 100ms, scan 1,0,0.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

5.5 Quick Setting Of Keyboard Character Transmission Time Interval



5.6 Keyboard Control Character Output Mode

Control character (0x00-0x1F) output mode selection in ASCII code

Output function keys: Control characters are used as custom function keys. For specific functions, see [ASCII Code Comparison Table](#).

Output CTRL key combination: CTRL key combination mode outputs control characters. For specific functions, see [ASCII Code Comparison Table](#).

Output ALT+numeric keys: supports full control character output in Chinese environment. For specific functions, see [ASCII Code Comparison Table](#).




6 Data Editing

6.1 BarCode ID


AIM ID

AIM is the abbreviation of Automatic Identification Manufacturers (Automatic Identification Manufacturers Association). AIM ID defines identification codes for various standard barcodes (users cannot customize AIM ID). For specific definitions, see Appendix C: AIM ID List. The Scan Engine can add this identification code in front of the barcode data after decoding. The format is: “]” + letter “C” + number “0” . For example, the AIM ID of Code 128 is “]C0” . Users can identify different barcode types through AIM ID.

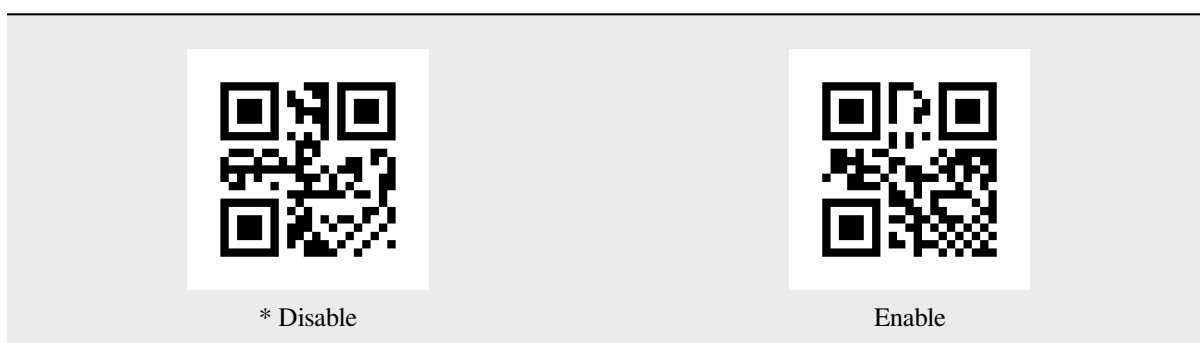


Code ID

Users can identify different barcode types through Code ID, which uses one character for identification. For specific definitions, see Appendix B: Code ID List

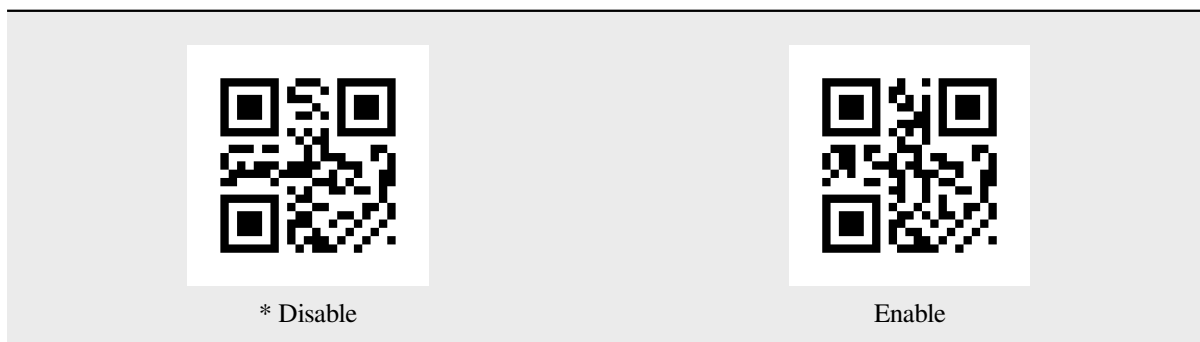

6.2 Terminator


To help the host distinguish consecutive scan results, enable the Terminator function. The Scan Engine appends the selected Terminator to the Output Data.

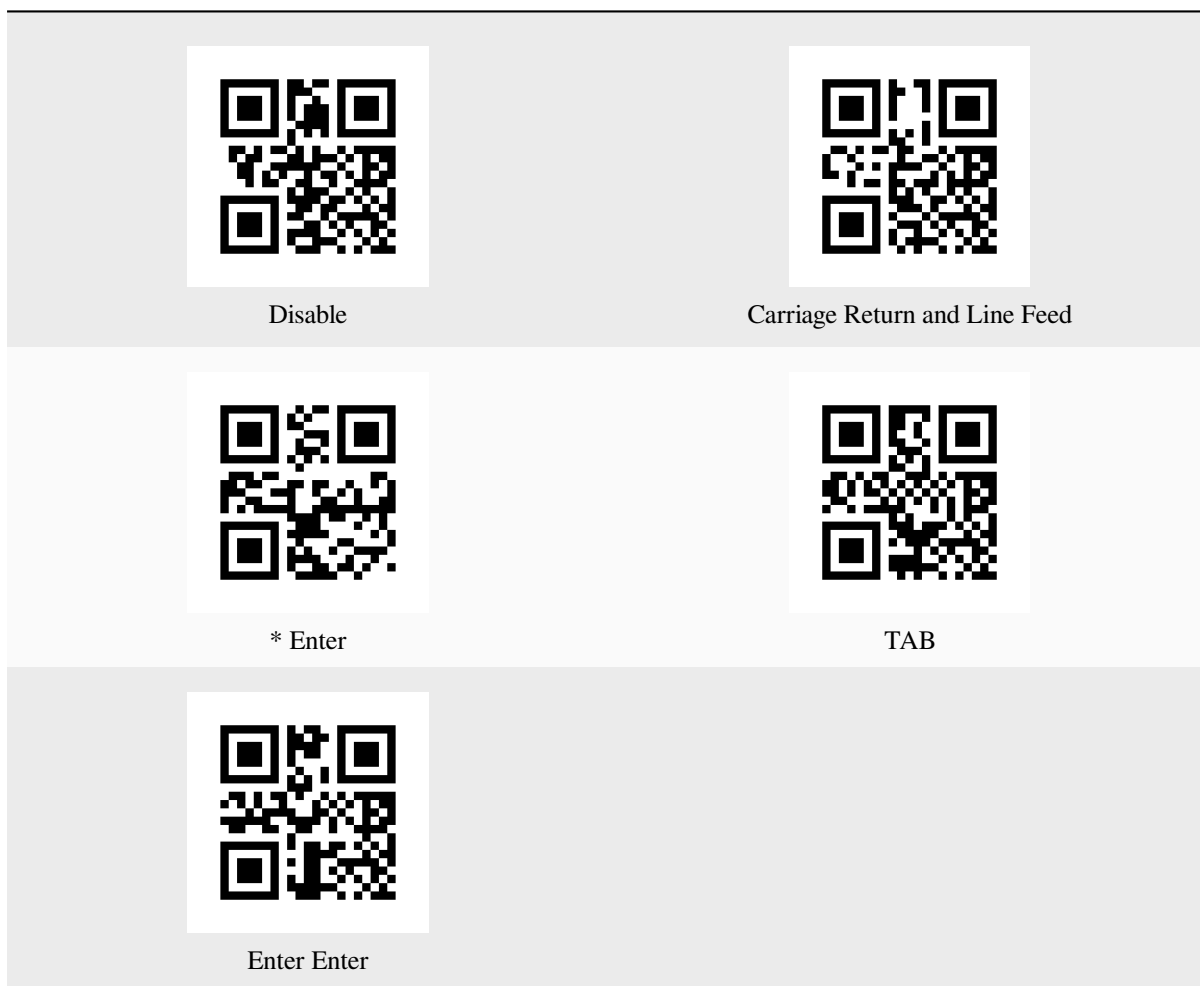

6.3 Prefix

Prefix Switch

A Prefix is a user-defined string appended before the Output Data. Scan the “Enable” Parameter Barcode to add it, or the “Disable” Parameter Barcode to remove it.

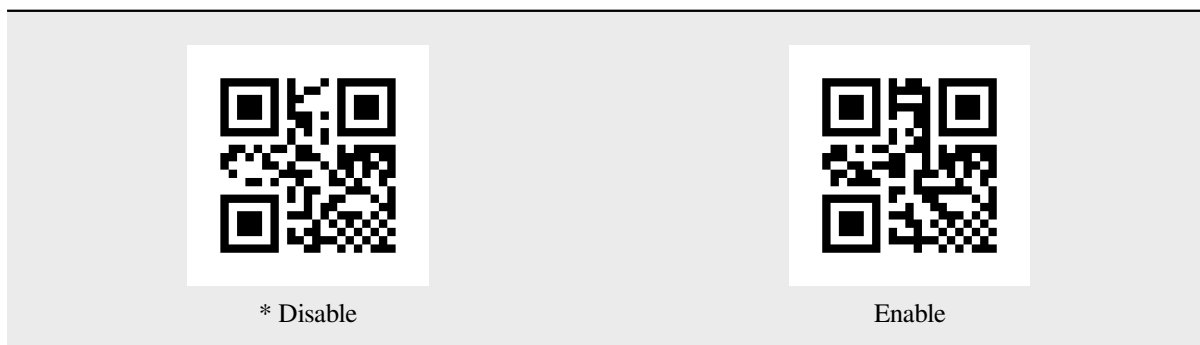

Prefix Content Settings

There are two methods for prefix setting. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Add the prefix Parameter Barcode content format: >!010800XX. XX is the setting variable, XX is expressed in hexadecimal, two characters are one unit, and any shortage is filled with 0. It can be superimposed arbitrarily, and a maximum of 10-digit data prefix is supported.

For example: If you need to set the prefix character A, check the character comparison table in Appendix E. The hexadecimal value is 41, and the Parameter Barcode content is: >!01080041.

For example: if you need to set the prefix characters A B C, check the character comparison table in Appendix E. The hexadecimal values are 41 42 43, then the Parameter Barcode content is: >!010800414243.

Method two:

Scan the “Prefix Settings” Parameter Barcode



Prefix Settings

Scan the Numeric Barcodes in pairs.

For example: if you need to set the prefix character A, check the character comparison table in Appendix E. If the hexadecimal value is 41, scan 4 and 1 respectively.

For example: if you need to set the prefix character ABC, check the character comparison table in Appendix E. The hexadecimal value is 414243, then scan 4, 1, 4, 2, 4, 3 respectively.

Scan the “OK” Parameter Barcode to complete the setup.




Sure

6.4 Suffix

Suffix Switch

A Suffix is a user-defined string appended after the Output Data. Scan the “Enable” Parameter Barcode to add it, or the “Disable” Parameter Barcode to remove it.

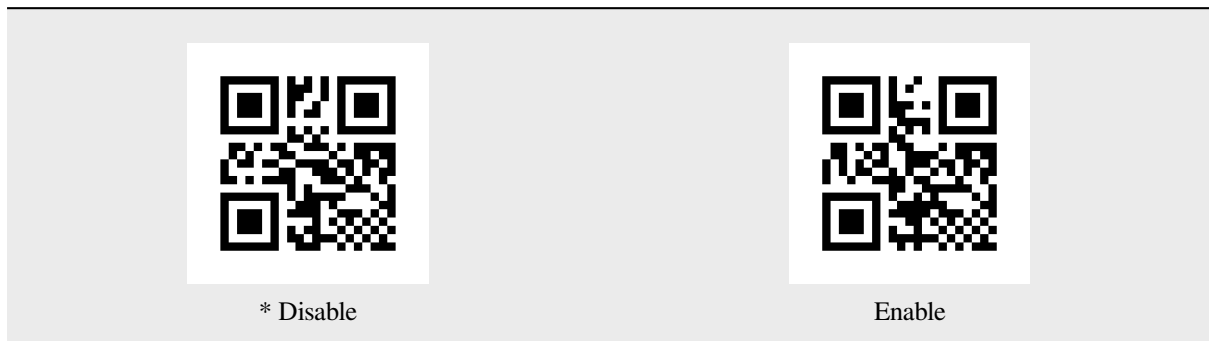

Suffix Content Settings

There are two methods for suffix setting. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Add the suffix Parameter Barcode content format: >!010801XX. XX is the setting variable, XX is expressed in hexadecimal, two characters are one unit, and any shortage is filled with 0. It can be superimposed arbitrarily, and a maximum of 10 suffixes are supported.

For example: If you need to set the suffix character A, check the character comparison table in Appendix E. The hexadecimal value is 41, and the Parameter Barcode content is: >!01080141.

For example: if you need to set the suffix character ABC, check the character comparison table in Appendix E. The hexadecimal value is 414243, then the Parameter Barcode content is: >!010801414243.

Method two:

Scan the “Suffix Settings” Parameter Barcode



Suffix Settings

Scan the Numeric Barcodes in pairs.

For example: if you need to set the suffix character A, check the character comparison table in Appendix E. If the hexadecimal value is 41, scan 4 and 1 respectively.

For example: if you need to set the suffix character ABC, check the character comparison table in Appendix E. The hexadecimal value is 414243, then scan 4, 1, 4, 2, 4, 3 respectively.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

6.5 Add Prefix Based On Barcode Type

Add Prefix Switch Based On Barcode Type

A Prefix is a user-defined string appended before the Output Data. Scan the “Enable” Parameter Barcode to add it, or the “Disable” Parameter Barcode to remove it.



* Disable



Enable

Add Prefix Content Settings Based On Barcode Type

There are two methods for setting the prefix content. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Add a prefix according to the barcode type. The content format of the Parameter Barcode is: >!010806XXXX.XXXX. XXXX is a setting variable. The first two XX represent the barcode type. The relevant

hexadecimal value can be found according to Appendix F. The following XX is expressed in hexadecimal. Two characters are one unit. The insufficient ones are filled with 0. They can be superimposed arbitrarily. The maximum support is 10-digit data prefix.

For example: you need to set the Code 128 barcode prefix character A. According to Appendix F, the hexadecimal value of Code 128 is 01. Check the character comparison table in Appendix E. The hexadecimal value of character A is 41, so the Parameter Barcode content is: >!0108060141.

For example: you need to set the Code 128 barcode prefix characters A B C. According to Appendix F, the hexadecimal value of Code 128 is 01. Check the character comparison table in Appendix E. The hexadecimal characters of A B C are 41 42 43 respectively. Then the Parameter Barcode content is: >!01080601414243.

Method two:

Scan the “Prefix Settings” Parameter Barcode



Prefix Settings

Set the symbology by scanning the Numeric Barcodes in pairs.

For example: you need to set a prefix for Code 128. According to the barcode type in Appendix F, the hexadecimal value of the barcode type of Code 128 is 01, then scan 0 and 1 respectively.

Set the prefix content by scanning the Numeric Barcodes in pairs.

For example: if you need to set the prefix character A, check the character comparison table in Appendix E. The hexadecimal value of character A is 41, so scan 4 and 1 respectively.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Clear Prefix by Barcode Type

Clear the prefix that has been set. There are two methods to clear the prefix. The first method requires the user to generate a QR code, which is more flexible for more users. The second method can scan the Parameter Barcode in this manual according to the steps.

Method one:

The content format of clear prefix Parameter Barcode according to the barcode type is: >!010808XX. XX is the setting variable, XX indicates the barcode type using hexadecimal, two characters are one unit, and any shortage is filled with 0. The relevant hexadecimal values can be found in Appendix F.

For example: you need to clear the Code 128 barcode prefix. According to Appendix F, the hexadecimal value of Code 128 is 01, then the Parameter Barcode content is: >!01080801.

Method two:

Scan the “Clear Prefix” Parameter Barcode



Clear Prefix

Clear the symbology by scanning the Numeric Barcodes in pairs.

For example: you need to clear the Code 128 prefix. According to the barcode type in Appendix F, the hexadecimal value of the barcode type of Code 128 is 01, then scan 0 and 1 respectively.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

6.6 Add Suffix Based On Barcode Type

Add Suffix Switch According To Barcode Type

A Suffix is a user-defined string appended after the Output Data. Scan the “Enable” Parameter Barcode to add it, or the “Disable” Parameter Barcode to remove it.



* Disable



Enable

Add Suffix Content Settings According To Barcode Type

There are two methods for setting the suffix content. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Add a suffix according to the barcode type. The content format of the Parameter Barcode is: >!010807XXXX. Among them, XXXX is a setting variable. The first two XX represent the barcode type. The relevant hexadecimal value can be found in Appendix F. The following XX is expressed in hexadecimal. Two characters are one unit. The missing ones are filled with 0. They can be superimposed arbitrarily. The maximum support is 10-digit data suffix.

For example: you need to set the Code 128 barcode suffix character A. According to Appendix F, the hexadecimal value of Code 128 is 01. Check the character comparison table in Appendix E. The hexadecimal value of character A is 41, so the Parameter Barcode content is: >!0108070141.

For example: you need to set the Code 128 barcode suffix characters A B C. According to Appendix F, the hexadecimal value of Code 128 is 01. Check the character comparison table in Appendix E. The hexadecimal characters of A B C are 41 42 43 respectively. Then the Parameter Barcode content is: >!01080701414243.

Method two:

Scan the “Suffix Settings” Parameter Barcode



Suffix Settings

Set the symbology by scanning the Numeric Barcodes in pairs.

For example: you need to set a suffix for Code 128. According to the barcode type in Appendix F, the hexadecimal value of the barcode type of Code 128 is 01, then scan 0 and 1 respectively.

Set the suffix content by scanning the Numeric Barcodes in pairs.

For example: if you need to set the suffix character A, check the character comparison table in Appendix E. The hexadecimal value of character A is 41, so scan 4 and 1 respectively.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Clear Suffix by Barcode Type

Clear the suffix that has been set. There are two methods to clear the suffix. The first method requires the user to generate a QR code, which is more flexible for more users. The second method can scan the Parameter Barcode in this manual according to the steps.

Method one:

The content format of clearing the suffix Parameter Barcode according to the barcode type is: >!010809XX. XX is the setting variable, XX indicates the barcode type using hexadecimal, two characters are one unit, and any shortage is filled with 0. The relevant hexadecimal values can be found in Appendix F.

For example: you need to clear the Code 128 barcode suffix. According to Appendix F, the hexadecimal value of Code 128 is 01, then the Parameter Barcode content is: >!01080901.

Method two:

Scan the “Clear Suffix” Parameter Barcode



Clear Suffix

Clear the symbology by scanning the Numeric Barcodes in pairs.

For example: you need to clear the suffix of Code 128. According to the barcode type in Appendix F, the hexadecimal value of the barcode type of Code 128 is 01, then scan 0 and 1 respectively.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

6.7 Hide Fixed Characters

This function can hide strings that the user does not need to output based on needs.

Hide Fixed Character Switch



* Disable



Enable

Hide Fixed Character Settings

There are two methods for hiding fixed character settings. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Hide fixed character Parameter Barcode content format: >!010802XX. XX is a setting variable, XX is expressed in hexadecimal, two characters are one unit, and any shortage is filled with 0. It can be superimposed arbitrarily, with a maximum of 20 digits.

For example: if you need to set the hidden character A, check the character comparison table in Appendix E. The hexadecimal value is 41, and the Parameter Barcode content is: >!01080241.

For example: if you need to set the hidden character ABC, check the character comparison table in Appendix E. The hexadecimal value is 414243, then the Parameter Barcode content is: >!010802414243.

Method two:

Scan the “Hide Fixed Characters” Parameter Barcode



Hide Fixed Characters

Scan the Numeric Barcodes in pairs.

For example: if you need to hide character A, check the character comparison table in Appendix E. If the hexadecimal value is 41, scan 4 and 1 respectively.

For example: If you need to hide line breaks, check the character comparison table in Appendix E. If the hexadecimal value is 0A, scan 0 and A respectively.

Scan the “OK” Parameter Barcode to complete the setup.




Sure

6.8 Keep Barcode Data Based On Length

This function can retain the data required by the user in the barcode according to needs.

Keep Data Switch

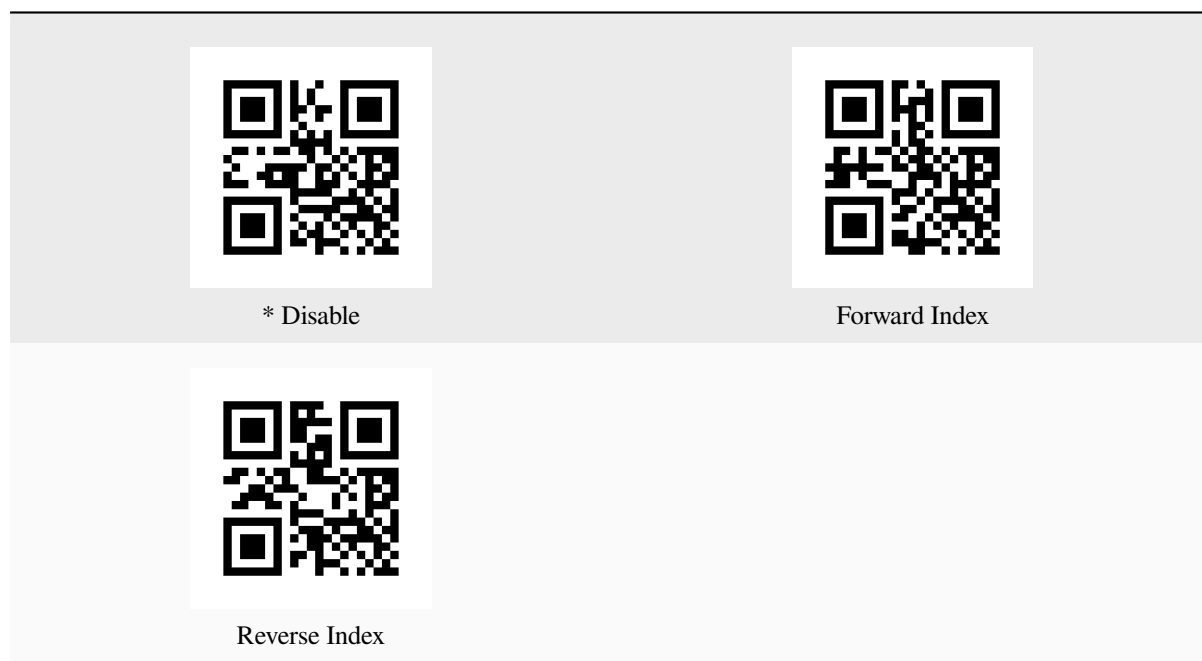

Note

Forward index (from the front end of the data to the starting position); reverse index (from the back end of the data to the starting position)

Keep Data Starting Position

There are two methods for initial setting. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

The starting position Parameter Barcode content format is: >!00102AXX. XX is the setting variable, and the decimal range is 1-65535.

For example, to set the start position to 11, use the Parameter Barcode content >!00102A11..

Method two:

Scan the “Start Position” Parameter Barcode



Starting Position

Scan the “Numeric Barcode” , starting from the number, scan the corresponding Numeric Barcode. For example, for the 11th digit, scan 1,1; for the 100th digit, scan 1,0,0.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Keep Data End Position

There are two methods to end the settings. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

The content format of the end position Parameter Barcode is: >!00102BXX. XX is the setting variable, and the decimal range is 1-65535.

For example, to set the end position to 50, use the Parameter Barcode content >!00102B50..

Method two:

Scan the “End Position” Parameter Barcode



End Position

Scan the “Numeric Barcode” , start from the end number, and scan the corresponding Numeric Barcode. For example, for the 50th position, scan 5,0.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

6.9 Hide Barcode Data Based On Length

This function can hide the data in the barcode that the user does not need according to the needs.

Hide Barcode Data Switch

	
* Disable	Forward Index
	
Reverse Index	

Note

Forward index (from the front end of the data to the starting position); reverse index (from the back end of the data to the starting position)

Hide Starting Position Of Barcode Data

There are two methods for initial setting. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

The content format of the starting position Parameter Barcode is: >!001027XX. Among them, XX is the setting variable, and the decimal range is 1-65535.

For example, to set the start position to 11, use the Parameter Barcode content >!00102711..

Method two:

Scan the “Start Position” Parameter Barcode



Starting Position

Scan the “Numeric Barcode” , starting from the number, scan the corresponding Numeric Barcode. For example, for the 11th digit, scan 1,1; for the 100th digit, scan 1,0,0.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Hide Barcode Data End Position

There are two methods to end the settings. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

The content format of the end position Parameter Barcode is: >!001028XX. XX is the setting variable, and the decimal range is 1-65535.

For example, to set the end position to 50, use the Parameter Barcode content >!00102850..

Method two:

Scan the “End Position” Parameter Barcode



End Position

Scan the “Numeric Barcode” , start from the end number, and scan the corresponding Numeric Barcode. For example, for the 11th position, scan 1,1;

For the 100th position, scan 1,0,0.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

6.10 Hide Barcode Data Of Any Length Based On Barcode Type

This function can hide data that users do not need in the barcode according to the barcode type according to the needs.

Hide Barcode Data Switch Based On Barcode Type

 * Disable	 Forward Index
 Reverse Index	

Note

Forward index (from the front end of the data to the starting position); reverse index (from the back end of the data to the starting position)

Hide Data Starting Position Based On Barcode Type

There are two methods for initial setting. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

The content format of the starting position of hidden data according to the barcode type is: >!01080AXXXX. Among them, XXXX is a setting variable. The first two XX represent the barcode type. The relevant hexadecimal value can be found according to Appendix F. The following XX is expressed in hexadecimal. Two characters are one unit. The missing ones are filled with 0. The length range is 0x0000-0xFFFF.

For example, to set the hidden-data start position for Code 128 to 11, Appendix F gives the Code 128 hexadecimal value as 01 and the hexadecimal value of 11 as 0B; use the Parameter Barcode content >!01080A010B..

Method two:

Scan the “Barcode Type and Starting Position” Parameter Barcode



Barcode Type And Starting Position

Set the symbology by scanning the Numeric Barcodes in pairs.

For example: Code 128 needs to be hidden. According to the barcode type in Appendix F, the hexadecimal value of the barcode type of Code 128 is 01, so scan 0 and 1 respectively.

Set the start position by scanning the Numeric Barcodes in pairs.

Position values are entered in hexadecimal. For example, position 11 corresponds to 0B, so scan 0 and B; position 100 corresponds to 64, so scan 6 and 4.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Hide Data End Position Based On Barcode Type

There are two methods to end the settings. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

The content format of the end position of the hidden data according to the barcode type is: >!01080BXXXX. XXXX is a setting variable. The first two XX represent the barcode type. The relevant hexadecimal value can be found according to Appendix F. The following XX is expressed in hexadecimal. Two characters are one unit. The insufficient ones are filled with 0. The length range is 0x0000-0xFFFF.

For example, to set the hidden-data end position for Code 128 to 100, Appendix F gives the Code 128 hexadecimal value as 01 and the hexadecimal value of 100 as 64; use the Parameter Barcode content >!
01080B0164..

Method two:

Scan the “Barcode Type and End Position” Parameter Barcode



Barcode Type And End Position

Set the symbology by scanning the Numeric Barcodes in pairs.

For example: Code 128 needs to be hidden. According to the barcode type in Appendix F, the hexadecimal value of the barcode type of Code 128 is 01, so scan 0 and 1 respectively.

Set the end position by scanning the Numeric Barcodes in pairs.

Position values are entered in hexadecimal. For example, position 11 corresponds to 0B, so scan 0 and B; position 100 corresponds to 64, so scan 6 and 4.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

6.11 Hide Any Length of Leading Data by Symbology

This feature hides any number of unwanted leading characters for the selected symbology.

Hide Leading Data by Symbology



* Disable



Enable

Set Leading-data Length by Symbology

There are two ways to set the length. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

The length format of data of any length hidden at the bottom of the barcode according to the barcode type is: >!01080CXXXX. Among them, XXXX is a setting variable. The first two XX represent the barcode type. The relevant hexadecimal value can be found in Appendix F. The following XX is expressed in hexadecimal. Two characters are one unit, and any shortage is filled with 0. The length range is 0x0000-0xFFFF.

For example, to hide 15 leading characters from Code 128 data, Appendix F gives the Code 128 hexadecimal value as 01 and the hexadecimal value of 15 as 0F; use the Parameter Barcode content >!01080C010F..

Method two:

Scan the “Barcode Type and Length” Parameter Barcode



Barcode Type And Length

Set the symbology by scanning the Numeric Barcodes in pairs.

For example: Code 128 needs to be hidden. According to the barcode type in Appendix F, the hexadecimal value of the barcode type of Code 128 is 01, so scan 0 and 1 respectively.

Set the length by scanning the Numeric Barcodes in pairs.

Length values are entered in hexadecimal. For example, length 11 corresponds to 0B, so scan 0 and B; length 100 corresponds to 64, so scan 6 and 4.

Scan the “OK” Parameter Barcode to complete the setup.




Sure

6.12 Hide Any Length of Trailing Data by Symbology

This feature hides any number of unwanted trailing characters for the selected symbology.

Hide Trailing Data by Symbology

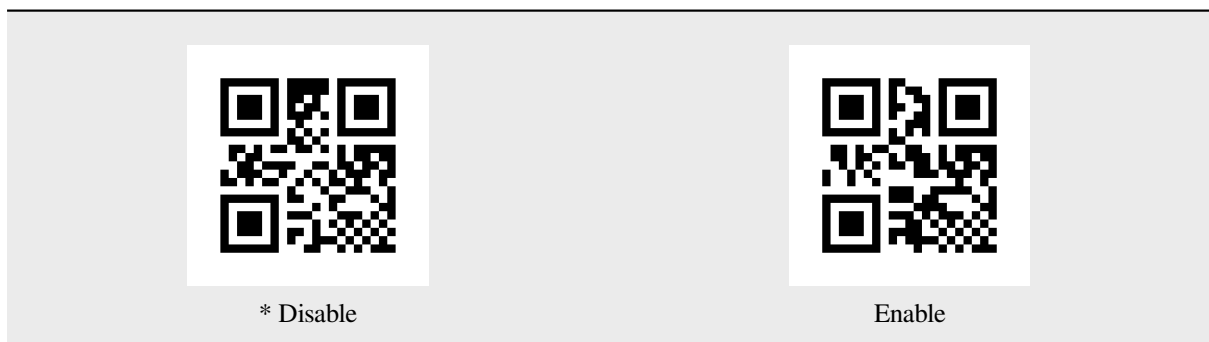

Set Trailing-data Length by Symbology

There are two ways to set the length. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

The length format of hiding any length of data at the end of the barcode according to the barcode type is: `>!01080DXXXX`. Among them, `XXXX` is a setting variable. The first two `XX` represent the barcode type. The relevant hexadecimal value can be found in Appendix F. The following `XX` is expressed in hexadecimal. Two characters are one unit, and any shortage is filled with 0. The length range is `0x0000-0xFFFF`.

For example, to hide 12 trailing characters from Code 128 data, Appendix F gives the Code 128 hexadecimal value as 01 and the hexadecimal value of 12 as 0C; use the Parameter Barcode content `>!01080D010C..`

Method two:

Scan the “Barcode Type and Length” Parameter Barcode



Barcode Type And Length

Set the symbology by scanning the Numeric Barcodes in pairs.

For example: Code 128 needs to be hidden. According to the barcode type in Appendix F, the hexadecimal value of the barcode type of Code 128 is 01, so scan 0 and 1 respectively.

Set the length by scanning the Numeric Barcodes in pairs.

Length values are entered in hexadecimal. For example, length 11 corresponds to 0B, so scan 0 and B; length 100 corresponds to 64, so scan 6 and 4.

Scan the “OK” Parameter Barcode to complete the setup.




Sure

6.13 Insert Custom Data

This function can insert user-defined data at any position in the barcode data according to requirements.

Insert Custom Data Switch

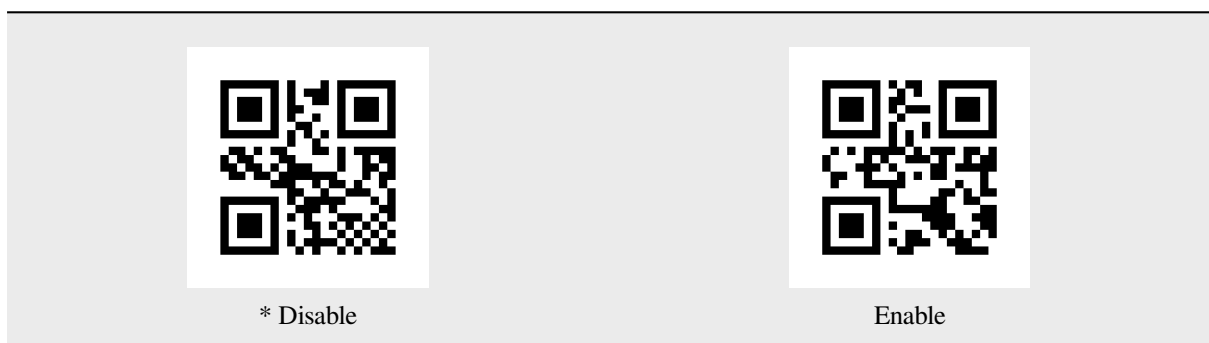

Custom Data

There are two methods for customizing data. The first method requires the user to generate a QR code, which tends to set up more users and is more flexible to use. The second method can scan the Parameter Barcode in this manual according to the steps.

Method one:

The content format of the custom inserted data Parameter Barcode: >!010803XX. XX is the setting variable, XX is expressed in hexadecimal, two characters are one unit, and any shortage is filled with 0. It can be superimposed arbitrarily, and a maximum of 20 digits of custom data are supported.

For example: If you need to insert custom data A, check the character comparison table in Appendix E. The hexadecimal value is 41, and the Parameter Barcode content is: >!01080341.

For example: if you need to insert custom data ABC, check the character comparison table in Appendix E. The hexadecimal value is 414243, then the Parameter Barcode content is: >!010803414243.

Method two:

Scan the “custom data” Parameter Barcode



Custom Data

Scan the Numeric Barcodes in pairs.

For example: If you need to insert custom data A, check the character comparison table in Appendix E. If the hexadecimal value is 41, scan 4 and 1 respectively.

For example: if you need to insert custom data ABC, check the character comparison table in Appendix E. The hexadecimal value is 414243, then scan 4, 1, 4, 2, 4, 3 respectively.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Insertion Position

There are two methods for setting the insertion position. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Insert the position Parameter Barcode content format: >!00102EXX. XX is the setting variable, the decimal range is 1-65535.

For example, to set the insertion position to 11, use the Parameter Barcode content >!00102E11..

Method two:

Scan the “Insert Position” Parameter Barcode



Insertion Position

Scan the “Numeric Barcode” , insert the position, and scan the corresponding Numeric Barcode. For example, for the 11th position, scan 1,1;

For the 100th position, scan 1,0,0.

Scan the “OK” Parameter Barcode to complete the setup.




Sure

6.14 Data Replacement

This function can replace the data in the original string with any data according to requirements.

Data Replacement Switch

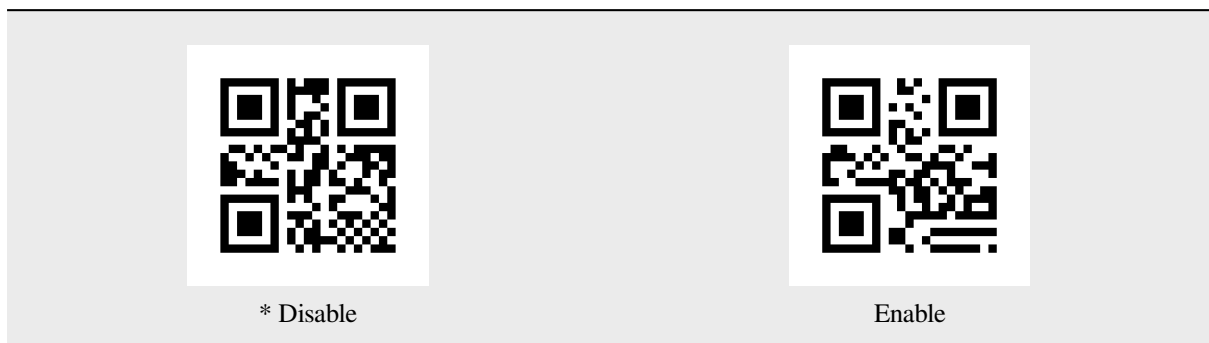

Replaced Data Settings

There are two methods for setting the replaced data. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

The content format of the replaced data Parameter Barcode is: >!010804XX. XX is the setting variable, and XX is expressed in hexadecimal. Two characters are one unit, and any shortage is filled with 0. It can be superimposed arbitrarily, and the maximum support is 20 digits.

For example: for the replaced data A, check the character comparison table in Appendix E. The hexadecimal value is 41, and the Parameter Barcode content is: >!01080441.

For example: for the replaced data ABC, check the character comparison table in Appendix E. The hexadecimal value is 414243, and the Parameter Barcode content is: >!010804414243.

Method two:

Scan the “replaced data” Parameter Barcode



Data To Be Replaced

Scan the Numeric Barcodes in pairs.

For example: for the replaced data A, check the character comparison table in Appendix E. If the hexadecimal value is 41, scan 4 and 1 respectively.

For example: if the replaced data is newline, check the character comparison table in Appendix E. If the hexadecimal is 0A, scan 0 and A respectively.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Replace Data Settings

There are two methods for replacing data settings. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Replacement data Parameter Barcode content format: >!010805XX. XX is the setting variable, XX is expressed in hexadecimal, two characters are one unit, and any shortage is filled with 0. It can be superimposed arbitrarily, and the maximum support is 20 digits.

For example: Data A replaces the original data, check the character comparison table in Appendix E, the hexadecimal value is 41, then the Parameter Barcode content is: >!01080541.

For example: data ABC replaces the original data, check the character comparison table in Appendix E, the hexadecimal value is 414243, then the Parameter Barcode content is: >!010805414243.

Method two:

Scan the “Replace Data” Parameter Barcode



Replace Data

Scan the Numeric Barcodes in pairs.

For example: Data A replaces the original data. Check the character comparison table in Appendix E. If the hexadecimal value is 41, scan 4 and 1 respectively.

For example: To replace the original data with newline data, check the character comparison table in Appendix E. If the hexadecimal is 0A, scan 0 and A respectively.

Scan the “OK” Parameter Barcode to complete the setup.



Sure

6.15 Line Feed And Carriage Return

Line feed (\n) and carriage return line feed (\r\n) are both converted to carriage return (\r).




* Disable



Enable

6.16 URL Switch

To prevent barcodes with URL information from being mistakenly scanned when scanning product barcodes, or in some other special applications, this function can disable the recognition of barcodes with URL information as needed.

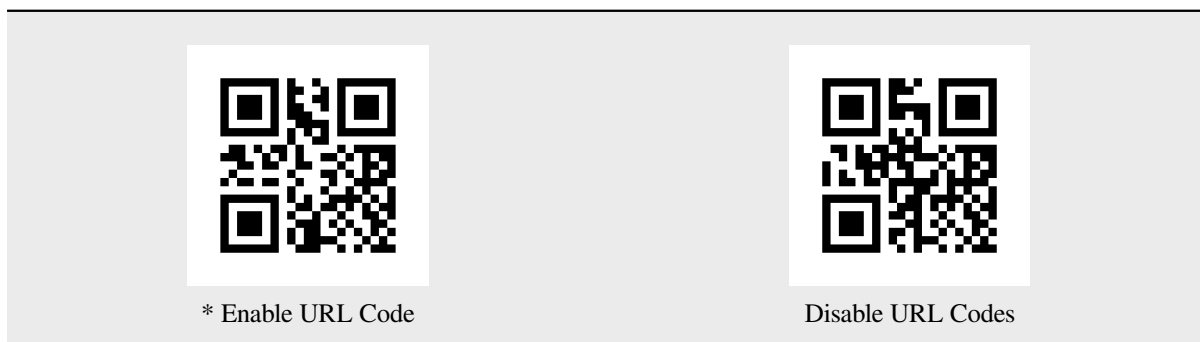


6.17 Invoicing Function

In order to use this module normally in the invoicing system, users can convert and output the invoice code format by scanning the following Parameter Barcode.


Note

This function supports Alipay QR code invoicing, but does not support WeChat QR code invoicing.

Invoicing Function Switch

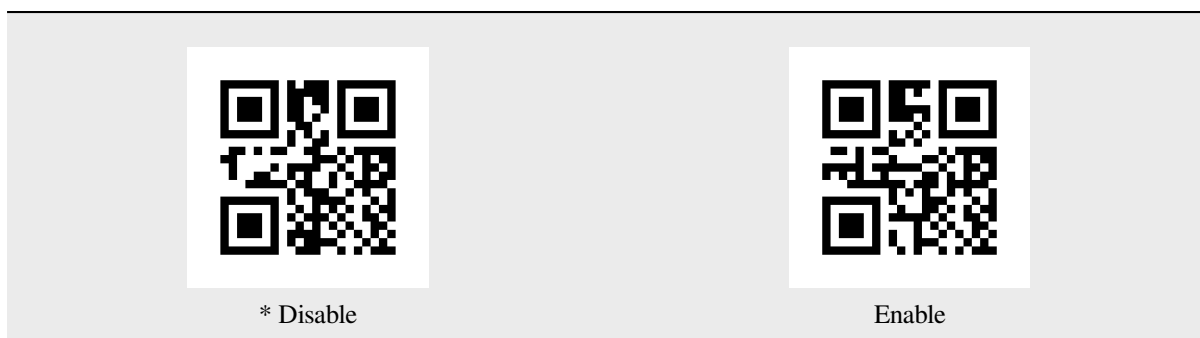


Invoice type

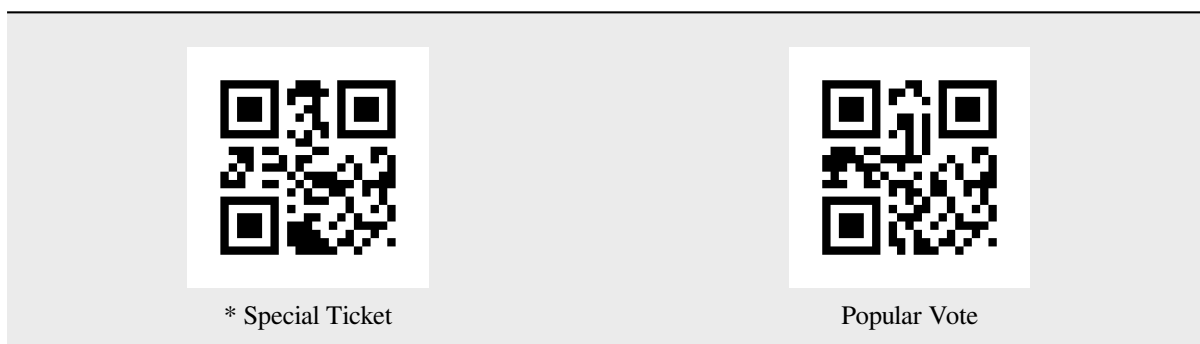

6.18 GS1 Rules Enabled

Enable GS1 rules and enclose AI segments in parentheses.

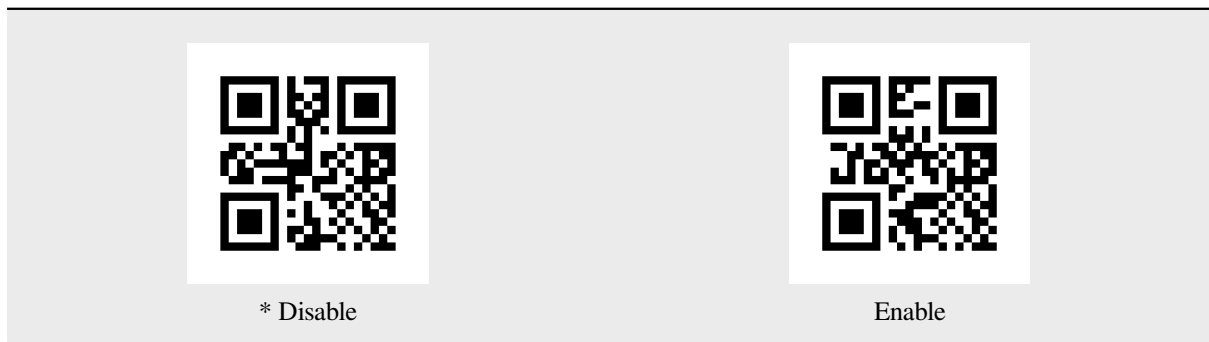

7 Character Settings

7.1 Character Set

Input Character Set

To configure the character set used by the Barcode Data, scan the “Input Character Set” Parameter Barcode.



Output Character Set

In order to meet the needs of the host character set, you can set it by reading the “output character set” .



8 Barcode Settings

8.1 Barcode Global Operations

Global Switch



Global 1D Barcode Switch



Disable



Enable



* Default

Global 2D Barcode Switch



Disable




Enable



* Default

Barcode Security Level


Five security levels are available to reduce decoding errors under difficult conditions. Higher levels improve reliability but may reduce decoding speed.

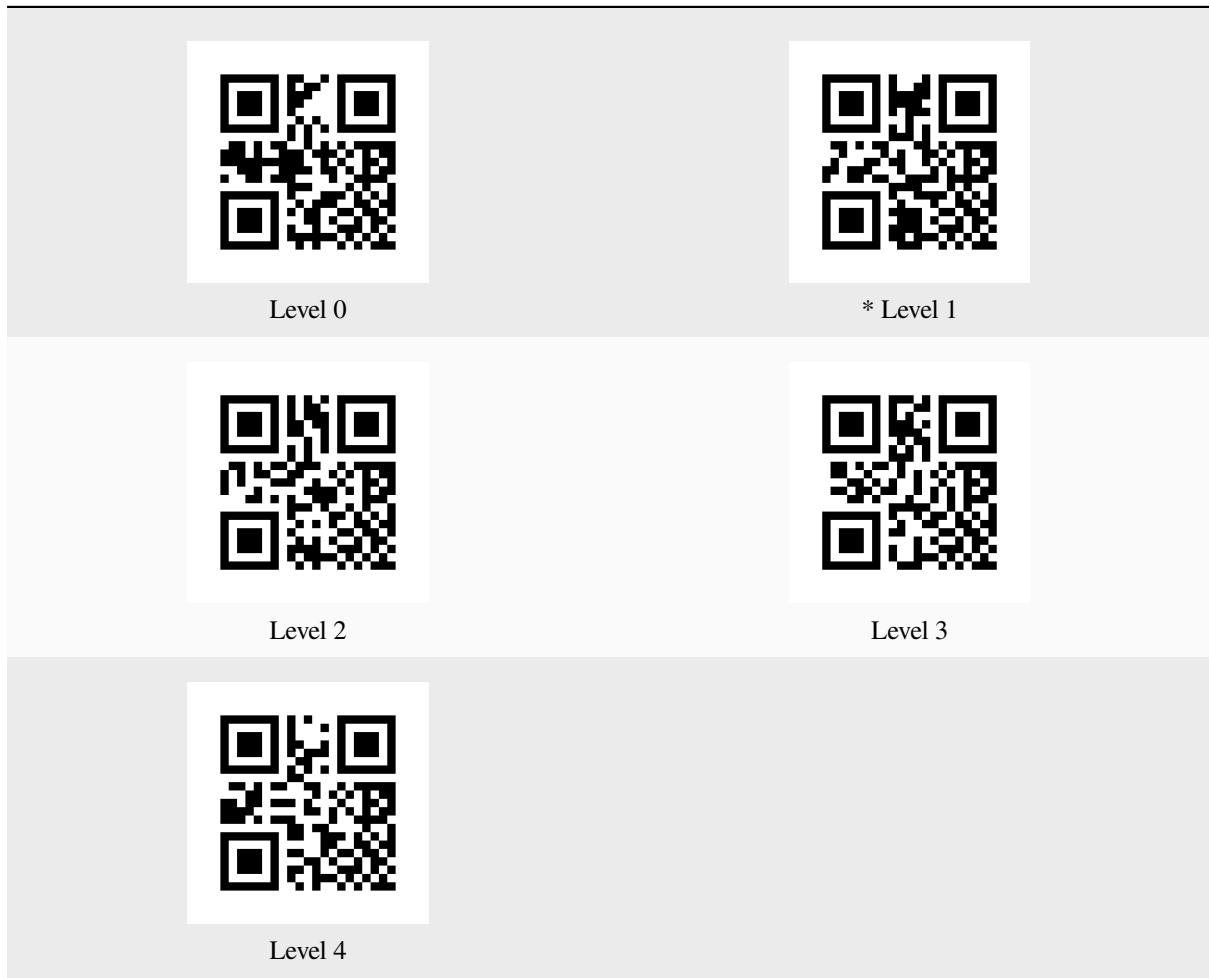

Multi-code Identification

In special application scenarios, multiple barcodes need to be read at the same time. Scanning the following Parameter Barcode will enable/disable multi-code reading.

Must Read Multiple Codes

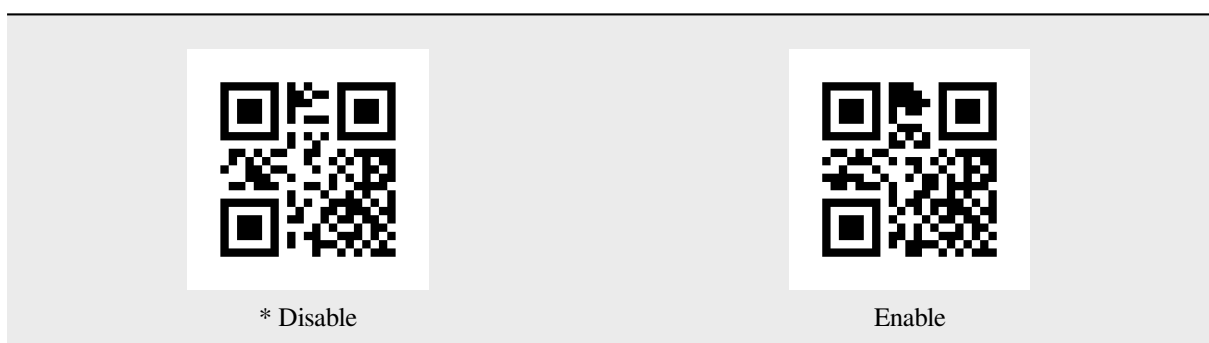

Read Multiple Codes




Global Inverse-reading Switch

Scan the following Parameter Barcode to enable/disable inverse reading.

Note

Enabling inverse reading globally may significantly reduce Barcode Reader performance. For commonly used symbologies, enable inverse reading only for the required symbology.

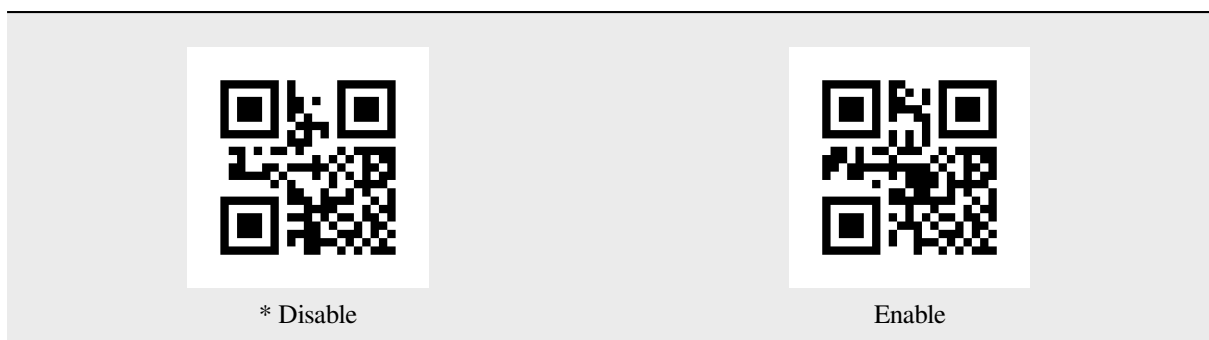

Local Inverse-reading Switch

Code 128 inverse-reading switch

Scan the following Parameter Barcode to enable/disable inverse reading of Code 128 barcodes. This setting is also valid for GS1-128



* Disable



Enable

EAN/UPC Inverse-reading Switch

Scan the following Parameter Barcode to enable/disable inverse reading of EAN/UPC barcodes.



* Disable




Enable

ITF25 inverse-reading switch

Scan the following Parameter Barcode to enable/disable inverse reading of ITF25 barcodes.




* Disable

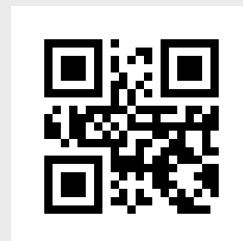

Enable


Code 39 inverse-reading switch

Scan the following Parameter Barcode to enable/disable inverse reading of Code 39 barcodes.

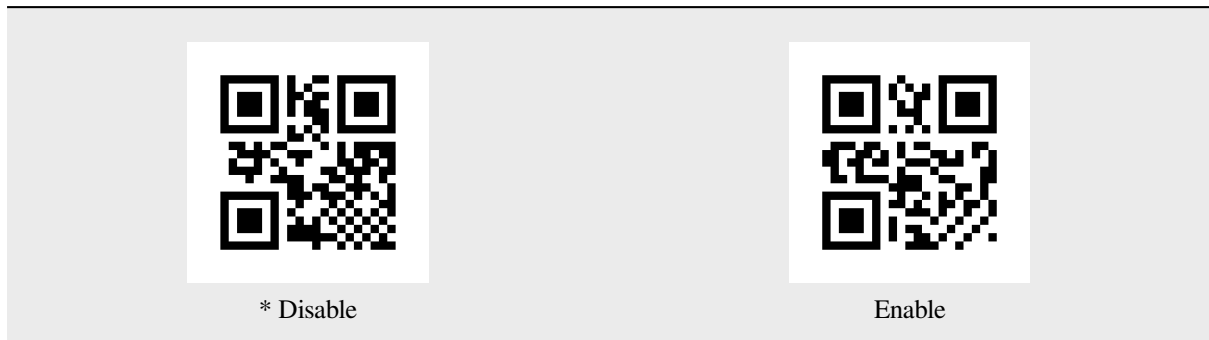


Codabar inverse-reading switch

Scan the following Parameter Barcode to enable/disable inverse reading of Codabar barcodes.

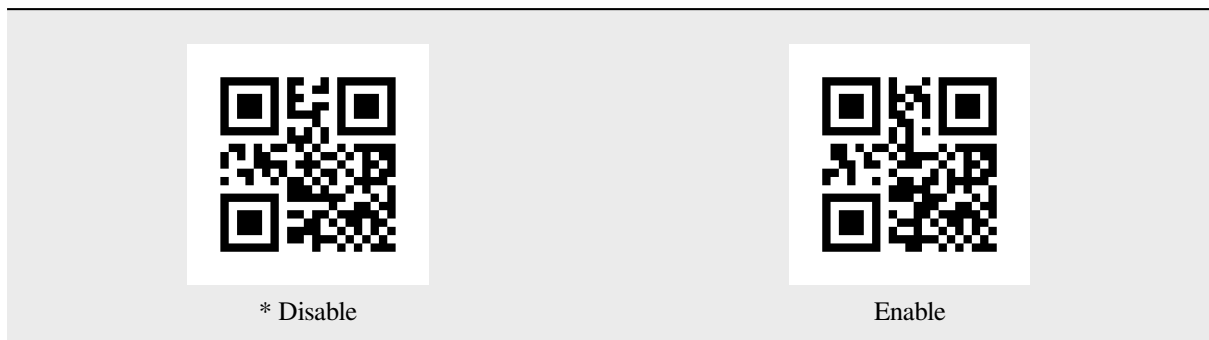

Code 93 inverse-reading switch


Scan the following Parameter Barcode to enable/disable inverse reading of Code 93 barcodes.

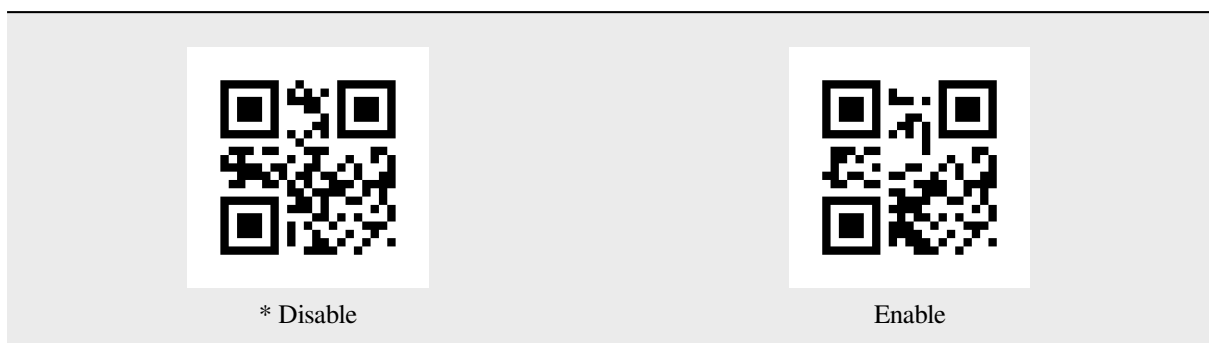

8.2 Code 128

Code 128 Switch

Scan the following Parameter Barcode to enable/disable reading of Code 128 barcodes.

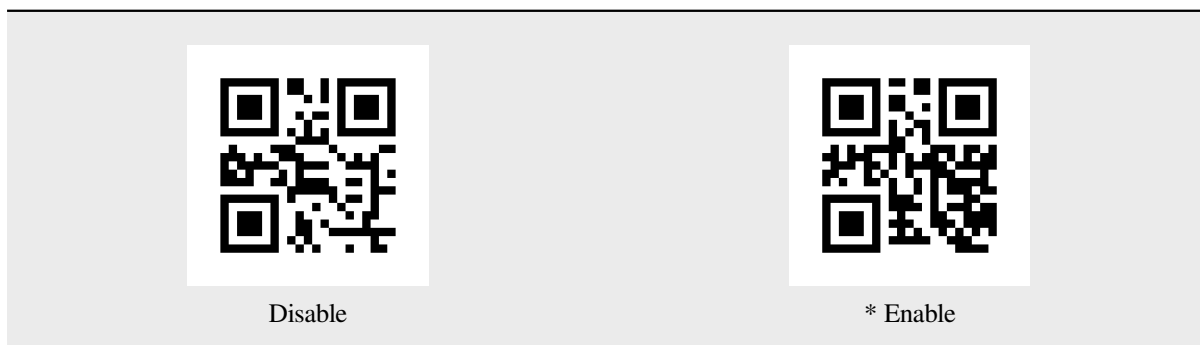

Code 128 Minimum Length

There are two methods for setting the minimum length of Code 128. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Code 128 Minimum length Parameter Barcode content format: >!000012XX. XX is a setting variable, with a decimal range of 0-255.

For example: Code 128 minimum length is set to 2, then the Parameter Barcode content is: >!0000122.

For example: Code 128 minimum length is set to 12, then the Parameter Barcode content is: >!00001212.

Method two:

Scan the “Code 128 Minimum Length” Parameter Barcode



Code 128 Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Code 128 Maximum Length

There are two methods for setting the maximum length of Code 128. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Code 128 Maximum length Parameter Barcode content format: >!000013XX. XX is a setting variable with a decimal range of 0-255.

For example: if the maximum length of Code 128 is set to 9, then the Parameter Barcode content is: >!0000139.

For example: Code 128 maximum length is set to 20, then the Parameter Barcode content is: >!00001320.

Method two:

Scan the “Code 128 Maximum Length” Parameter Barcode



Code 128 Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Code 128 Security Level

The higher the barcode security level, the lower the error rate, and the code reading effect will also be affected to a certain extent.



* Low



Medium



High

8.3 UCC/EAN-128/GS1-128

GS1 128 Switch

Scan the following Parameter Barcode to enable/disable reading of the GS1 128 barcode.



Disable



* Enable

GS1 128 Minimum Length

There are two methods for setting the minimum length of GS1 128. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

GS1 128 minimum length Parameter Barcode content format: >!000022XX. XX is a setting variable with a decimal range of 0-255.

For example: if the minimum length of GS1 128 is set to 2, then the Parameter Barcode content is: >!0000222.

For example: if the minimum length of GS1 128 is set to 12, then the Parameter Barcode content is: >!00002212.

Method two:

Scan the “GS1 128 minimum length” Parameter Barcode



GS1 128 Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

GS1 128 Maximum Length

There are two methods for setting the maximum length of GS1 128. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

GS1 128 maximum length Parameter Barcode content format: >!000023XX. XX is a setting variable with a decimal range of 0-255.

For example: if the maximum length of GS1 128 is set to 9, then the Parameter Barcode content is: >!0000239.

For example: if the maximum length of GS1 128 is set to 20, then the Parameter Barcode content is: >!00002320.

Method two:

Scan the “GS1 128 maximum length” Parameter Barcode



GS1 128 Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.



Sure

8.4 EAN-8

EAN-8 Switch

Scan the following Parameter Barcode to enable/disable EAN-8 barcode reading.




Disable



* Enable

EAN-8 Check Digit Transmission

Scan the following Parameter Barcode to set whether EAN-8 transmits the check digit.

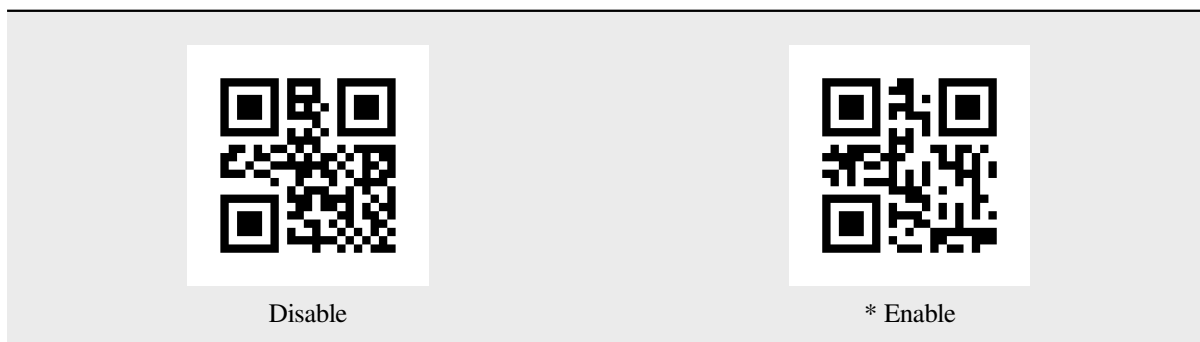


EAN-8 Reads 2-digit Additional Code

Scan the following Parameter Barcode to set whether EAN-8 can read the 2-digit additional code.



EAN-8 Reads 5-digit Additional Code

Scan the following Parameter Barcode to set whether EAN-8 can read the 5-digit additional code.

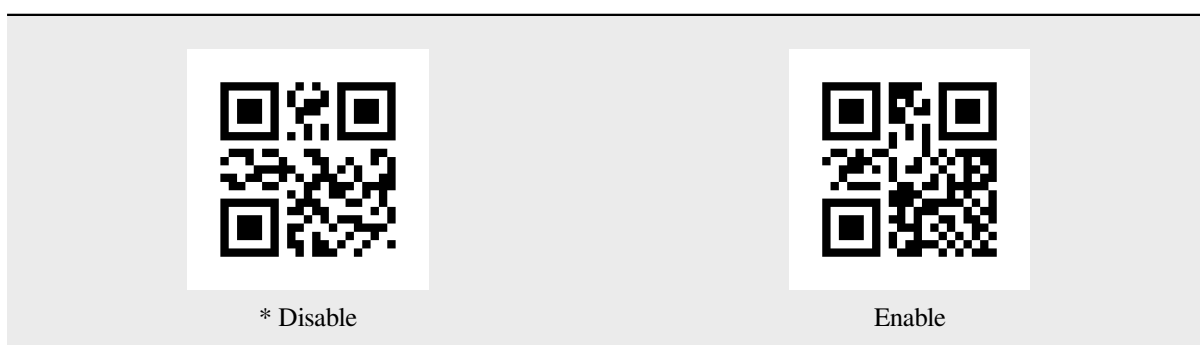

Read Only With Add-on Code EAN-8

Scan the following Parameter Barcode to set whether to read only EAN-8 with additional code.

	
* Disable	Enable

8.5 EAN-13

EAN-13 Switch

Scan the following Parameter Barcode to enable/disable EAN-13 barcode reading.

	
Disable	* Enable


EAN-13 Check Digit Transmission

Scan the following Parameter Barcode to set whether EAN-13 transmits check digits.

	
Disable	* Enable

EAN-13 Reads 2-digit Additional Code

Scan the following Parameter Barcode to set whether EAN-13 can read the 2-digit additional code.

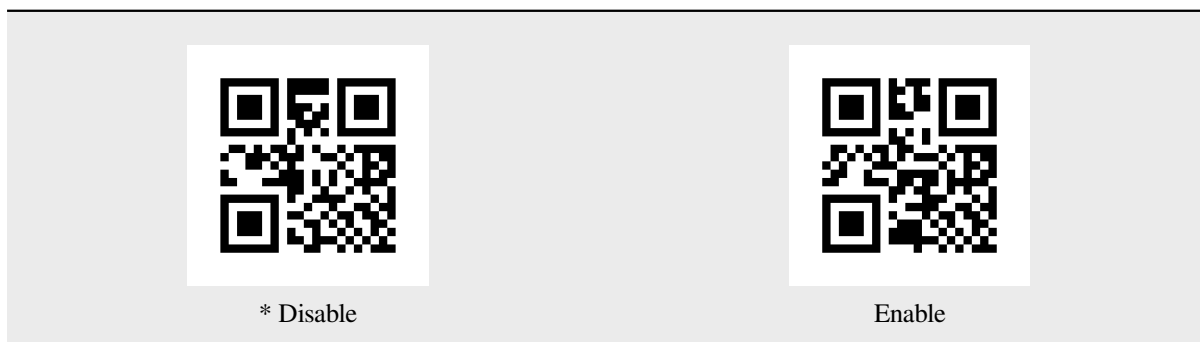


EAN-13 Reads 5-digit Additional Code

Scan the following Parameter Barcode to set whether EAN-13 can read the 5-digit additional code.



Read Only With Add-on Code EAN-13

Scan the following Parameter Barcode to set whether to read only EAN-13 with additional code.

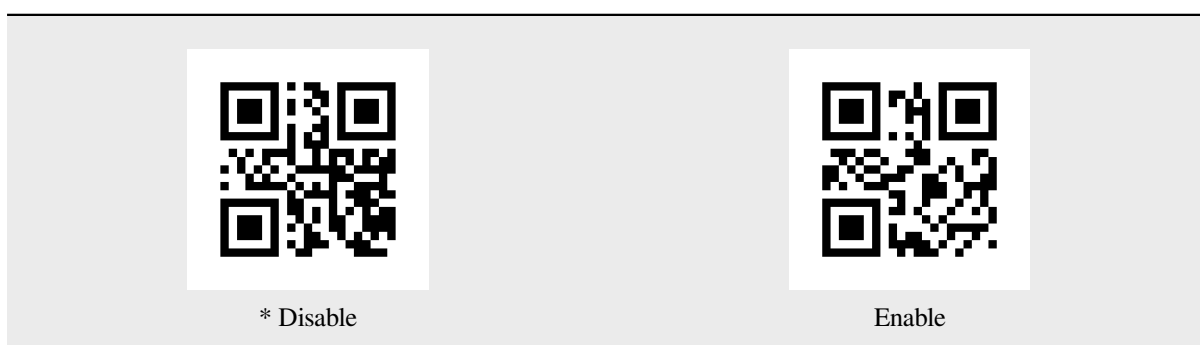

8.6 ISSN

Scan the following Parameter Barcode to enable/disable ISSN barcode reading.

Note

Disable ISSN, ISSN will be treated as EAN-13



* Disable



Enable

8.7 ISBN

Scan the following Parameter Barcode to enable/disable ISBN barcode reading.

Note

Disable ISBN, ISBN will be treated as EAN-13



* Disable



Enable

8.8 UPC-E

UPC-E Switch

Scan the following Parameter Barcode to enable/disable reading of UPC-E barcodes.



Disable



* Enable

UPC-E Check Digit Transmission

Scan the following Parameter Barcode to set whether UPC-E transmits the check digit.

	
Disable	* Enable

UPC-E Reads 2-digit Additional Code

Scan the following Parameter Barcode to set whether UPC-E can read the 2-digit additional code.

	
* Disable	Enable


UPC-E Reads 5-digit Additional Code

Scan the following Parameter Barcode to set whether UPC-E can read the 5-digit additional code.

	
* Disable	Enable


Read Only With Add-on Code UPC-E

Scan the following Parameter Barcode to set whether to read only UPC-E with additional code.

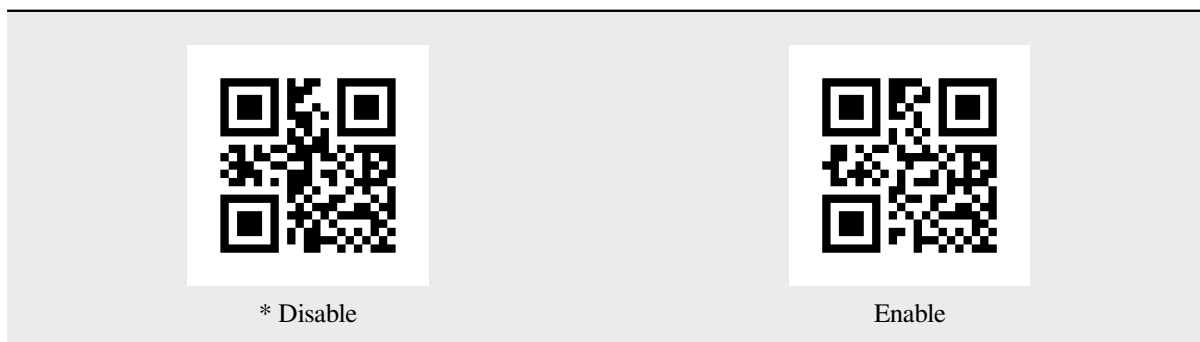


Transmission system character “0”

Scan the following Parameter Barcode to set whether UPC-E transmits the system character “0” .

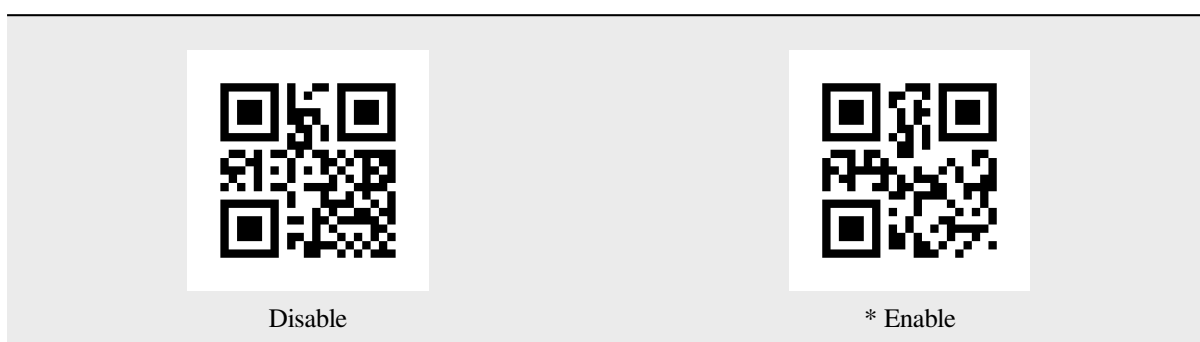


UPC-E To UPC-A

Scan the following Parameter Barcode to set whether to convert UPC-E to UPC-A.

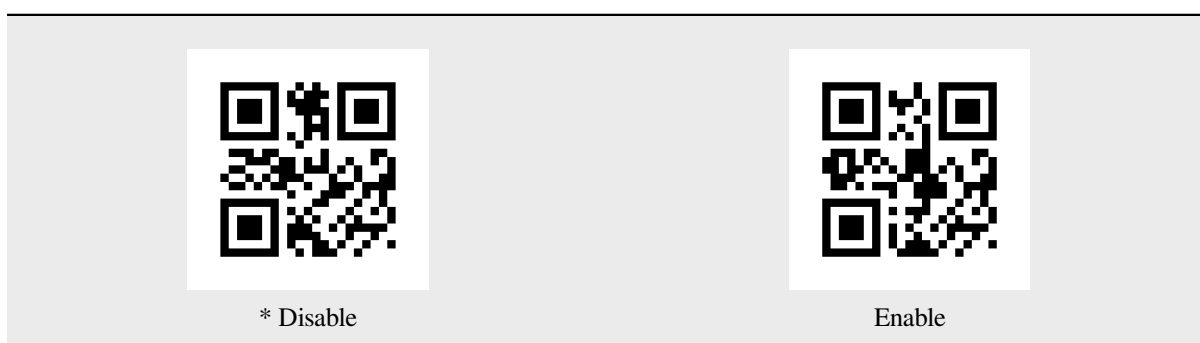


UPC-E1 Switch

Scan the following Parameter Barcode to set whether to read UPC-E1.

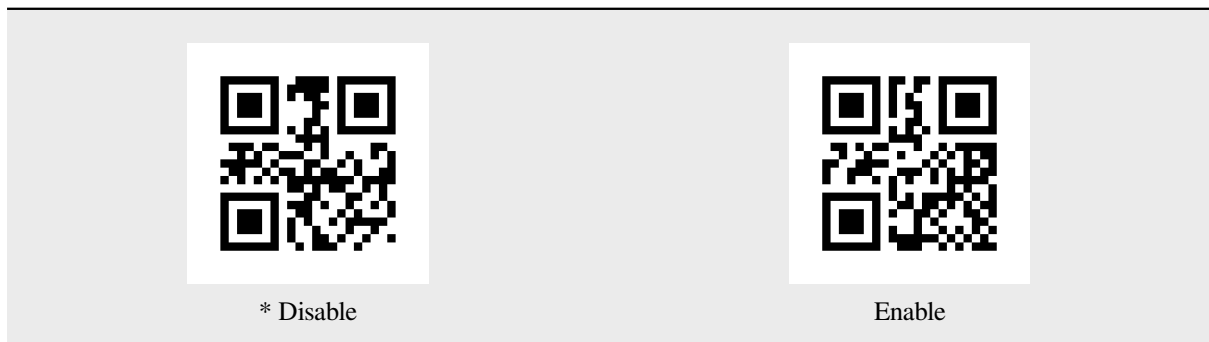

Transmit national character “0”


Scan the following Parameter Barcode to set whether UPC-E transmits the national character “0” .

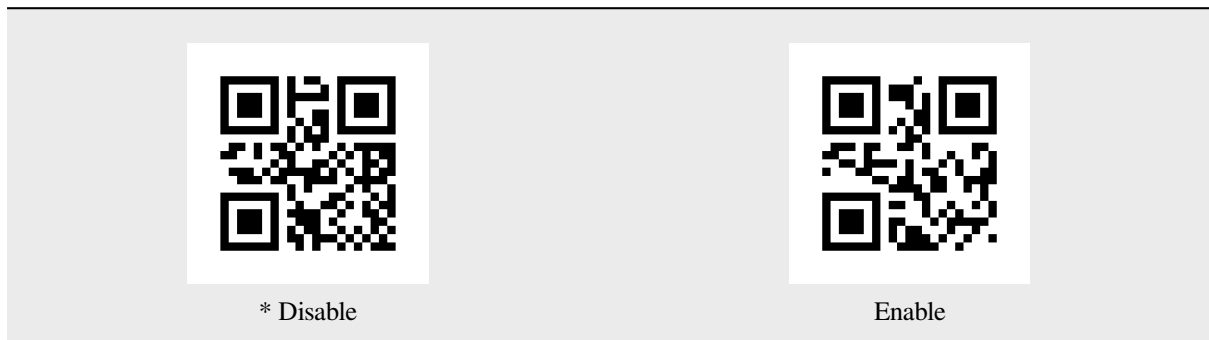

8.9 UPC-A

UPC-A Switch

Scan the following Parameter Barcode to enable/disable reading of UPC-A barcodes.

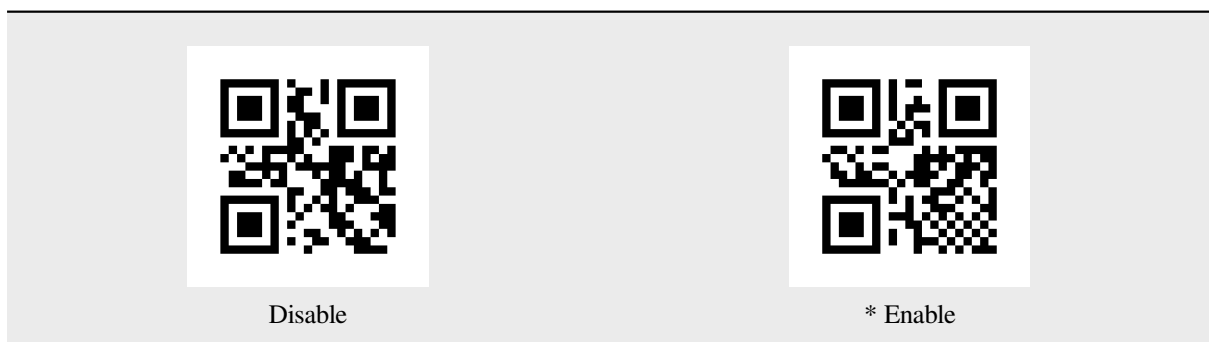

UPC-A Check Digit Transmission

Scan the following Parameter Barcode to set whether UPC-A transmits the check digit.



Disable



* Enable

UPC-A Reads 2-digit Additional Code

Scan the following Parameter Barcode to set whether UPC-A can read the 2-digit additional code.



* Disable



Enable

UPC-A Reads 5-digit Additional Code

Scan the following Parameter Barcode to set whether UPC-A can read the 5-digit additional code.



* Disable



Enable

Read Only With Add-on Code UPC-A

Scan the following Parameter Barcode to set whether to read only UPC-A with additional code.

	
* Disable	Enable

Transmission system character “0”

Scan the following Parameter Barcode to set whether UPC-A transmits system characters.

	
Disable	* Enable

Transmit national character “0”


Scan the following Parameter Barcode to set whether UPC-E transmits the national character “0” .
(Whether UPC-A will be converted to EAN-13 will be set)

	
* Disable	Enable

8.10 ITF25


ITF25 Switch

Scan the following Parameter Barcode to enable/disable reading of ITF25 barcodes.

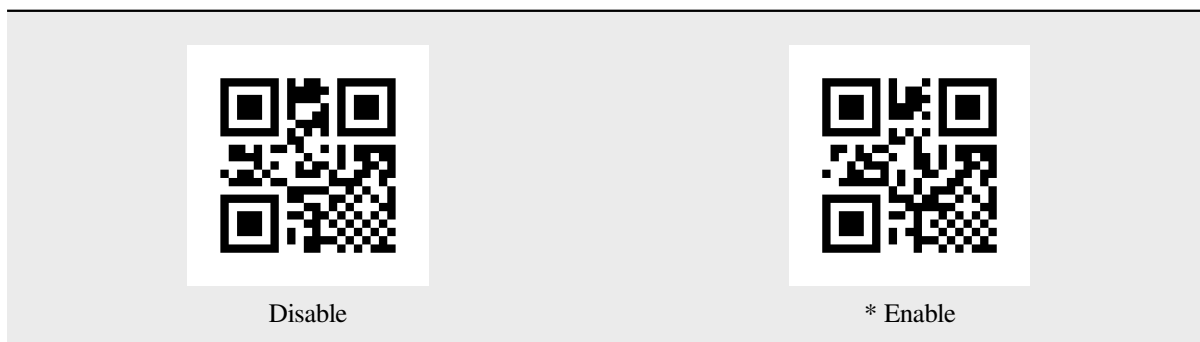

ITF25 Check Digit Verification

Scan the following Parameter Barcode to set whether the ITF25 check digit is verified.

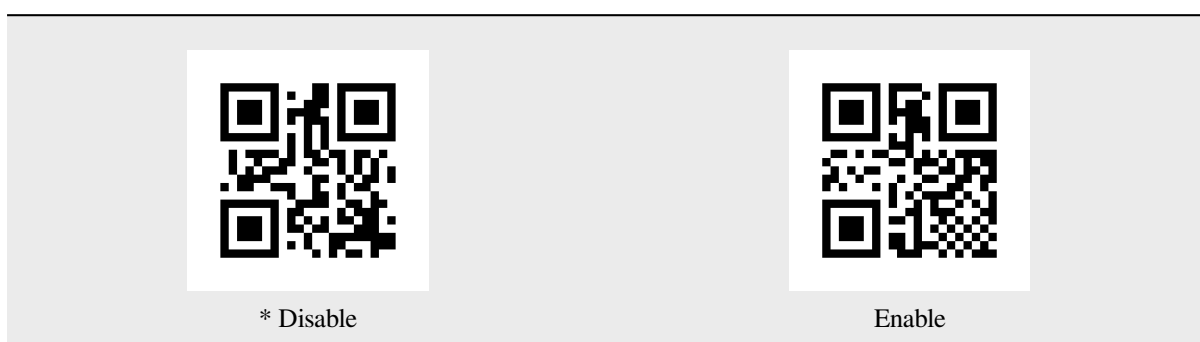


ITF25 Check Digit Transmission

Scan the following Parameter Barcode to set whether the ITF25 check digit is transmitted.

Note

To enable transmission check digit, please enable the check digit verification function first.

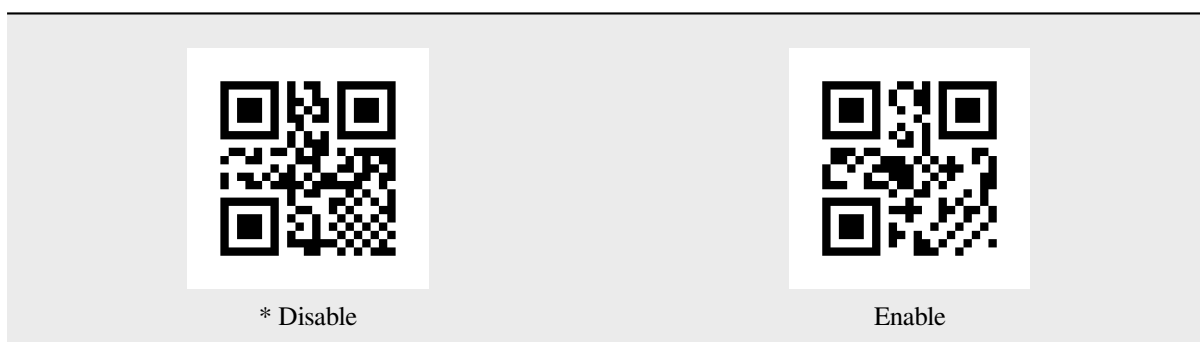

ITF25 Minimum Length

There are two methods for setting the minimum length of ITF25. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

ITF25 minimum length Parameter Barcode content format: >!0000B3XX. XX is a setting variable with a decimal range of 0-255.

For example: if the minimum length of ITF25 is set to 2, then the Parameter Barcode content is: >!0000B32.

For example: if the minimum length of ITF25 is set to 12, the Parameter Barcode content is: >!0000B312.

Method two:

Scan the “ITF25 minimum length” Parameter Barcode



ITF25 Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

ITF25 Maximum Length

There are two methods for setting the maximum length of ITF25. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

ITF25 maximum length Parameter Barcode content format: >!0000B4XX. XX is a setting variable, with a decimal range of 0-255.

For example: if the maximum length of ITF25 is set to 9, then the Parameter Barcode content is: >!0000B49.

For example: if the maximum length of ITF25 is set to 20, the Parameter Barcode content is: >!0000B420.

Method two:

Scan the “ITF25 maximum length” Parameter Barcode



ITF25 Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Brazilian Government/Bank Code



* Disable



Enable

8.11 NEC25/COOP25

NEC25 Switch

Scan the following Parameter Barcode to enable/disable NEC25 barcode reading.




* Disable



Enable

NEC25 Check Digit Verification

Scan the following Parameter Barcode to set whether the NEC25 check digit is verified.

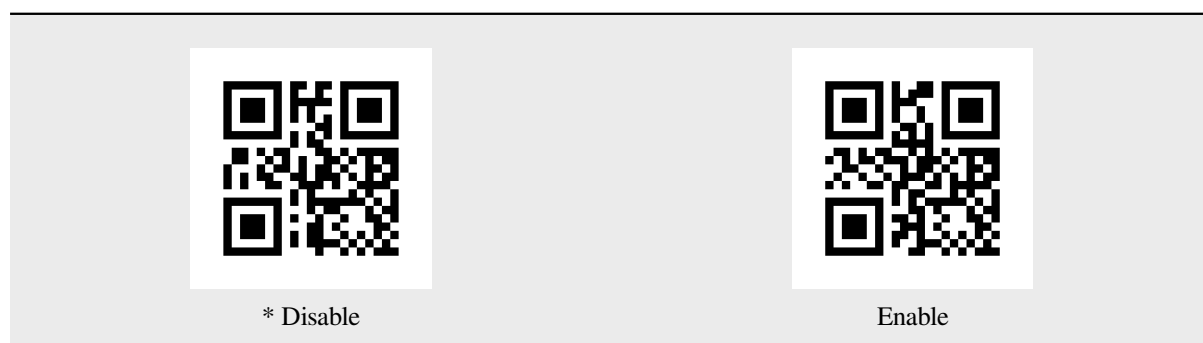


NEC25 Check Digit Transmission

Scan the following Parameter Barcode to set whether the NEC25 check digit is transmitted.



Note

To enable transmission check digit, please enable the check digit verification function first.

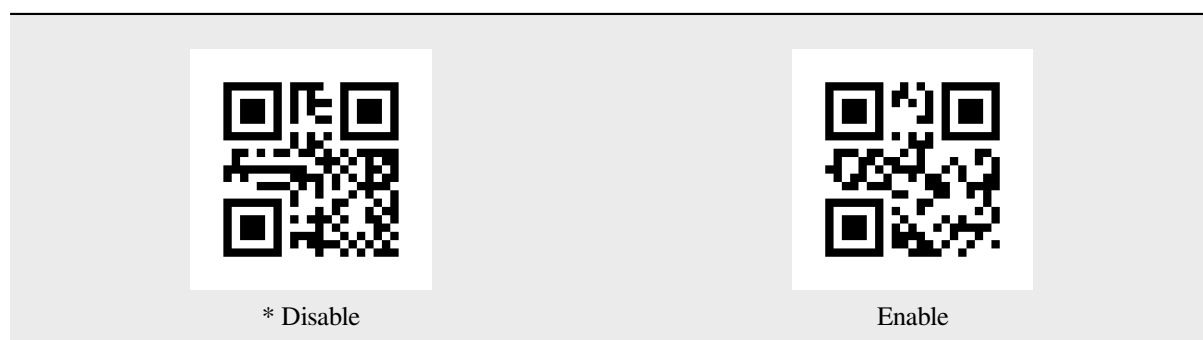

NEC25 Minimum Length

There are two methods for setting the minimum length of NEC25. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

NEC25 minimum length Parameter Barcode content format: >!000103XX. XX is a setting variable with a decimal range of 0-255.

For example: if the minimum length of NEC25 is set to 2, then the Parameter Barcode content is: >!0001032.

For example: if the minimum length of NEC25 is set to 12, the Parameter Barcode content is: >!00010312.

Method two:

Scan the “NEC25 minimum length” Parameter Barcode



NEC25 Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

NEC25 Maximum Length

There are two methods for setting the maximum length of NEC25. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

NEC25 maximum length Parameter Barcode content format: >!000104XX. XX is a setting variable with a decimal range of 0-255.

For example: if the maximum length of NEC25 is set to 9, the Parameter Barcode content is: >!0001049.

For example: if the maximum length of NEC25 is set to 20, the Parameter Barcode content is: >!00010420.

Method two:

Scan the “NEC25 maximum length” Parameter Barcode



NEC25 Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.



Sure

8.12 MATRIX25

MATRIX25 Switch

Scan the following Parameter Barcode to enable/disable MATRIX25 barcode reading.



* Disable



Enable

MATRIX25 Check Digit Verification

Scan the following Parameter Barcode to set whether the MATRIX25 check digit is verified.



* Disable



Enable

MATRIX25 Check Digit Transmission

Scan the following Parameter Barcode to set whether the MATRIX25 check digit is transmitted.

Note

To enable transmission check digit, please enable the check digit verification function first.



* Disable



Enable

MATRIX25 Minimum Length

There are two methods for setting the minimum length of MATRIX25. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

MATRIX25 minimum length Parameter Barcode content format: >!000113XX. XX is a setting variable, with a decimal range of 0-255.

For example: if the minimum length of MATRIX25 is set to 2, the Parameter Barcode content is: >!0001132.

For example: if the minimum length of MATRIX25 is set to 12, the Parameter Barcode content is: >!00011312.

Method two:

Scan the “MATRIX25 minimum length” Parameter Barcode



MATRIX25 Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

MATRIX25 Maximum Length

There are two methods for setting the maximum length of MATRIX25. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

MATRIX25 maximum length Parameter Barcode content format: >!000114XX. XX is a setting variable with a decimal range of 0-255.

For example: if the maximum length of MATRIX25 is set to 9, the Parameter Barcode content is: >!0001149.

For example: if the maximum length of MATRIX25 is set to 20, the Parameter Barcode content is: >!00011420.

Method two:

Scan the “MATRIX25 maximum length” Parameter Barcode



MATRIX25 Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.




Sure

8.13 IND25

IND25 Switch

Scan the following Parameter Barcode to enable/disable reading of IND25 barcodes.

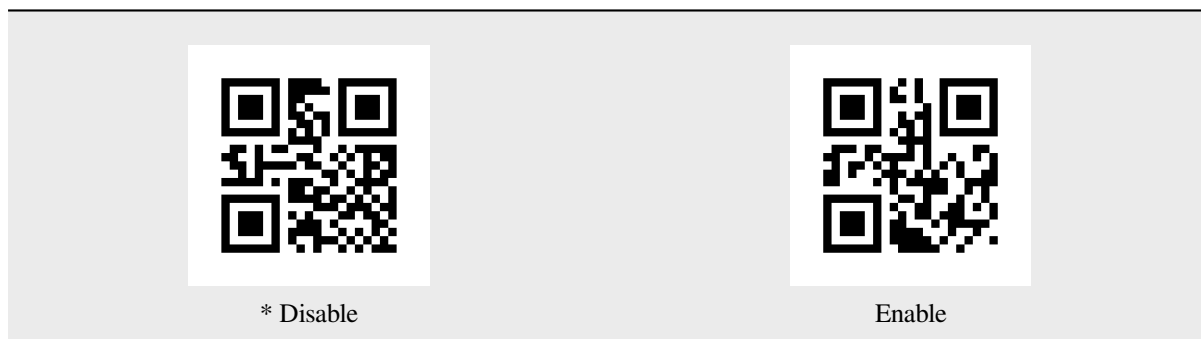

IND25 Minimum Length

There are two methods for setting the minimum length of IND25. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

IND25 minimum length Parameter Barcode content format: >!000123XX. XX is a setting variable with a decimal range of 0-255.

For example: if the minimum length of IND25 is set to 2, the Parameter Barcode content is: >!0001232.

For example: if the minimum length of IND25 is set to 12, the Parameter Barcode content is: >!00012312.

Method two:

Scan the “IND25 minimum length” Parameter Barcode



IND25 Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

IND25 Maximum Length

There are two methods for setting the maximum length of IND25. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

IND25 maximum length Parameter Barcode content format: >!000124XX. XX is a setting variable, with a decimal range of 0-255.

For example: if the maximum length of IND25 is set to 9, the Parameter Barcode content is: >!0001249.

For example: if the maximum length of IND25 is set to 20, the Parameter Barcode content is: >!00012420.

Method two:

Scan the “IND25 maximum length” Parameter Barcode



IND25 Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.




Sure

8.14 STD25

STD25 Switch

Scan the following Parameter Barcode to enable/disable STD25 barcode reading.

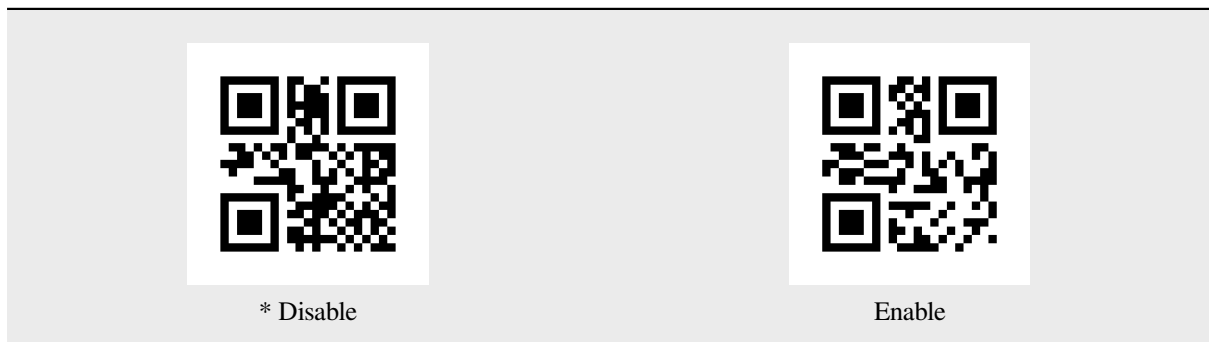

STD25 Minimum Length

There are two methods for setting the minimum length of STD25. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

STD25 minimum length Parameter Barcode content format: >!000133XX. XX is a setting variable with a decimal range of 0-255.

For example: if the minimum length of STD25 is set to 2, the Parameter Barcode content is: >!0001332.

For example: if the minimum length of STD25 is set to 12, the Parameter Barcode content is: >!00013312.

Method two:

Scan the “STD25 minimum length” Parameter Barcode



STD25 Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

STD25 Maximum Length

There are two methods for setting the maximum length of STD25. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

STD25 maximum length Parameter Barcode content format: >!000134XX. XX is a setting variable with a decimal range of 0-255.

For example: if the maximum length of STD25 is set to 9, the Parameter Barcode content is: >!0001349.

For example: if the maximum length of STD25 is set to 20, the Parameter Barcode content is: >!00013420.

Method two:

Scan the “STD25 maximum length” Parameter Barcode



STD25 Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.




Sure

8.15 Code 39


Code 39 Switch

Scan the following Parameter Barcode to enable/disable reading of Code 39 barcodes.

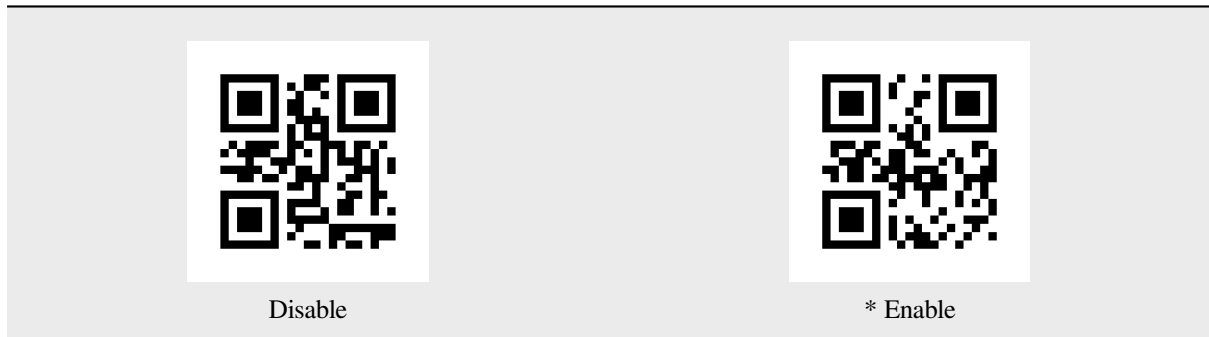

Code 39 check digit verification

Scan the following Parameter Barcode to set whether the Code 39 check digit is verified.

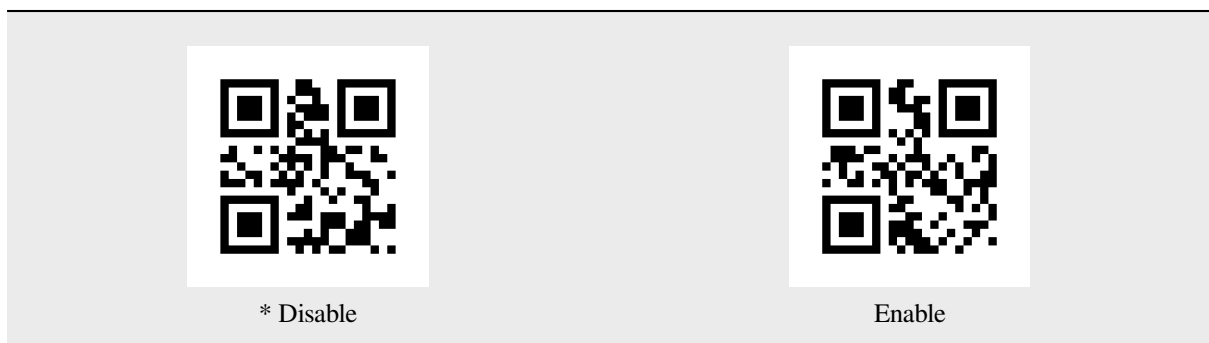


Code 39 Check Digit Transmission

Scan the following Parameter Barcode to set whether the Code 39 check digit is transmitted.


Note

To enable transmission check digit, please enable the check digit verification function first.

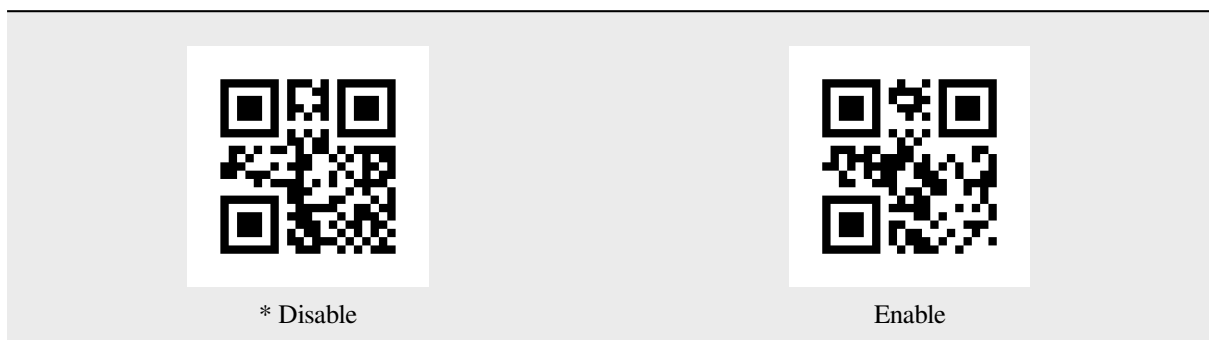


Code 39 Start/Stop Character Transmission

Scan the following Parameter Barcode to set whether the Code 39 start/stop character is transmitted.

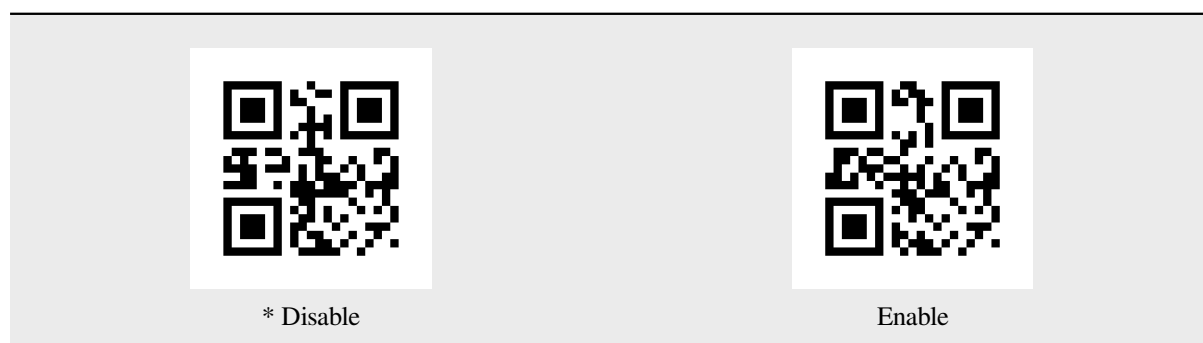

Code 39 FULL ASCII Switch

Scan the following Parameter Barcode to enable/disable reading of Code 39 FULL ASCII barcodes.

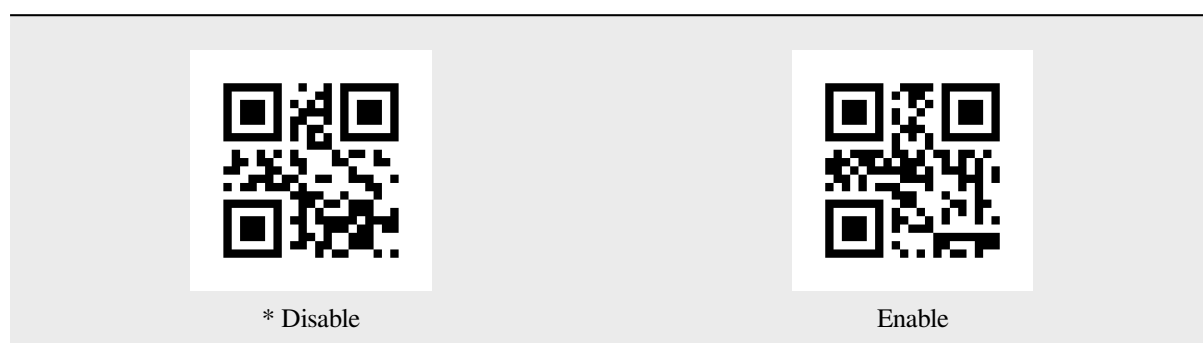

Code 39 Minimum Length

There are two methods for setting the minimum length of Code 39. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Code 39 Minimum length Parameter Barcode content format: >!000145XX. XX is a setting variable, with a decimal range of 0-255.

For example: if the minimum length of Code 39 is set to 2, the Parameter Barcode content is: >!0001452.

For example: Code 39 minimum length is set to 12, then the Parameter Barcode content is: >!00014512.

Method two:

Scan the “Code 39 Minimum Length” Parameter Barcode



Code 39 Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Code 39 Maximum Length

There are two methods for setting the maximum length of Code 39. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Code 39 Maximum length Parameter Barcode content format: >!000146XX. XX is a setting variable, with a decimal range of 0-255.

For example: if the maximum length of Code 39 is set to 9, then the Parameter Barcode content is: >!0001469.

For example: if the maximum length of Code 39 is set to 20, the Parameter Barcode content is: >!00014620.

Method two:

Scan the “Code 39 Maximum Length” Parameter Barcode



Code 39 Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Code 32 Switch

Scan the following Parameter Barcode to enable/disable the setting of Code 39 to Code 32



* Disable



Enable

Code 32 prefix

Scan the following Parameter Barcode to set whether the Code 32 prefix is transmitted.




* Disable



Enable

Code 32 Check Digit Verification

Scan the following Parameter Barcode to set whether the Code 32 check digit is verified.

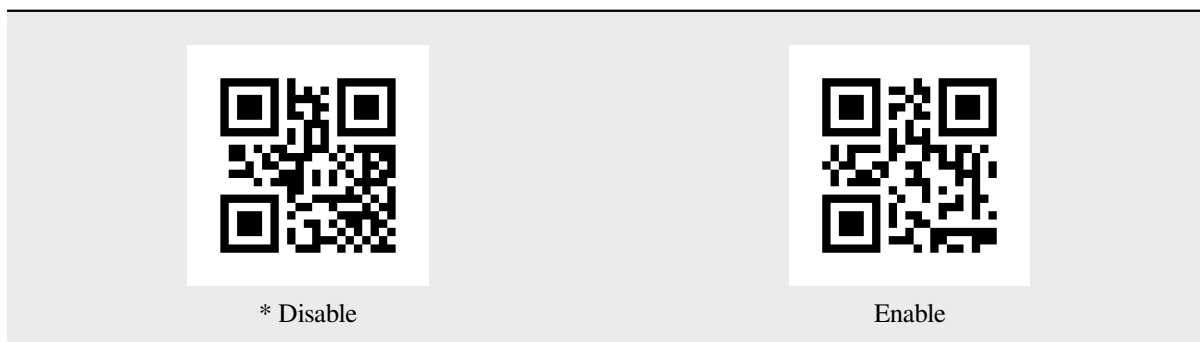


Code 32 Check Digit Transmission

Scan the following Parameter Barcode to set whether the Code 32 check digit is transmitted.

Note


To enable transmission check digit, please enable the check digit verification function first.

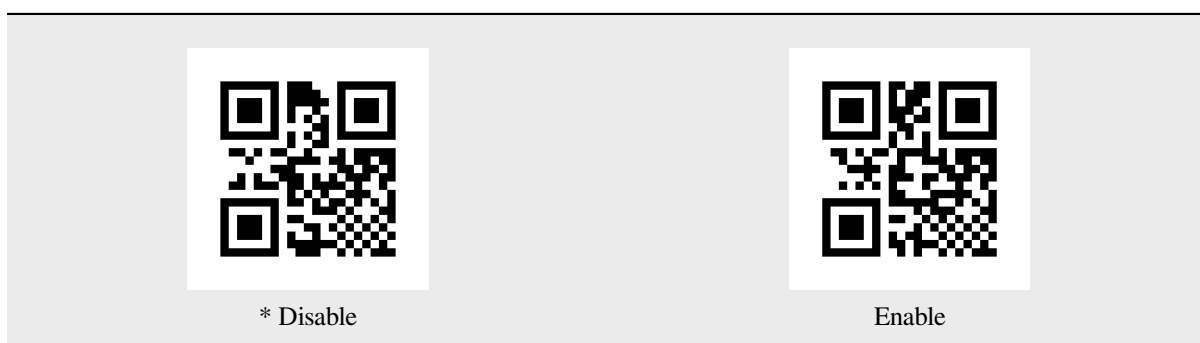

8.16 Codabar

Codabar Switch

Scan the following Parameter Barcode to enable/disable Codabar barcode reading.

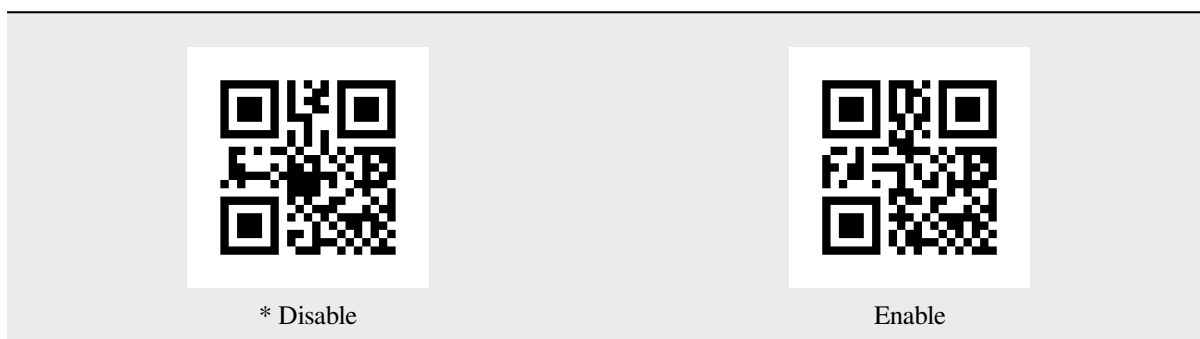

Codabar Check Digit Verification

Scan the following Parameter Barcode to set whether the Codabar check digit is verified.

	
* Disable	Enable

Codabar Check Digit Transmission

Scan the following Parameter Barcode to set whether the Codabar check digit is transmitted.

Note

To enable transmission check digit, please enable the check digit verification function first.

	
* Disable	Enable

Codabar Start/Stop Character Transmission

Scan the following Parameter Barcode to set whether the Codabar start/stop character is transmitted.

	
Disable	* Enable

Codabar Start/Stop Character Format

Scan the following Parameter Barcode to set the Codabar start/stop character format.

	
* Ordinary ABCD Format	ABCD/TN*E Format

Codabar Start/Stop Character Case

Scan the following Parameter Barcode to set whether the Codabar start/stop character is uppercase or lowercase.

	
*uppercase	Lower Case

Codabar Minimum Length

There are two methods for setting the minimum length of Codabar. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Codabar minimum length Parameter Barcode content format: >!000156XX. XX is a setting variable, with a decimal range of 0-255.

For example: if the minimum length of Codabar is set to 2, the Parameter Barcode content is: >!0001562.

For example: if the minimum length of Codabar is set to 12, the Parameter Barcode content is: >!00015612.

Method two:

Scan the “Codabar Minimum Length” Parameter Barcode



Codabar Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Codabar Maximum Length

There are two methods for setting the maximum length of Codabar. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Codabar maximum length Parameter Barcode content format: >!000157XX. XX is a setting variable, with a decimal range of 0-255.

For example: if the maximum length of Codabar is set to 9, the Parameter Barcode content is: >!0001579.

For example: if the maximum length of Codabar is set to 20, the Parameter Barcode content is: >!00015720.

Method two:

Scan the “Codabar Maximum Length” Parameter Barcode



Codabar Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.




Sure

8.17 Code 93

Code 93 Switch

Scan the following Parameter Barcode to enable/disable reading of Code 93 barcodes.

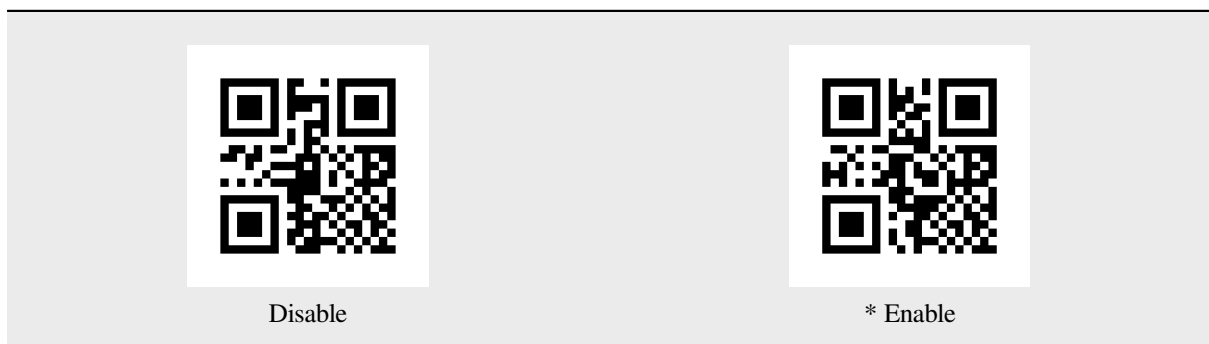

Code 93 Minimum Length

There are two methods for setting the minimum length of Code 93. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Code 93 Minimum length Parameter Barcode content format: >!000163XX. XX is a setting variable, with a decimal range of 0-255.

For example: Code 93 minimum length is set to 2, then the Parameter Barcode content is: >!0001632.

For example: Code 93 minimum length is set to 12, then the Parameter Barcode content is: >!00016312.

Method two:

Scan the “Code 93 Minimum Length” Parameter Barcode



Code 93 Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Code 93 Maximum Length

There are two methods for setting the maximum length of Code 93. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Code 93 Maximum length Parameter Barcode content format: >!000164XX. XX is a setting variable, with a decimal range of 0-255.

For example: Code 93 maximum length is set to 9, then the Parameter Barcode content is: >!0001649.

For example: if the maximum length of Code 93 is set to 20, the Parameter Barcode content is: >!00016420.

Method two:

Scan the “Code 93 Maximum Length” Parameter Barcode



Code 93 Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.



Sure

8.18 Code 11

Code 11 Switch

Scan the following Parameter Barcode to enable/disable reading of Code 11 barcodes.

	
* Disable	Enable

Code 11 Check Digit Verification

Scan the following Parameter Barcode to set whether the Code 11 check digit is verified.

	
* No Verification	One Check Digit
	
Two Check Digits	

Code 11 Check Digit Transmission

Scan the following Parameter Barcode to set whether the Code 11 check digit is transmitted.

Note

To enable transmission check digit, please enable the check digit verification function first.



* Disable



Enable

Code 11 Minimum Length

There are two methods for setting the minimum length of Code 11. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Code 11 Minimum length Parameter Barcode content format: >!000173XX. XX is a setting variable with a decimal range of 0-255.

For example: if the minimum length of Code 11 is set to 2, the Parameter Barcode content is: >!0001732.

For example: if the minimum length of Code 11 is set to 12, the Parameter Barcode content is: >!00017312.

Method two:

Scan the “Code 11 Minimum Length” Parameter Barcode



Code 11 Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

Code 11 Maximum Length

There are two methods for setting the maximum length of Code 11. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

Code 11 Maximum length Parameter Barcode content format: >!000174XX. XX is a setting variable with a decimal range of 0-255.

For example: if the maximum length of Code 11 is set to 9, the Parameter Barcode content is: >!0001749.

For example: if the maximum length of Code 11 is set to 20, the Parameter Barcode content is: >!00017420.

Method two:

Scan the “Code 11 Maximum Length” Parameter Barcode



Code 11 Maximum Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0

Scan the “OK” Parameter Barcode to complete the setup.



Sure

8.19 MSI Plessey

MSI Plessey Switch

Scan the following Parameter Barcode to enable/disable MSI Plessey barcode reading.

	
* Disable	Enable

MSI Plessey Check Digit Verification

Scan the following Parameter Barcode to set whether the MSI Plessey check digit is verified.

	
* MOD10 Single Character Check	MOD10/MOD10 Double Character Check


MOD10/MOD11 Double Character Check

MSI Plessey Check Digit Transmission

Scan the following Parameter Barcode to set whether the MSI Plessey check digit is transmitted.

Note

To enable transmission check digit, please enable the check digit verification function first.



* Disable



Enable

MSI Plessey Minimum Length

There are two methods for setting the minimum length of MSI Plessey. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

MSI Plessey minimum length Parameter Barcode content format: >!000193XX. XX is setting variable, decimal range 0-255.

For example: MSI Plessey minimum length is set to 2, then the Parameter Barcode content is: >!0001932.

For example: MSI Plessey' s minimum length is set to 12, then the Parameter Barcode content is: >!00019312.

Method two:

Scan the “MSI Plessey Minimum Length” Parameter Barcode



MSI Plessey Minimum Length

Scan the “Numeric Barcode” . For example, if the minimum length is 2 digits, scan 2; if the minimum length is 12 digits, scan 1,2

Scan the “OK” Parameter Barcode to complete the setup.



Sure

MSI Plessey Max Length

There are two methods for setting the maximum length of MSI Plessey. Method 1 requires the user to generate a QR code and is more flexible when configuring multiple values. Method 2 uses the Parameter Barcodes in this manual; scan them in the specified sequence.

Method one:

MSI Plessey maximum length Parameter Barcode content format: >!000194XX. XX is setting variable, decimal range 0-255.

For example: if the maximum length of MSI Plessey is set to 9, then the Parameter Barcode content is: >!0001949.

For example: if the maximum length of MSI Plessey is set to 20, the Parameter Barcode content is: >!00019420.

Method two:

Scan the “MSI Plessey Maximum Length” Parameter Barcode



MSI Plessey Max Length

Scan the “Numeric Barcode” . For example, if the maximum length is 9 digits, scan 9; if the maximum length is 20 digits, scan 2,0


Scan the “OK” Parameter Barcode to complete the setup.



Sure

8.20 GS1 DataBar/RSS

Scan the following Parameter Barcode to enable/disable reading of GS1 DataBar barcodes.

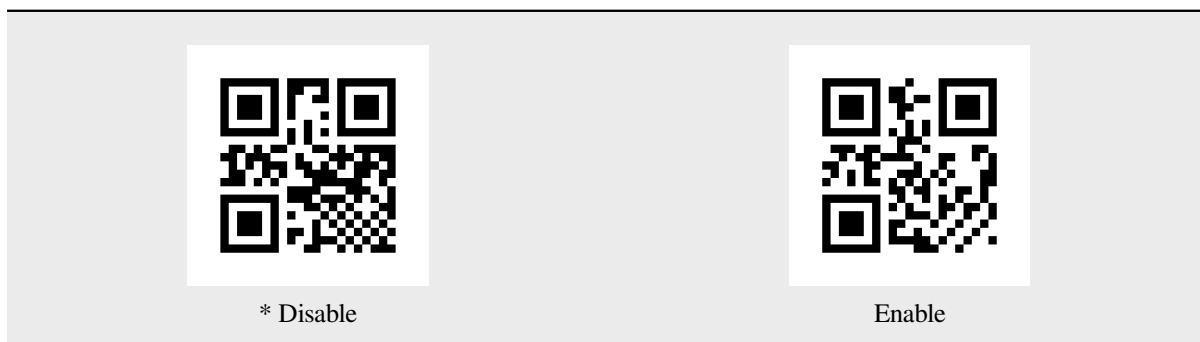

8.21 Composite Code

Scan the following Parameter Barcode to enable/disable reading of Composite Code barcodes.


Note

To enable Composite Code, please enable a separate corresponding code first.




8.22 TELEPEN

Scan the following Parameter Barcode to enable/disable TELEPEN barcode reading.

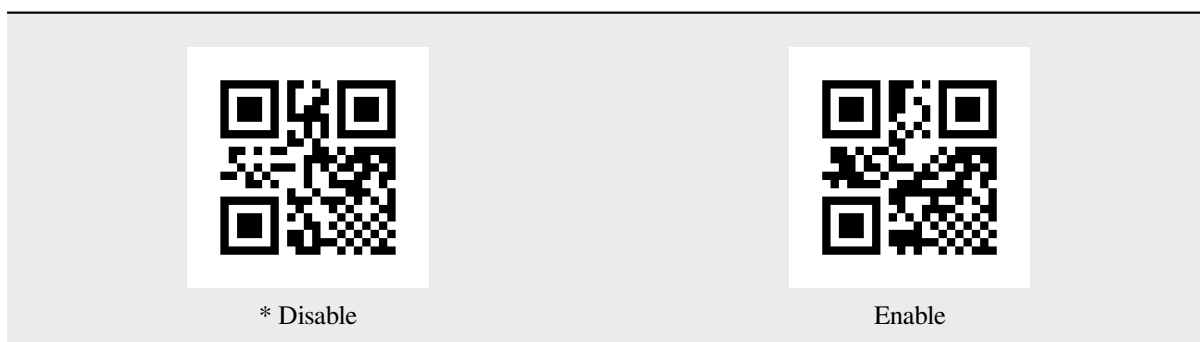


8.23 TRIOPTIC

Scan the following Parameter Barcode to enable/disable TRIOPTIC barcode reading.

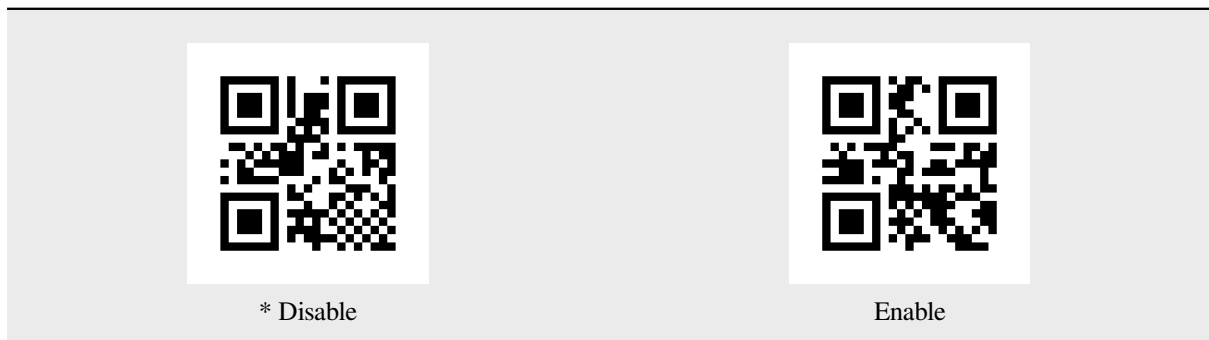


8.24 HONG KONG 2 OF 5/CHINA POST

Scan the following Parameter Barcode to enable/disable reading of the HONG KONG 2 of 5 barcode.

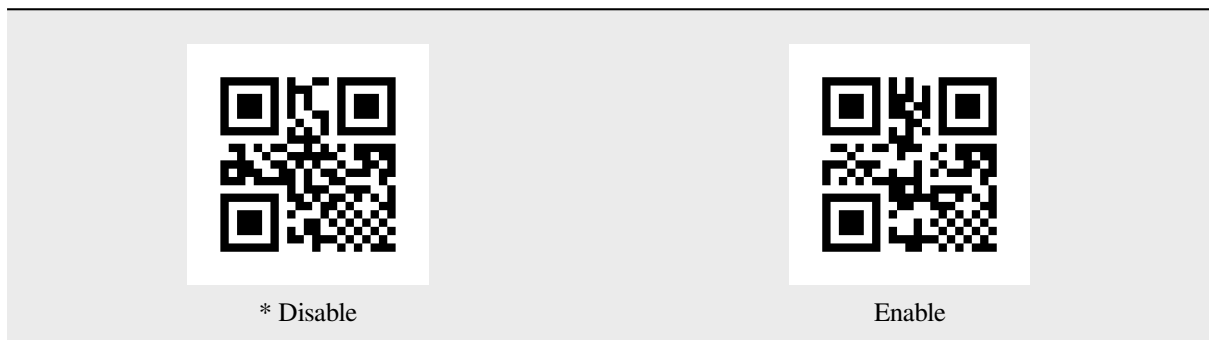


8.25 Korea Post/Korea Post

Scan the following Parameter Barcode to enable/disable reading of KOREA POST/Korea Post barcodes.
The barcode length must be 6 bytes.

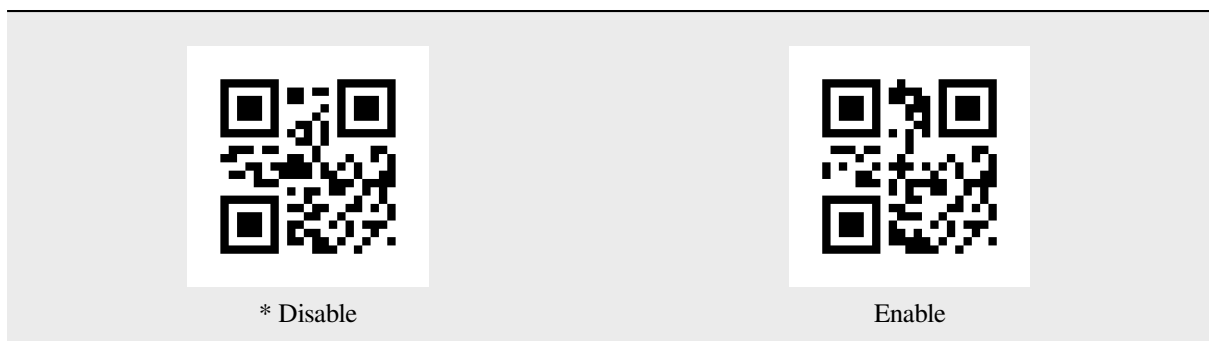


KOREA POST Check Digit Transmission

Scan the following Parameter Barcode to set whether the KOREA POST check digit is transmitted.

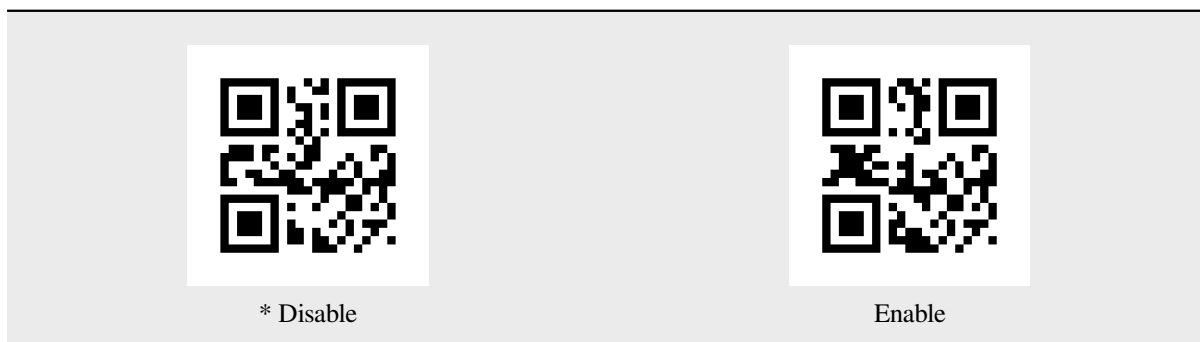


KOREA POST Data Reversed

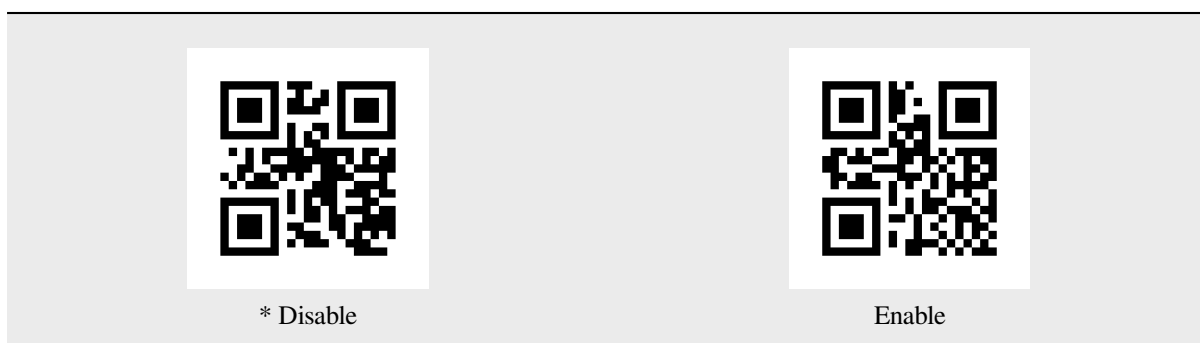

8.26 PDF417

PDF417 Switch

Scan the following Parameter Barcode to enable/disable reading of PDF417 barcodes.

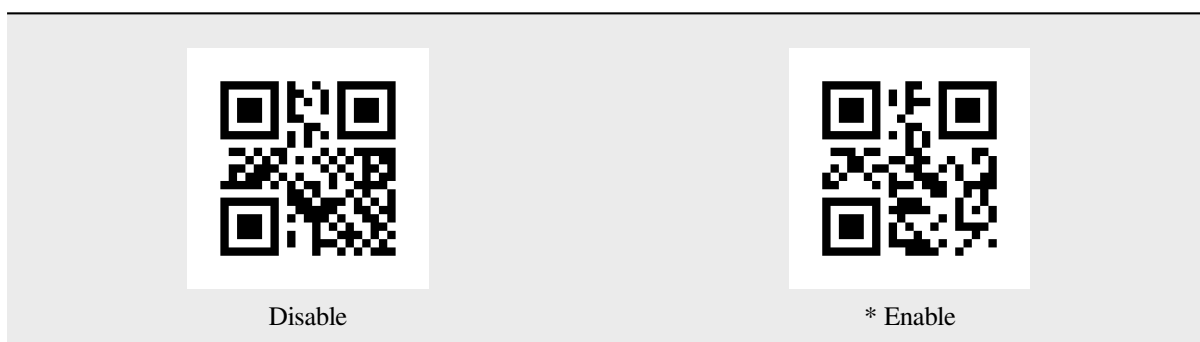

PDF417 Inverse Reading

Scan the following Parameter Barcode to configure PDF417 inverse reading.

	
* Read Only Positive Colors	Read Inverse Barcodes Only
	
Read Normal and Inverse Barcodes	

8.27 QR Code

QR Switch

Scan the following Parameter Barcode to enable/disable reading of QR barcodes.

	
Disable	* Enable

QR Code inverse reading

Scan the following Parameter Barcode to configure QR Code inverse reading.

 * Read Only Positive Colors	 Read Inverse Barcodes Only
 Read Normal and Inverse Barcodes	

QR Code Mirror Reading

Scan the following Parameter Barcode to set whether the image QR Code can be read.

 Disable	 * Enable
--	--

8.28 Data Matrix (DM)

Data Matrix Switch

Scan the following Parameter Barcode to enable/disable reading of Data Matrix barcodes.

 Disable	 * Enable
--	--

Data Matrix inverse reading

Scan the following Parameter Barcode to configure Data Matrix inverse reading.



* Read Only Positive Colors



Read Inverse Barcodes Only



Read Normal and Inverse Barcodes

Data Matrix Image Reading

Scan the following Parameter Barcode to set whether the image Data Matrix code can be read.



* Disable



Enable

DM ECI Control




* Disable



Enable

8.29 Aztec Code

Scan the following Parameter Barcode to enable/disable reading of AZTEC CODE barcodes.

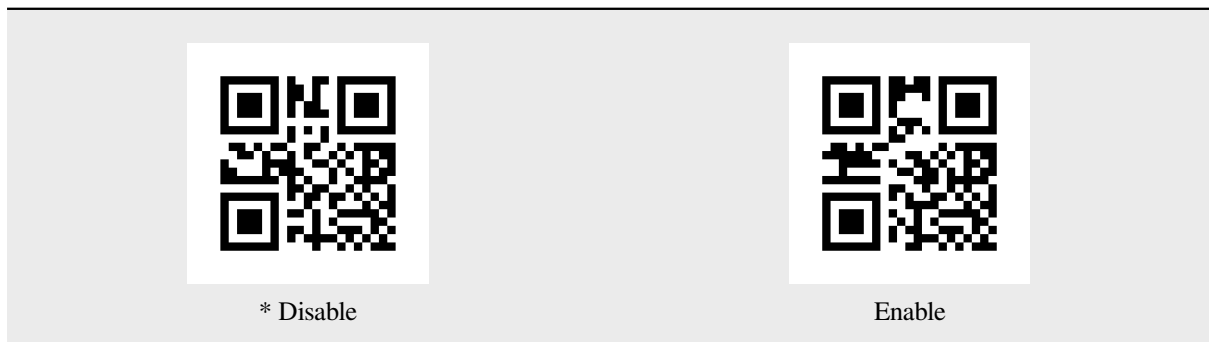

9 Appendix

9.1 Numeric Barcode

The appendix contains numbers 0-9; letters A-F; cancel; confirm Parameter Barcodes.



0



1



2



3



4



5



6




7



8



9

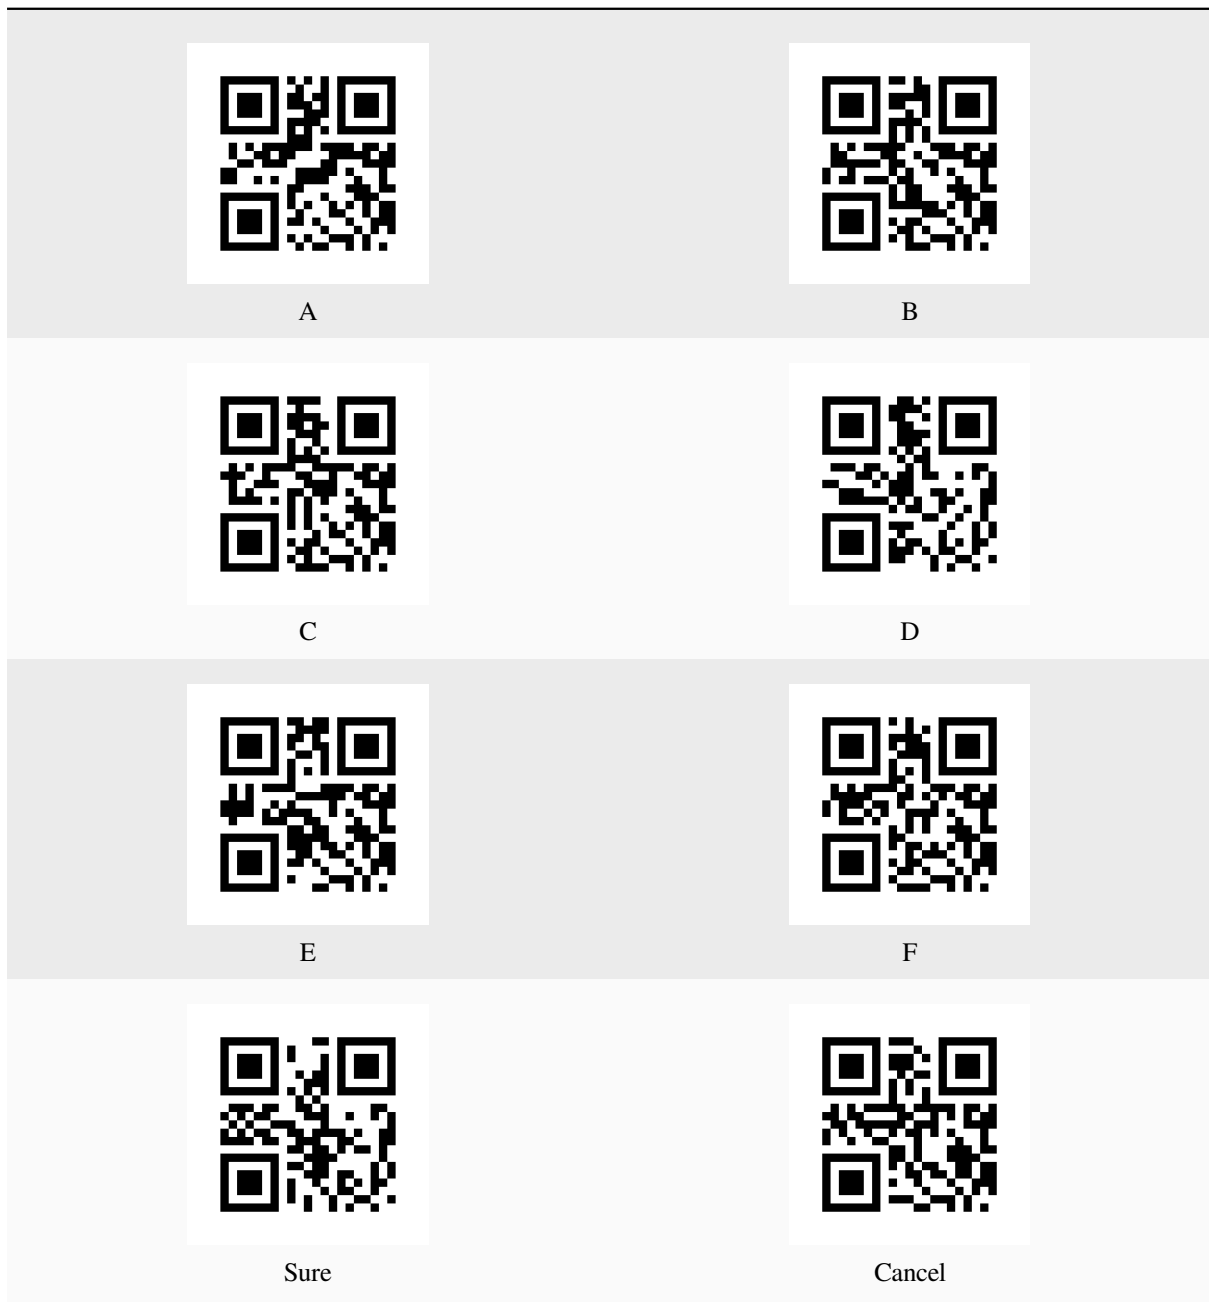

9.2 Code ID

Code Character	Barcode Types
C	Code 128/UCC/EAN-128/GS1-128
F	Code 39/Code 32
J	Code 11
B	Codabar
K	Code 93
E	EAN-13/EAN-8/ISBN/ISSN
U	UPC-A/UPC-E
I	ITF25

continues on next page

Table 1 – continued from previous page

Code Character	Barcode Types
D	IND25
S	STD25
M	MATRIX25
N	NEC25/COOP25
P	MSI Plessey
T	TELEPEN
A	Pharmacode One-Track
W	TRIOPTIC
H	HONG KONG 2 of 5/CHINA POST
R	GS1 DataBar/RSS
q	QR Code/Micro QR
p	PDF417/MicroPDF417
d	Data Matrix (DM)
a	Aztec Code
h	Han Xin
m	MaxiCode
t	DotCode
g	GM
o	OCR
k	Codablock A
f	Codablock F
n	Postal Code
V	Korea Post

9.3 AIM ID

Barcode Types	AIM ID	Description
Code 128/UCC/EAN-128/GS1-128	]Cm	0,1,2,4
Code 39	]Am	0,1,3,4,5,7
Code 32	]X0	
Code 11	]Hm	0,1,3
Codabar	]Fm	0-1
Code 93	]Gm	0-9,A-Z,a-m
EAN-13	]E0	
EAN-8	]E4	
ISSN		
ISBN	]E0	
UPC-A	]E0	
UPC-E	]E0	
UPC-E1	]E1	
ITF25	]Im	0,1,3
IND25	]S0	
STD25	]Rm	0,1,3
MATRIX25	]X0	
NEC25/COOP25	]X0	

continues on next page

Table 2 – continued from previous page

Barcode Types	AIM ID	Description
MSI Plessey	]Mm	0,1
TELEPEN	]Bm	
Pharmacode One-Track		
TRIOPTIC		
QR Code	]Qm	0-6
Micro QR	]Qm	
PDF417	]Lm	0-2
MicroPDF417	]Lm	3,4,5
Data Matrix (DM)	]dm	0-6
Aztec Code	]zm	0-9,A-C
Han Xin	]X0	
MaxiCode	]Um	0-3
DotCode	]X0	
GM	]X0	
Codablock A	]O6	0,1,4,5,6
Codablock F	]Om	0,1,4,5,6
GS1 DataBar/RSS	]e0	
Korea Post	]X0	

9.4 ASCII Code Comparison Table

Hexadecimal	Keyboard Function Key Operations	Keyboard CTRL Key Combination Operation
00h	Null	CTRL 2
01h	Keypad Enter	CTRL A
02h	Caps lock	CTRL B
03h	Right Arrow	CTRL C
04h	Up Arrow	CTRL D
05h	Null	CTRL E
06h	Null	CTRL F
07h	Enter	CTRL G
08h	Left Arrow	CTRL H
09h	Horizontal Tab	CTRL I
0Ah	Down Arrow	CTRL J
0Bh	Vertical Tab	CTRL K
0Ch	Backspace	CTRL L
0Dh	Enter	CTRL M
0Eh	Insert	CTRL N
0Fh	Esc	CTRL O
10h	F11	CTRL P
11h	Home	CTRL Q
12h	Print Screen	CTRL R
13h	Delete	CTRL S
14h	tab+shift	CTRL T
15h	F12	CTRL U
16h	F1	CTRL V

continues on next page

Table 3 – continued from previous page

Hexadecimal	Keyboard Function Key Operations	Keyboard CTRL Key Combination Operation
17h	F2	CTRL W
18h	F3	CTRL X
19h	F4	CTRL Y
1Ah	F5	CTRL Z
1Bh	F6	CTRL [
1Ch	F7	CTRL \
1Dh	F8	CTRL]
1Eh	F9	CTRL 6
1Fh	F10	CTRL -
20h	Space	
21h	!	
22h	“	
23h	#	
24h	\$	
25h	%	
26h	&	
27h	‘	
28h	(	
29h	)	
2Ah	*	
2Bh	+	
2Ch	,	
2Dh	-	
2Eh	.	
2Fh	/	
30h	0	
31h	1	
32h	2	
33h	3	
34h	4	
35h	5	
36h	6	
37h	7	
38h	8	
39h	9	
3Ah	:	
3Bh	;	
3Ch	<	
3Dh	=	
3Eh	>	
3Fh	?	
40h	@	
41h	A	
42h	B	
43h	C	
44h	D	
45h	E	

continues on next page

Table 3 – continued from previous page

Hexadecimal	Keyboard Function Key Operations	Keyboard CTRL Key Combination Operation
46h	F	
47h	G	
48h	H	
49h	I	
4Ah	J	
4Bh	K	
4Ch	L	
4Dh	M	
4Eh	N	
4Fh	O	
50h	P	
51h	Q	
52h	R	
53h	S	
54h	T	
55h	U	
56h	V	
57h	W	
58h	X	
59h	Y	
5Ah	Z	
5Bh	[	
5Ch	\	
5Dh	]	
5Eh	^	
5Fh	_	
60h	`	
61h	a	
62h	b	
63h	c	
64h	d	
65h	e	
66h	f	
67h	g	
68h	h	
69h	i	
6Ah	j	
6Bh	k	
6Ch	l	
6Dh	m	
6Eh	n	
6Fh	o	
70h	p	
71h	q	
72h	r	
73h	s	
74h	t	

continues on next page

Table 3 – continued from previous page

Hexadecimal	Keyboard Function Key Operations	Keyboard CTRL Key Combination Operation
75h	u	
76h	v	
77h	w	
78h	x	
79h	y	
7Ah	z	
7Bh	{	
7Ch		
7Dh	}	
7Eh	~	
7Fh		

9.5 Barcode Types

Barcode	Hexadecimal Type
Code 128/UCC/EAN-128/GS1-128	01h
Code 39/Code 32	14h
Code 11	17h
Codabar	15h
Code 93	16h
EAN-8	05h
EAN-13/ISBN	06h
ISSN	07h
UPC-E	09h
UPC-A	0Ah
ITF25	0Bh
IND25	12h
STD25	13h
MATRIX25	11h
NEC25/COOP25	10h
MSI Plessey	19h
TELEPEN	1Fh
Pharmacode One-Track	23h
TRIOPTIC	22h
QR Code/Micro QR	3Dh
PDF417/MicroPDF417	3Ch
Data Matrix (DM)	3Fh
Aztec Code	3Eh
Han Xin	43h
MaxiCode	40h
DotCode	45h
GM	44h
Codablock A	26h
Codablock F	24h
GS1 DataBar/RSS	1Ah

continues on next page

Table 4 – continued from previous page

Barcode	Hexadecimal Type
Postal Code	25h
OCR	46h
HONG KONG 2 of 5/CHINA POST	20h
All Symbolologies	FFh