



DS-8100 User Manual

Release v1.0.0

2026-06-27

Contents

1	System Settings	4
1.1	Read firmware version	4
1.2	Restore Factory Defaults	4
1.3	working mode	4
2	Power management	6
2.1	Read sleep time	6
2.2	Set sleep time	6
2.3	Get scanner battery level	8
3	Feedback Indicators	8
3.1	Buzzer control	8
3.2	Vibration motor control	9
3.3	Buzzer sound definition	10
3.4	Indicator definition	10
4	wired mode	10
4.1	USB transfer method	10
4.2	USB keyboard transfer speed	11
4.3	USB HID multi-key send settings	12
5	wireless mode	13
5.1	Read Interface Settings	13
5.2	Wireless transmission method	13
5.3	2.4G pairing	13
5.4	Receiver working mode	14
5.5	2.4G transmission cache	16
6	Bluetooth Mode	16
6.1	Read Interface Settings	16
6.2	Bluetooth Transmission Mode	16
6.3	Bluetooth Operating Mode	17
6.4	Change Bluetooth Name	18
6.5	Clear Bluetooth HID Pairing	18
6.6	System Keyboard Functions	18
6.7	Switch between Bluetooth and 2.4G by pressing and holding for 8 seconds	19
6.8	Bluetooth keyboard transmission speed	20
6.9	Bluetooth connection status non-sleep setting	21
7	Keyboard Settings	21
7.1	HID Keyboard General Setting	21
7.2	Keyboard language settings	28
8	Keyboard Language	28
8.1	Read the current keyboard layout	28
9	Data Editing	35
9.1	Standard Data Editing Settings	35
9.2	Extended Data Editing Settings	41
9.3	Terminal character settings	43

9.4	GS1 AI field bracket settings	44
10	Scan Mode	46
10.1	Barcode Decode Mode	46
11	HF settings	48
11.1	Reading mode	48
11.2	UID output format settings	51
11.3	ID prefix settings	55
11.4	User area read settings	56
12	Module Settings	63
12.1	Device function settings	63
12.2	Trigger settings	64
12.3	Engine Code ID	69
12.4	Engine output format	73
12.5	Barcode Settings	75
12.6	Engine Setup Codes	119
12.7	Engine Character Table	122
13	Appendix	126
13.1	Character Reference Table	126

1 System Settings

1.1 Read firmware version



Read firmware version

1.2 Restore Factory Defaults

Note

If Write Custom Defaults has been performed, Restore Defaults restores those custom defaults; otherwise it restores factory defaults.

Important

Set Factory Defaults clears all custom defaults and restores factory defaults.



Restore custom defaults



Write custom default values



Set factory defaults

1.3 working mode

Note

During the data upload process, if you scan the “data upload” command again, the current upload will be canceled or stopped.

Note

In wireless transmission mode, if automatic storage is turned on, barcodes that fail to be transmitted will be automatically saved, and the stored data can be read through “data upload” .



* Normal mode



storage mode



Upload storage data



Read the total number of stored barcodes



Clear storage data after uploading



Read storage space usage



Clear stored barcode



* Autosave mode off



Automatic storage mode is on

2 Power management

2.1 Read sleep time



Read sleep time

2.2 Set sleep time



Hibernate now



Sleep after 1 minute



Sleep after 3 minutes (default)



Sleep after 5 minutes




Sleep after 10 minutes



Sleep after 30 minutes



Sleep after 1 hour

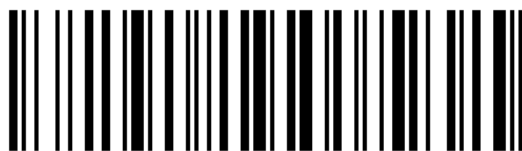

Sleep after 2 hours



never sleep


2.3 Get scanner battery level



Get battery level

3 Feedback Indicators

3.1 Buzzer control

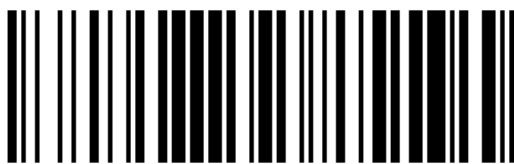

mute



* high volume




medium volume



low volume



* high pitch

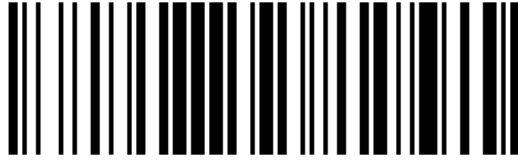

low pitch



* SDK voice response off



SDK voice response enabled



Base connection buzzer prompt switch

3.2 Vibration motor control

Note

The vibration motor works with a beep prompt, not all models support this feature.



Disable



Enable

3.3 Buzzer sound definition

Type	Sound	Description	Audio file
Beep	Single tone (2 pitches)	Storage mode decode; power-off prompt.	storage-mode.m4a, shutdown.m4a
Beep	Single tone (3 pitches)	Power-on prompt; setting saved; upload complete.	startup.m4a, wireless-setting.m4a
Beep	Short single tone	Successful decode.	one-beeps.m4a
Beep	30-second continuous short tone	2.4G pairing waits for the receiver; stops after pairing.	pair2.4G.m4a
Alarm sound	Two tones (same pitch)	Low-battery alarm during decoding.	two-beeps.m4a
Alarm sound	Three tones (same pitch)	Inventory storage error or capacity exceeded.	three-beeps.m4a
Alarm sound	Transmission failure	Alarm when barcode transmission fails.	No audio available
Alarm sound	Five tones (same pitch)	Boot failure caused by low battery.	five-beeps.m4a

3.4 Indicator definition

Indicator	Status
red light / green light	When charging, the red light is on and the green light is off; when fully charged, the red light is off and the green light is on.
blue light	Following the buzzer action, the buzzer lights up when it sounds and goes out when it does not sound; models that support Bluetooth mode are also used to indicate the Bluetooth connection status.

4 wired mode

Note

Only applicable to scanners that support wired transmission.

4.1 USB transfer method



* USB keyboard mode



USB virtual serial port mode

Note

After the automatic interface selection is turned on, the device will automatically switch between wired and wireless; when plugging in the USB cable, the wired mode will be used first. When the USB cable is not plugged in or USB is unavailable, the scanner works in 2.4G mode. Some models may not support this feature.



* Wired/wireless automatic selection turns on



Wired/wireless automatic selection off

4.2 USB keyboard transfer speed

Note

This setting also affects the speed of RF and Bluetooth transmission of very long barcodes and stored data uploads.



* top speed



top speed



medium speed



medium speed



Read keyboard speed



Read keyboard speed

4.3 USB HID multi-key send settings

Note

The settings in this section are only applicable to Windows systems.



USB HID multi-key sending enabled



* USB HID multi-key sending off

5 wireless mode

Note

Only suitable for scanners that support 2.4G transmission.

5.1 Read Interface Settings



Current Interface Settings

5.2 Wireless transmission method

Note

The blue light is always on or flashing to indicate that it is currently in Bluetooth mode; the blue light is off to indicate that it is currently in 2.4G mode or USB wired mode.



2.4G transmission mode

5.3 2.4G pairing

Important

Only valid in wireless 2.4G mode.



Start 2.4G pairing



one-to-one pairing



One-to-one pairing

5.4 Receiver working mode

Note

Composite device mode is only available on receivers running FWVerL or later. You can also use `ReceiverAddress.exe` to generate a pairing barcode and complete pairing by scanning it.



Receiver as composite device



Receiver as virtual serial port

Note

This mode requires the virtual serial port driver to be installed.



receiver as keyboard

Receiver keyboard transmission speed

Note

The instructions in this section are only applicable to receivers of FWVerL and above. The transmission speeds of the scanner and receiver must match, otherwise errors may occur when transmitting long barcodes.

Important


This command is only valid in wireless 2.4G mode and the receiver is connected normally.



Read keyboard speed

Example

KB SP=2, 4 represents a USB keyboard speed of 2ms and a receiver keyboard speed of 4ms.

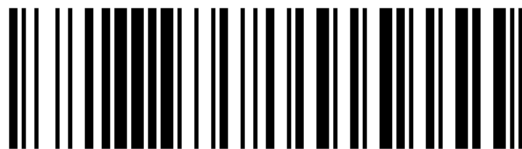

receiver keyboard high speed



Receiver Keyboard Medium Speed



Receiver Keyboard Low Speed

Note

It is only valid in wireless 2.4G mode and the receiving end receives normally.

5.5 2.4G transmission cache

Note

This command is only available on some scanners that support this feature. After scanning the setup code, two short beeps indicate disabled, and one three-tone beep indicates enabled.

When scanning ordinary barcodes, if the amount of barcode data is large and the scanning interval is short, and the data is not uploaded in time, you can use this setting barcode to turn on or off data caching.



SRAM cache switch

In normal mode, after data caching is turned on, if the device briefly leaves the communication distance and enters offline state, you can use this setting to choose to wait for connection before uploading the cached data, or to clear the cached data.



Offline caching switch

6 Bluetooth Mode

Note

Only suitable for RF+BT scanners with Bluetooth function.

6.1 Read Interface Settings



Current Interface Settings

6.2 Bluetooth Transmission Mode

Note

The blue light is always on or flashing to indicate that it is currently in Bluetooth mode; the blue light is off to indicate that it is currently in 2.4G mode or USB wired mode.



Bluetooth Transmission

6.3 Bluetooth Operating Mode

Note

Valid only in Bluetooth mode.

Note

Before switching the Bluetooth working mode, you need to clear the pairing information between the host device and the scanner.



Bluetooth HID Keyboard (Default)



Bluetooth SPP Serial Port



Bluetooth BLE Serial Port



Bluetooth cradle transmission mode

Note

It is suitable for pairing with a Bluetooth cradle that has already been paired. When the barcode on the base is damaged, you can also use the gadget BluetoothAddress.exe to generate a pairing barcode.

6.4 Change Bluetooth Name

After entering the new Bluetooth name, scan the generated QR code to complete the setup. If the host has saved old pairing records after modification, please delete the old pairing first and search for connection again.

6.5 Clear Bluetooth HID Pairing

After scanning “Clear Pairing” in Bluetooth transmission mode, the scanner will disconnect the currently paired device and clear the pairing list, then wait for new devices to be paired. Historically paired devices need to be deleted and paired again.



Clear Bluetooth Pairing

6.6 System Keyboard Functions


iOS system pop-up keyboard function



iOS pop up/hide keyboard



Press and hold the trigger for 4 seconds to toggle the iOS on-screen keyboard

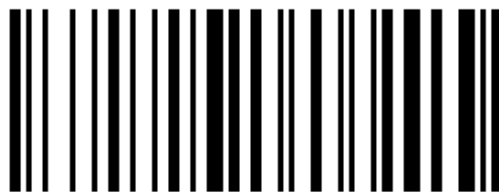

Double-press the trigger to toggle the iOS on-screen keyboard



Pop up iOS keyboard switch after sending

Windows Caps Lock detection

Note

This command is only available on some Bluetooth scanners. After scanning the setup code, two short beeps indicate disabled, and one three-tone beep indicates enabled.



Windows Caps Lock detection switch

6.7 Switch between Bluetooth and 2.4G by pressing and holding for 8 seconds

Note

This command is only available on some RF+BT scanners (DS, C, RT). When enabled, press and hold the trigger for more than 8 seconds and release it to switch between RF and BT. If you hold it for more than 16 seconds, the scanner powers off and the mode does not switch. After scanning the setup code, two short beeps indicate disabled, and one three-tone beep indicates enabled.



Press and hold the trigger for 8 seconds to toggle RF/BT switching

6.8 Bluetooth keyboard transmission speed

Note


Valid only in Bluetooth mode.



Read Bluetooth HID delay



High speed (2 ms)

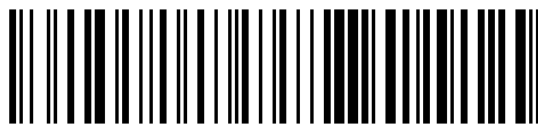

High speed (6 ms)



* Medium speed (10 ms)



Medium speed (18 ms)



Low speed (25 ms)



Low speed (30 ms)

6.9 Bluetooth connection status non-sleep setting

Note

After scanning the setup code, two short beeps indicate disabled, and one three-tone beep indicates enabled.



Bluetooth connection status non-sleep switch

7 Keyboard Settings

7.1 HID Keyboard General Setting

HID common settings

Note

The general HID mode settings in this section are applicable to USB keyboard, RF2.4G keyboard, and BT HID keyboard.

Ctrl key combination settings



* Combine-Key Off



Ctrl+ Key Config1




Alt+ Key Config2



Normal-Key Config3



Ctrl+ Key Config4

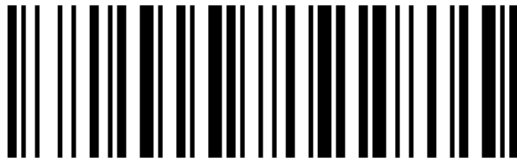

Alt+ Key Config5

Note

only for ASCII <0x20 chars, Alt+ key only for Windows system.


Case settings



normal



Swap case

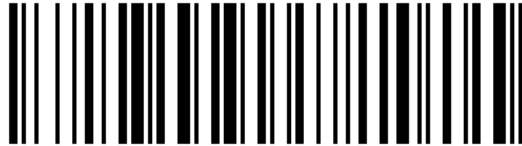

all caps



all lowercase

*When set to ALT, TH keyboard language, the case setting does not apply.

Num Lock Settings



Num Lock Settings



Num Lock on

*When the receiving device is a mobile phone, you need to keep the Num Lock off setting, otherwise the numbers will not be displayed.

Enter character set settings

Note

Applicable only to certain mod's of 2D scanners, this setting matches the 2D module's output character set.



Read the current character set settings



automatic



GBK / BIG5 / HANGUL / SJIS



ISO/IEC 8859



UTF8 (Word)



UTF8 (Txt)



Normal mode

illustrate:

model	Applicable scenarios	Code scan engine output character set	limit
Auto	Automatically select the input character set as UTF8 or ISO/IEC 8859; Word or Txt output is based on the last UTF8 setting.	primitive type	none
GBK	Windows Notepad, Excel Chinese input.	GBK (GB2312) or original type	Applies to Windows systems only.
UTF8 (Word)	Word, QQ Chinese input.	UTF8 or primitive type	Applies to Windows systems only.
ISO/IEC 8859	European single-byte special characters ($\geq C0H$), applicable to FR, GE, TR, PT, ES, CS, IT, UK, HU, SK.	primitive type	Languages not listed need to be added by customization.
UTF8 (Txt)	To input special characters in Windows Notepad, you need to install the Unicode plug-in.	UTF8 or primitive type	Applies to Windows systems only.
Normal	Multi-language special characters, suitable for characters on FR, GE, TR, PT, ES, CS, IT, UK, HU, SK keyboards.	UTF8 or primitive type	Languages not listed need to be added by customization.

Receiving device selection

Note

This section is used to set the way different receiving devices input ASCII characters (0x20 to 0x7F) and needs to be used in conjunction with [Keyboard Language Settings](#).



Read the current receiving device settings



Windows device



iPhone/iPad/Mac devices



Android device

*IOS/MAC devices are currently valid: FR, DE, TR, PT, ES, CS, IT, UK, HU, SK. Please refer to the document “MAC iphone ipad keyboard layout for barcode scanner.docx”

*It is recommended to install Google Gboard input method uniformly on Android devices. Please refer to the document “Android device keyboard layout for barcode scanner.docx”

7.2 Keyboard language settings

See also

Keyboard language settings have been split into a separate page: [Keyboard Language Settings](#).

8 Keyboard Language

8.1 Read the current keyboard layout



Read the current keyboard layout

L1 *ENUSA EN key



* US English keyboard

L2 FR France French key



French French keyboard

L3 DE Germany key



german german keyboard

L4 IT Italy Italy key



Italian keyboard

L5 PT Portugal Portugal key



Portuguese keyboard

L6 ES Spain Spain key



spanish keyboard

L7 TR Turkey Turkey key



Turkish Q keyboard



Turkish F keyboard

L8 ENUK UK key



British English keyboard

L9 CS Czech Czech key



Czech keyboard




Czech standard keyboard

L10 HU Hungary Hungary key



Hungarian keyboard

L11 FR Belgium (French) Belgium FR Key

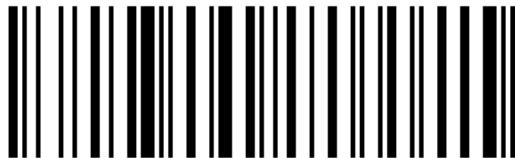

Belgian French keyboard

L12 PT Brazil (Portuguese) Brazil PT Key



Brazilian Portuguese keyboard

L13 FR Canadian French (Traditional) Canadian FR Key



Canadian French (traditional) keyboard

L14 HRCroatia Key



Croatian keyboard

L15 SK Slovak Key



Slovak QWERTY keyboard



Slovak keyboard

L16 DA Denmark Denmark Key



Danish keyboard

L17 FI Finland Key



Finnish keyboard

L18 ES Latin America (Spanish) Latin-America ES Key



Latin American Spanish keyboard

L19 NL Netherlands Netherlands Key



Dutch keyboard

L20 NO Norway Norway Key



Norwegian keyboard

L21 PL Poland Poland Key



Polish keyboard

L22 SR Serbia (Latin) Serbia Key



Serbian Latin keyboard

L23 SL Slovenia Key



Slovenian keyboard

L24 SV Sweden Sweden Key



Swedish keyboard

L25 DE Switzerland (German) Swiss DE Key



Swiss German keyboard

L26 JP Japanese Japanese Key



Japanese keyboard

L27 TH Thai Thailand Key

Note

When using a Thai keyboard, the code scan engine also needs to be set to TH output.



Thai keyboard

See also

Reference file: RF2.4G, Bluetooth Settings_Chinese, Thai, Korean.docx.

L28 ALT International Keyboard ALT Global Key

Note

The ALT international keyboard layout is only available on Windows systems. It is not affected by the host keyboard layout, but it reduces transmission speed.



ALT international keyboard

L29 ALT Single Byte Special Keyboard ALT Single Byte Special Key



ALT single-byte special character keyboard

Note

Languages not listed in this section need to be customized to be supported.

9 Data Editing

9.1 Standard Data Editing Settings

This section describes how to configure common output rules such as prefixes, suffixes, and hidden characters by scanning setup codes.

Prefix/Suffix and Hidden Character Settings

You can add up to 10 prefixes and/or 10 suffixes to the output data. To configure them, scan the two-digit hexadecimal numeric setup codes that correspond to the required ASCII value (that is, two barcodes per character).

See also

For character values, please refer to *ASCII Function Key Character Reference Table* and *ASCII Character Reference Table*; for parameters that require input of numerical values, please scan *Numeric Setup Codes*; for specific procedures, see *Add a Prefix or Suffix*.

Can be set to hide the first, middle or last characters of the barcode. After scanning the corresponding hidden setting barcode, scan the two-digit hexadecimal setting barcode corresponding to the length of the characters to be hidden (00~FF, for example, scan 0 and 4 in sequence when hiding 4 characters).

See also

See *Steps to Hide the First/Middle/Tail Characters of a Barcode* for the hidden character process.


Operation Code



Add Prefix



Add Suffix

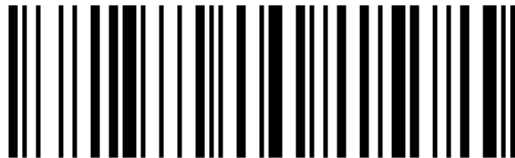

Clear all prefixes



Clear all suffixes



Hide Leading Characters



Hide Middle Section Start Position



Hide Middle Section Length




Hide Trailing Characters

Numeric Setup Codes

For parameters that require a numeric value, scan the corresponding numeric setup codes.



Numeric Setup Code 0

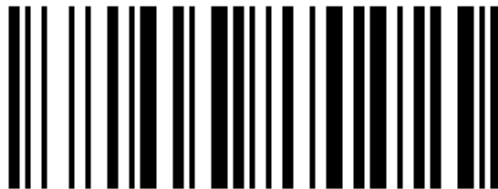

Numeric Setup Code 1



Numeric Setup Code 2



Numeric Setup Code 3



Numeric Setup Code 4



Numeric Setup Code 5



Numeric Setup Code 6



Numeric Setup Code 7



Numeric Setup Code 8



Numeric Setup Code 9



Numeric Setup Code A



Numeric Setup Code B




Numeric Setup Code C



Numeric Setup Code D



Numeric Setup Code E

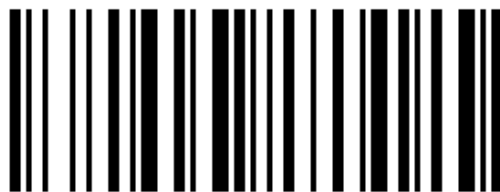

Numeric Setup Code F

Output Format Settings

To change the output data format, scan the corresponding setup barcode below.



Default Output Format



Allow Suffix Output



Allow Prefix Output



Allow Hiding Leading Data



Allow Hiding Middle Data



Allow Hiding Trailing Data

Procedure Examples

Add a Prefix or Suffix

1. If prefix and suffix output has not been enabled, please scan the corresponding output formatting code first.
2. The new characters will be appended to the existing suffixes; if you want to abandon the original suffixes, please scan “Clear all prefixes/suffixes” and then reset them.
3. Scan the “Add Prefix” or “Add Suffix” setting barcode.
4. Determines the hexadecimal value of the prefix or suffix to be entered based on *ASCII Function Key Character Reference Table* or *ASCII Character Reference Table*.
5. Scan the corresponding two-digit hexadecimal setting barcode.
6. To continue adding characters, repeat steps 4 and 5.

Example

If you need to add `Ctrl+A` as a prefix, scan “Add Prefix” “9” “7” “4” “1” in sequence.

Example

If you need to add `Ctrl+Alt+A` as a suffix, scan “Add suffix” “9” “7” “9” “9” “4” “1” in sequence.

Steps to Hide the First/Middle/Tail Characters of a Barcode

1. Scan the setting barcode that hides the header, middle starting bit, middle length or trailing characters of the barcode.
2. Determine the hexadecimal value corresponding to the character length to be hidden (for example, hide 4 characters scan 0, 4; hide 12 characters scan 0, C).
3. Scan the corresponding two-digit hexadecimal setting barcode.
4. Enable or disable the hidden character function through the output formatting code.

9.2 Extended Data Editing Settings

This section lets you generate data editing setup codes from complete commands in one step. It is intended for batch configuration, remote serial-command delivery, or character replacement.

Online One-Code Setup Generator

Note

The online generator is shown only in the HTML manual. After generating a setup code, scan the generated barcode to complete the setting, or send the command by serial command using the format below.

Add Prefix

Add Suffix

Hide Leading Barcode Characters

Hide Middle Barcode Characters

Hide Trailing Barcode Characters

Character Replacement

One-Code Setup Command Format

Edit format:

\$DATA#ncllxx#

n

1 suffix; 2 prefix; 3 hides the tail content of the barcode; 4 hides the middle content of the barcode; 5 hides the first content of the barcode; 7 replaces characters.

c

Code ID currently supports only 0, which indicates all symbologies.

ll

Length, hexadecimal value: 01~0A, hide 01~FF, replace 01~05.

xx

ASCII value. Hexadecimal can be represented by \x plus two characters, and the character range is 0~9, A~F.

Table 1: One-Code Setup Examples

Command	Description
\$DATA#1005abcd\x03#	Add 0x05 suffixes: abcd + 0x03.
\$DATA#200ANETUM12345#	Add 0x0A prefix NETUM12345.
\$DATA#3008#	Hide the last 0x08 characters of the barcode.
\$DATA#40050A#	Hides the 0x0A characters after the 0x05 character in the barcode.
\$DATA#5011#	Hide barcode header 0x11 bytes.
\$DATA#7001\x1D02GS#	Replace GS (0x1D) characters with GS.
\$DATA#7002NT01Z#	Replace NT with Z.

Character replacement operation

Format: \$DATA#70 + replaced character length + replaced characters + replacement data length + replacement data #

The sum of the lengths of the replaced characters and the replacement characters is ≤ 6 , supporting 1~6 characters being replaced by 5~0 characters.



Read replacement settings



Clear replacement settings

Example

\$DATA#7001\x1D02GS# means replacing the non-displayable character GS (0x1D) with GS for display.



Character replacement operation: GS to text GS

Example

\$DATA#7001\x0A01\x0D# means replacing LF (0x0A) with CR (0x0D).



Character replacement operation: LF to CR

Example

\$DATA#7006ABCDEF00# means replacing the string ABCDEF with an empty string, that is, not displaying it.

9.3 Terminal character settings

Note

This terminal character is independent of the scan engine suffix and wireless suffix, which facilitates quick setting when the scan engine has no suffix.



None (Default)



Carriage Return CR



Tab TAB



Carriage Return + Line Feed CRLF



Line Feed LF

9.4 GS1 AI field bracket settings

Note

Only some AI fields are applicable and require special version support.



Raw Format (Default)



Add Parentheses



Add brackets and separate with CR



Add brackets and separate them with TAB

10 Scan Mode

10.1 Barcode Decode Mode



Key scan mode (default)



Continuous scan mode

Note

Continuous Scan Mode is suitable for high-volume scanning workflows. Press the Trigger button once to start or stop scanning.



Key pulse scan mode

Note

Scanning starts when a key-level change is detected and maintained for about 30 ms. Scanning stops when another key-level change is detected, or when a decode succeeds or times out.



Host trigger mode (only applicable to some customized models)

Note

Host trigger mode is only applicable to some customized models.



Batch scanning mode (only applicable to some customized models)

Decoding timeout

This parameter sets the maximum time that decoding processing lasts during a scan attempt. Default: 3000ms, range: 0500-9999ms.



3 seconds (default)



6 seconds

Scan Interval

The interval between two readings in continuous mode. Default: 500ms, range: 0100-9999ms.



0.5 seconds (default)



1 second

11 HF settings

Note

Available only on wireless models with 13.56 MHz HF RFID capability.

11.1 Reading mode

2D and RFID switching



* 2D only



RFID only



2D&RFID

Note

In **RFID only** mode, press and hold the trigger button for 8 seconds to switch to **2D&RFID** mode.

Trigger reading mode



* Key scan mode (default)

Press the trigger button to start reading, and release it to stop reading.



Continuous scan mode

Press the trigger button to start or stop continuous reading.



Key pulse scan mode

Press the trigger button once to start reading. Reading ends automatically after a successful read or timeout.

11.2 UID output format settings

Output format



raw hexadecimal (hex)



* ASCII (high byte first)



ASCII (low byte first)



Decimal (high byte first)




Decimal (low byte first)

For example, when the UID output is E0 00 12 34:

```
ASCII: E0001234
ASCII LSB: 341200E0
Original(hex): 0xE0,0x00,0x12,0x34
Decimal MSB: HEX2DEC(0xE0001234) = 3758101044
Decimal LSB: HEX2DEC(0x341200E0) = 0873595104
```

Remove leading zeros

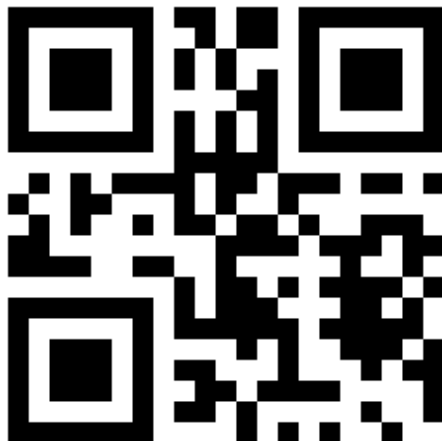

* Disable



Enable

For example, the original output is 0001234. With “Remove leading zeros” enabled, the output is 1234.

Terminator settings



*CR



None

Note

Only supports setting 1 character. Other symbols can be customized through %RFIDFMT#HE0\\xXX (\\xXX is hexadecimal, for example, the Tab end character can use %RFIDFMT#HE0\\x09); the Original (hex) output format does not contain this character.

11.3 ID prefix settings



* Disable



Enable

When enabled, the RFID ID will be added with the `UID :` prefix, and the barcode data will be added with the `COD :` prefix.

11.4 User area read settings

Note

Only applicable to some modules, and the required version is no lower than `bn0GDS_HF9_RFSBTD43bc_FB06`.


Read configuration



* UID only



User only

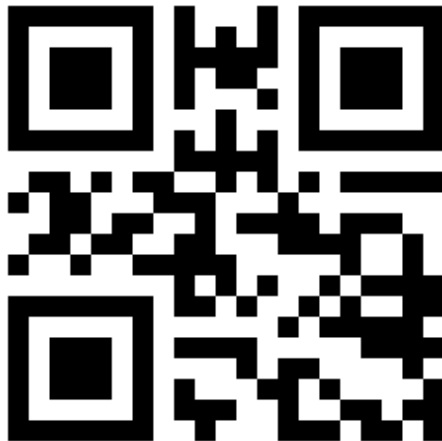

UID+User (for testing only)

User NDEF parsing

Note

When enabled, the payload data in the NDEF message will be parsed and extracted, which is only applicable to TEXT and URI type NDEF of some modules.



* Disable (output the read memory data)




Enable (output NDEF payload)




NDEF MSG (output NDEF Message)

User block read settings

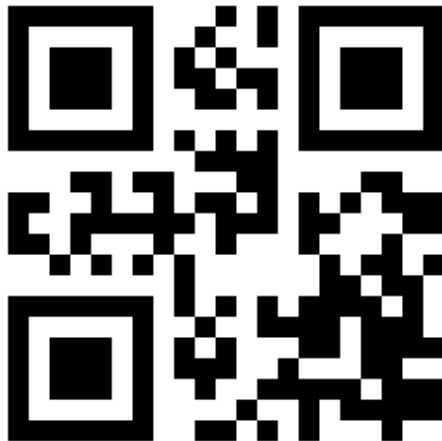

Set RFID User block starting block

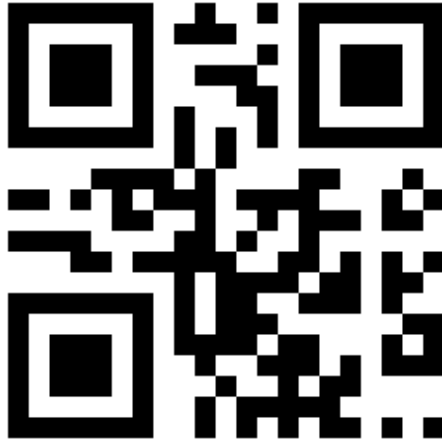

Set the number of RFID User block read blocks

When setting the starting block or number of blocks to read:

1. Scan the corresponding setup code first.
2. Identify the two-digit hexadecimal value to enter, such as 04, 0C.
3. Scan the digital setting code, first the high digit and then the low digit.

Digital setting code


For parameters that require specified values, please scan the corresponding hexadecimal digit setting code.



Digital setting code 0



Digital setting code 1

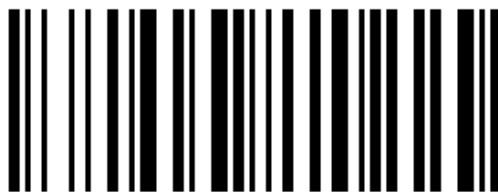

Digital setting code 2



Digital setting code 3



Digital setting code 4



Digital setting code 5



Digital setting code 6



Numeric Setup Code 7



Digital setting code 8



Numeric Setup Code 9



Digital setting code A




Digital setting code B



Digital setting code C



Digital setting code D

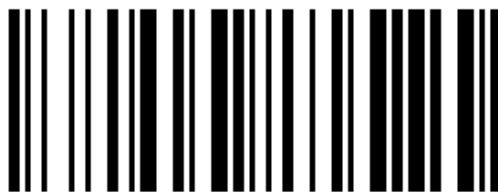

Digital setting code E



Digital setting code F

12 Module Settings

12.1 Device function settings

URL blocking



* Disable



Enable


Invoice function

Turn on the invoice function and automatically turn off Code 128. If you need to read Code 128, you can turn on Code 128 again.

Automatic identification and output of VAT invoices



* Disable

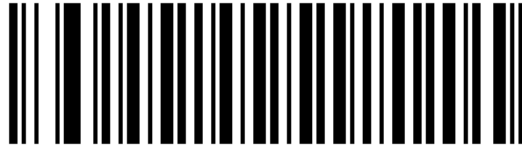

Enable

Invoice type



* Special invoice




Ordinary invoice

12.2 Trigger settings

Trigger Mode

Key hold (level)

Press the button to trigger the reading, release the button to end the reading; after the reading is successful or the single reading time times out, the reading ends.

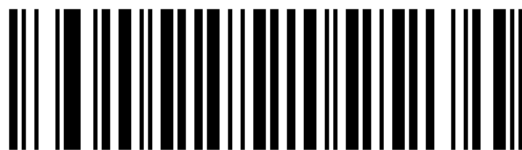

* Key hold (level)

Single key trigger (pulse)

Reading begins after a change in key level is detected and maintained for about 30 ms (the specific time depends on the product); reading ends when a change in key level is detected again. This reading ends after the reading is successful or the single reading time times out.



Single key trigger (pulse)

Continuous Mode


The reading engine works continuously; each time the reading is successful or the single reading time expires, the reading ends, and the next reading is automatically triggered after the continuous reading interval is reached.



Continuous Mode

Auto sensing mode

The reading engine detects the brightness of the surrounding environment and triggers reading when the brightness changes. After the reading is successful or the single reading time times out, the current reading ends and the environment brightness detection is re-entered.

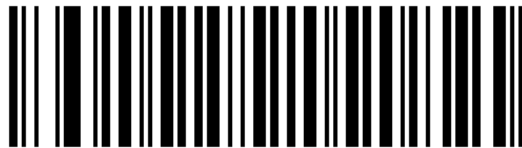

Auto sensing mode

Single scan time (scan duration)

Set the maximum duration of a single scan. After scanning this setup code, scan three numeric setup codes to enter the time coefficient. If the value has fewer than three digits, pad it with leading 0.

Default

3000 ms

Unit

100 ms

Range

500–25500 ms



Single scan time

Example

To set 500 ms, scan this setup code, then scan numeric setup codes 0, 0, and 5 in sequence.

To set 10500 ms, scan this setup code, then scan numeric setup codes 1, 0, and 5 in sequence.


To change a selection or cancel an incorrect setting, scan *Cancel Barcode*.

Single Scan Time (Scan Duration) Quick Setup

To select a commonly used duration directly, scan one of the quick setup barcodes below.




Unlimited

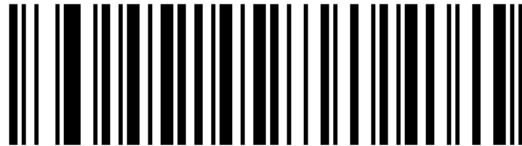

3 s



5 s

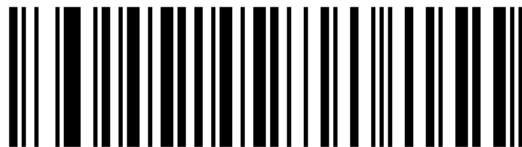

10 s



15 s



20 s



30 s



60 s

Continuous reading interval

In Continuous Mode, this parameter defines the wait time between two scan attempts. After the configured interval elapses, the next scan starts automatically whether the previous attempt succeeded or failed.

After scanning this setup code, scan two numeric setup codes to enter the time coefficient. If the value has fewer than two digits, pad it with a leading 0.

Default

500 ms

Unit

100 ms

Range

0-9900 ms



Continuous reading interval

i Example

To set 500 ms, scan this setup code, then scan numeric setup codes 0 and 5 in sequence.

To change a selection or cancel an incorrect setting, scan *Cancel Barcode*.

Same code delay

To prevent the same barcode from being decoded repeatedly in Continuous Mode or Auto-sense Mode, you can require the decode engine to wait for the configured delay before reading the same barcode again.

After scanning this setup code, scan two numeric setup codes to enter the time coefficient. If the value has fewer than two digits, pad it with a leading 0.

Default

500 ms

Unit

100 ms

Range

0–9900 ms



Same code delay

i Example


To set 200 ms, scan this setup code, then scan numeric setup codes 0 and 2 in sequence.

To set 1500 ms, scan this setup code, then scan numeric setup codes 1 and 5 in sequence.


To change a selection or cancel an incorrect setting, scan *Cancel Barcode*.

Same code delay quick setting

To select a commonly used same-code delay directly, scan one of the quick setup barcodes below. Six preset levels are available: 0 s, 1 s, 3 s, 5 s, 7 s, and unlimited delay.

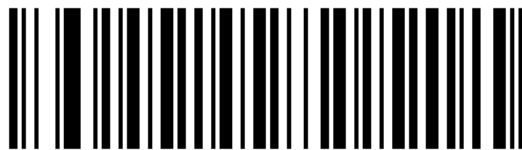


No delay

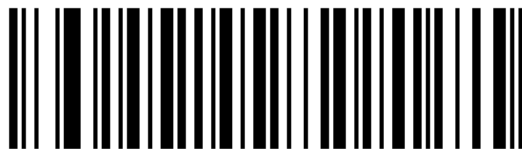


1 s Delay




3 s Delay

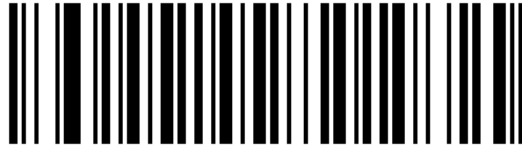

5 s Delay

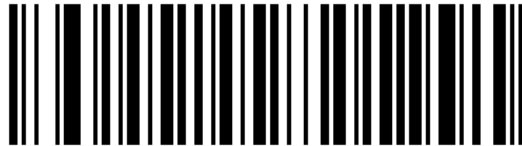

7 s Delay

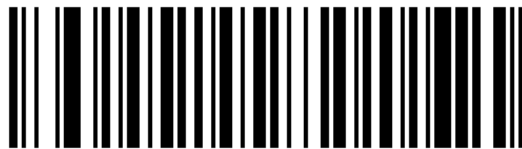

Unlimited Delay (Disable Same-Code Reads)

12.3 Engine Code ID

Transport code ID characters


Parameter number

0x2D

Default

None

Code ID characters are used to identify the barcode type. When a device may decode multiple barcode types, the Code ID or AIM ID can be inserted between the prefix characters and the decoded data. See [Code ID](#) for Code ID characters and [AIM code identifier](#) for AIM ID characters.

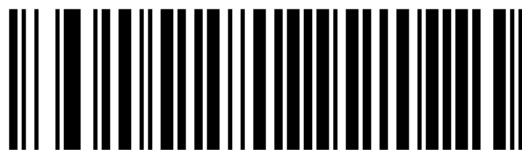

Code ID



AIM ID



* None

Code ID

Barcode Type	Code ID
Code 128	D
GS1-128(UCC/EAN-128)	K
AIM 128	D
ISBT-128	D
EAN-8	A
EAN-13	A
ISSN	L
ISBN/Bookland EAN	L
UPC-E	A
UPC-A	A
Interleaved 2 of 5/ITF	F
ITF-14	F
Deutsche Post 14	w
Deutsche Post 12	l
NEC-25(COOP 2 of 5)	o
Matrix 2 of 5	V
Industrial 2 of 5/Discrete 2 of 5/IND25	G
Standard 2 of 5 (IATA 25)	G
Code 39	B
Code 93	E
Codabar	C
Code 11	H
Plessey	J
MSI-Plessey	J
GS1-DataBar (RSS)	R
PDF417	r
QR	q
AZTEC(Aztec Code)	a
Data Matrix (DM)	u
MaxiCode	x
Han Xin Code/Han Xin Code	c
Code 32	B
Trioptic Code 39	M
Coupon Code	N
GS1 DataBar-14	R
GS1 DataBar Limited	R
GS1 DataBar Expanded	R
SETUP128	S
Veri Code	v

AIM code identifier

Barcode Type	AIM ID	Description
Code 128	JC0	Normal data
GS1-128(UCC/EAN-128)	JC1	FNC1 is at the 1st code word position.
AIM 128	JC2	FNC1 is at the 2nd code word position.
ISBT-128	JC0	
EAN-8	JE4	Normal data
	JE4...JE1...	EAN-8 data plus a 2-digit additional code.
	JE4...JE2...	EAN-8 data plus a 5-digit additional code.
EAN-13	JE0	Normal data
	JE3	EAN-13 data plus 2/5 digit additional code.
ISSN	JX0	Normal data
ISBN/Bookland EAN	JX0	Normal data
UPC-E	JE0	Normal data
	JE3	UPC-E data plus a 2/5-digit add-on code.
UPC-A	JE0	Ordinary data.
	JE3	UPC-A data plus a 2/5-digit add-on code.
Interleaved 2 of 5/ITF	JI0	Normal data
	JI1	Verify and output check characters.
	JI3	Verify but do not output the check character.
ITF-14	JI1	Output check characters.
	JI3	Check characters are not output.
Deutsche Post 14	JX0	Normal data
Deutsche Post 12	JX0	Normal data
NEC-25(COOP 2 of 5)	JX0	Normal data
Matrix 2 of 5	JX0	Normal data
Industrial 2 of 5/ Discrete 2 of 5/IND25	JS0	Normal data
Standard 2 of 5 (IATA 25)	JR0	Normal data
Code 39	JA0	No parity, no Full ASCII extension, data output as it is.
	JA1	MOD43 check and output check characters.
	JA3	MOD43 checks, but does not output check characters.
	JA4	Full ASCII extension, but no parity.

continues on next page

Table 3 – continued from previous page

Barcode Type	AIM ID	Description
	J A5	Full ASCII expansion is performed, and check characters are output.
	J A7	Full ASCII expansion is performed, but check characters are not output.
Code 93	J G0	Normal data
Codabar	J F0	Normal data
	J F2	Verification, and output verification characters.
	J F4	Verification, but does not output the verification character.
Code 11	J H3	Normal data
	J H0	MOD11 single character verification and output verification characters.
	J H3	MOD11 single character verification, but does not output the verification character.
Plessey	J P0	Normal data
MSI-Plessey	J M0	Normal data
	J M0	MOD10 verification, and output verification characters
	J M1	MOD10 verification, but does not output verification characters
GS1-DataBar (RSS)	J e0	Standard data package
PDF417	J L0	No options specified at this time, always transmit 3
QR	J Q0	QR Code Mode 1 (Complies with AIM ISS 97-001)
	J Q1	QR Code mode 2 (2005 symbol), not using ECI protocol
	J Q2	QR Code mode 2 (2005 symbol), using the ECI protocol
	J Q3	QR Code mode 2 (2005 symbol), ECI protocol not used, FNC1 in position 1
	J Q4	QR Code mode 2 (2005 symbol), using ECI protocol, FNC1 is in position 1
	J Q5	QR Code mode 2 (2005 symbol), ECI protocol not used, FNC1 in position 2
	J Q6	QR Code mode 2 (2005 symbol), using ECI protocol, FNC1 is in position 2
AZTEC(Aztec Code)	J z0	No options specified at this time, always transmit 3

continues on next page

Table 3 – continued from previous page

Barcode Type	AIM ID	Description
Data Matrix (DM)	]d0	ECC 000 - 140
	]d1	ECC 200
	]d2	ECC 200, FNC1 in position 1 or 5
	]d3	ECC 200, FNC1 in position 2 or 6
	]d4	ECC 200 supports ECI protocol
	]d5	ECC 200, FNC1 in position 1 or 5 and supports ECI protocol
	]d6	ECC 200, FNC1 in position 2 or 6 and supports ECI protocol
MaxiCode	]U1	No options specified at this time, always transmit 3
Han Xin Code/Han Xin Code	]X0	No options specified at this time, always transmit 3

12.4 Engine output format

Terminator settings

A terminator is a control character appended after the output data. The output format is: output data + terminator.




* Disable



Carriage return and line feed CR LF



Carriage Return CR

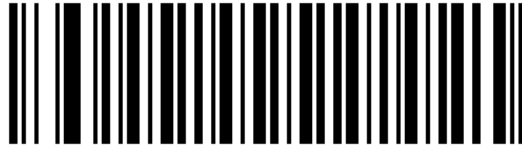

TAB



Enter Enter Enter CR CR



Carriage return and line feed Carriage return and line feed CR LF CR LF

Support for GS1 rules using brackets to include AI fields

Currently supporting GS1 rules, the supported AI segments are: (00) Transport container serial number, (01) Commodity transaction item, (02) Commodity transaction item, (10) Batch number, (11) Production date, (13) Packaging date, (15) Best date, (17) Expiration date, (21) Serial number, (30) Quantity, (240) Internal code, (712) National medical insurance reimbursement number - Spain CN, (8012) software version, (90) consistent information between trading partners



* Disable



Enable

12.5 Barcode Settings

Common Symbology Entries

Symbology	Entry
UPC-A	<i>UPC-A</i>
UPC-E	<i>UPC-E</i>
EAN-8	<i>EAN-8</i>
EAN-13	<i>EAN-13</i>
Bookland EAN	<i>Enable/disable Bookland EAN (ISBN)</i>
Code 128	<i>Code 128</i>
GS1-128	<i>GS1-128 (formerly UCC/EAN-128)</i>
Code 39	<i>Code 39</i>
Code 93	<i>Code 93</i>
Code 11	<i>Code 11</i>
Interleaved 2 of 5	<i>Interleaved 2 of 5/ITF/Crossed 25 yards</i>
Codabar	<i>Codabar</i>
MSI	<i>MSI/MSI PLESSEY</i>
PDF417	<i>PDF417</i>
QR Code	<i>QR Code</i>
Data Matrix	<i>Data Matrix (DM)</i>
Maxi Code	<i>Maxi Code</i>
Aztec Code	<i>Aztec Code</i>
Han Xin Code	<i>Han Xin Code</i>

1D inverted barcode reading



* Disable




Enable

Barcode global switch

One-dimensional code switch




Disable

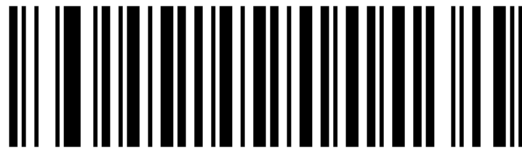


Enable

QR code switch

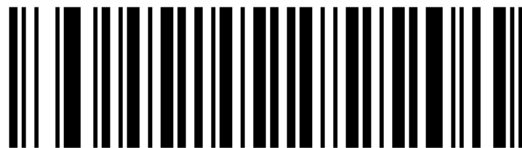

Disable

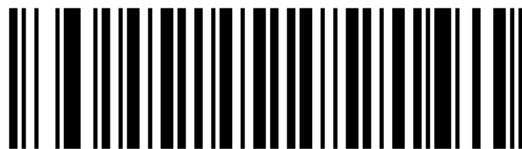

Enable

All barcode switches



Disable all barcodes



Enable all barcodes


Linear code type safety level

The reading engine provides four levels of decoded security linear encoding types. Select a higher security level for declining barcode quality levels. Follow

As the security level increases, the reading engine becomes less aggressive. Choose the security level that suits your barcode quality.

Linear safety level 1


All code types must be successfully read 1 time before being decoded

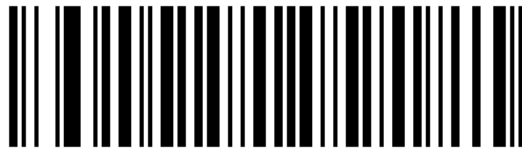

* Linear safety level 1

Linear safety level 2


All code types must be read successfully 2 times before being decoded.

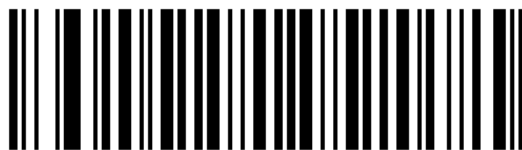

Linear safety level 2

Linear safety level 3


All code types must be successfully read 3 times before being decoded.

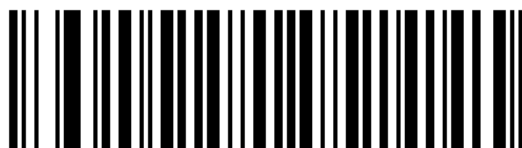

Linear safety level 3

Linear safety level 4

All code types must be successfully read 4 times before being decoded

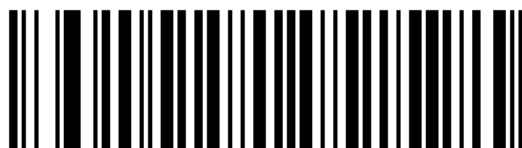

Linear safety level 4


UPC-A

Enable/disable UPC-A

Scan the corresponding barcode below to enable or disable UPC-A.



* Enable UPC-A

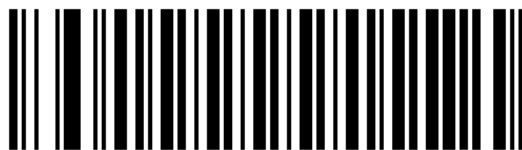

Disable UPC-A

UPC-A preamble

Preamble characters (country code and system characters) may be transmitted as part of the UPC-A code system. Select one of the following options to set and transmit the UPC-A preamble to the host: transmit system characters only, transmit system characters and country code (“0” for United States), or transmit no preamble.



No preamble (<DATA>)




* System characters (<SYSTEM CHARACTER> <DATA>)



System characters & country code (<COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)

Transmit UPC-A check digit

Scan the corresponding barcode below to set whether to transmit the UPC-A check code.

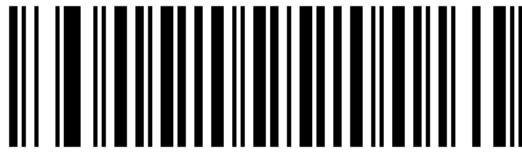


* Transmit UPC-A check digit



Do not transmit UPC-A check digit

UPC-A 2-digit add-on code

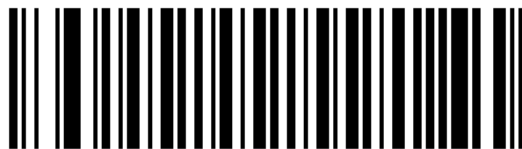

Enable



* Disable

UPC-A 5-digit add-on code



Enable




* Disable

UPC-A must read additional code



To enable UPC-A, the additional code must be read

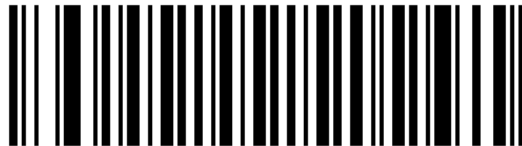

Disable UPC-A Additional code must be read

UPC-E

Enable/disable UPC-E

Scan the corresponding barcode below to enable or disable UPC-E.



* Enable UPC-E



Disable UPC-E


UPC-E preamble



No preamble (<DATA>)




* System characters (<SYSTEM CHARACTER> <DATA>)

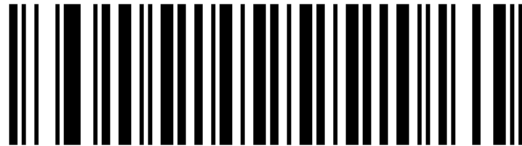


System characters & country code (<COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)

Transmit UPC-E check digit

Scan the corresponding barcode below to set whether to transmit the UPC-E check digit.

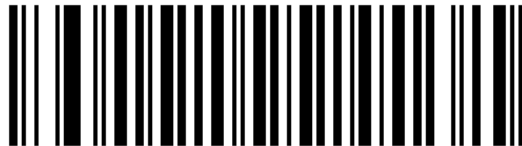

* Transmit UPC-E check digit

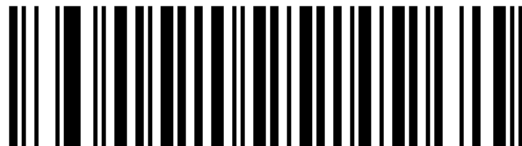

Do not transmit UPC-E check digit


Convert UPC-E to UPC-A

This parameter allows this parameter to be converted from UPC-E (zero suppression) decoded data to UPC-A format before transmission. After conversion, the data follows UPC-A format and is protected by UPC-A

Impact of programming choices (eg: preamble, checksum).



Convert UPC-E to UPC-A

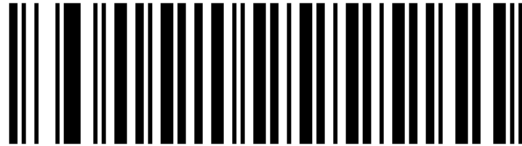

* Does not convert UPC-E to UPC-A

UPC-E 2-digit add-on code



Enable



* Disable

UPC-E 5-digit add-on code



Enable



* Disable

UPC-E must read additional codes



Enable




* Disable

UPC-E1 switch



* Disable UPC-E1

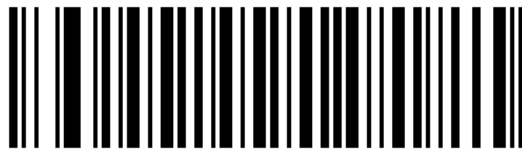

Enable UPC-E1

EAN-8

Enable/disable EAN-8

Scan the corresponding barcode below to enable or disable EAN-8.



* Enable EAN-8



Disable EAN-8

EAN-8 zero extension

When this parameter is enabled, this parameter plus 5 leading 0s decodes EAN-8 to make it compatible with the EAN-13 format. When this parameter is disabled, the EAN-8 code system is transmitted



Enable EAN-8 zero extension




* Disable EAN-8 zero extension

EAN-8 2-digit additional code



Enable

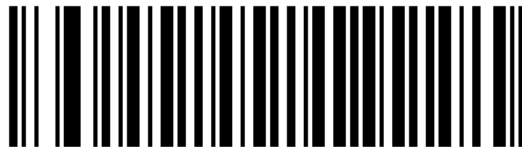

* Disable

EAN-8 5-digit add-on code



Enable



* Disable

EAN-8 must read additional code



Enable



* Disable

EAN-8 sends check digit



Disable



* Enable


EAN-13

Enable/disable EAN-13

Scan the corresponding barcode below to enable or disable EAN-13.



* Enable EAN-13

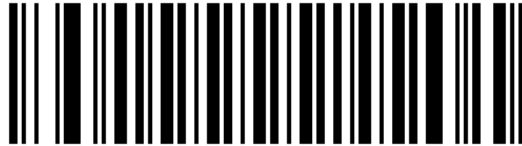

Disable EAN-13

EAN-13 2-digit additional code



Enable



* Disable

EAN-13 5-digit add-on code



Enable



* Disable

EAN-13 must read additional code




Enable



* Disable

EAN-13 send check character

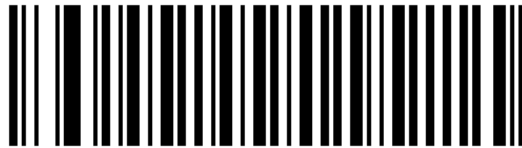

Disable EAN-13 sending check characters




Enable EAN-13 to send check characters

Enable/disable Bookland EAN (ISBN)

Scan the corresponding barcode below to enable or disable Bookland EAN (ISBN).



Enable Bookland EAN

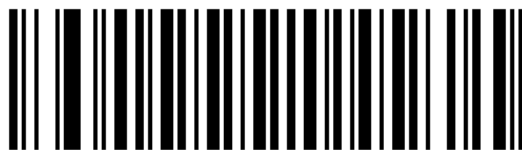

* Disable Bookland EAN

Code 128

Note

The enable/disable control of Code 128 also applies to AIM128; the output type identification of AIM128 is different from that of ordinary Code 128.

Enable/disable Code 128

Scan the corresponding barcode below to enable or disable Code 128.



* Enable Code 128




Disable Code 128

Code 128 Send check character



Enable

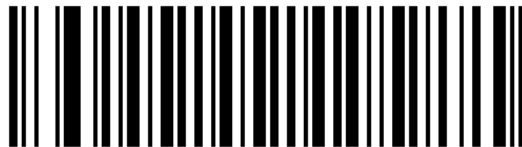

* Disable

Code 128 length setting

Allows reading of Code 128 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Code 128 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

0-99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4–8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Code 128 any length



Code 128 specifies the length

GS1-128 (formerly UCC/EAN-128)



GS1-128 (formerly UCC/EAN-128)

any length



* Enable GS1-128

Disable GS1-128

UCC/EAN-128 sending check characters



Enable



* Disable

UCC/EAN-128 length setting

Allows reading of UCC/EAN-128 codes of specific lengths. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “UCC/EAN-128 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

0-99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



UCC/EAN-128 any length



UCC/EAN-128 specified length

ISBT 128

any length

Scan the appropriate barcode below to enable or disable ISBT 128.



* Enable ISBT 128



any length

Code 39


Disable ISBT 128

Enable/disable Code 39

Scan the corresponding barcode below to enable or disable Code 39.



* Enable Code 39

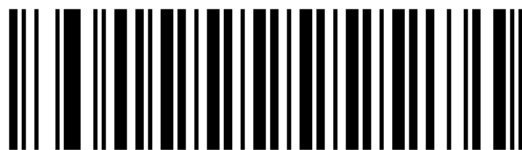

Disable Code 39

Code 39 length setting

Allows reading of Code 39 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Code 39 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

0-99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4–8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Code 39 any length



Code 39 specifies the length

Code 39 check digit verification

When this feature is enabled, the reading engine checks the integrity of all Code 39 encodings to verify that the data conforms to the specified check digit algorithm. Only Code 39 encodings containing a modulo 43 check digit can be decoded. This feature can only be enabled if the Code 39 code format containing the modulo 43 check digit can be decoded.



Verify Code 39 check digit



* Do not verify Code 39 check digit

Transmit Code 39 Check Digit Scan this barcode to transmit the data check digit.



Transmit Code 39 check digit




* Do not transmit Code 39 check digit


Enable/disable Code 39 Full ASCII

Code 39 Full ASCII is evolved from Code 39 and can encode double characters into Full ASCII characters. Scan the corresponding barcode below to enable or disable Code 39 Full ASCII.

See *Character Reference Table* for the mapping of Code 39 characters to ASCII values.

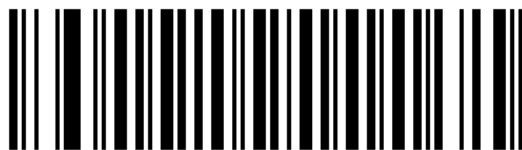

Enable Code 39 Full ASCII

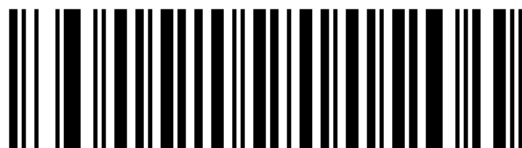

* Disable Code 39 Full ASCII

Transmit Code 39 start and stop characters



* Disable



Enable

Convert Code 39 to Code 32 (Italian Medical Code)

Code 32 is a Code 39 variant used in the Italian pharmaceutical industry. Scan the corresponding barcode below to enable or disable conversion from Code 39 to Code 32.




* Disable



Enable

Code 32 prefix

Enabling this parameter adds the prefix character “A” to all Code 32. Code 39 must be converted to Code 32 (Italian pharmaceutical code) before enabling this parameter.

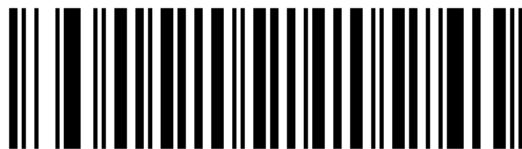

* Disable



Enable

Code 32 check code verification




* Disable



Enable

Transmit Code 32 check digit

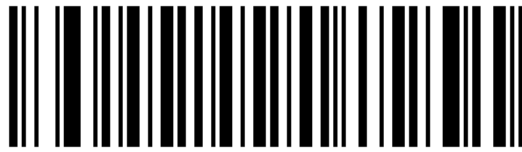

* Transmit check digit 0x00



Enable transmission of Code 32 check digits


Code 93

Transmit start character, stop character, and check digit

0x01

Enable/disable Code 93

Scan the corresponding barcode below to enable or disable Code 93.

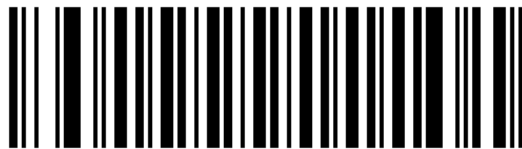

Enable Code 93



* Disable Code 93

Set Code 93 length

Allows reading of Code 93 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Code 93 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

0–99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Code 93 any length




Code 93 specifies the length

Code 11

Enable/disable Code 11

Scan the corresponding barcode below to enable or disable Code 11.

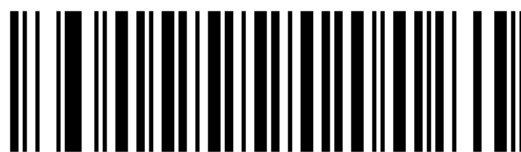

Enable Code 11



* Disable Code 11

Code 11 length setting

Allows reading of Code 11 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Code 11 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

4–99

Set range

01–99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4–8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Code 11 any length



Code 11 specifies the length

Check code verification

This feature allows the reading engine to check the integrity of all Code 11 encodings to verify that the data complies with the specified check digit algorithm. This will select the check digit mechanism for the decoded Code 11 barcode. Options include checking one parity digit, checking two parity digits, or disabling the feature.


To enable this feature, scan the Code 11 barcode below that matches the required number of check digits.



* Enable




a check digit

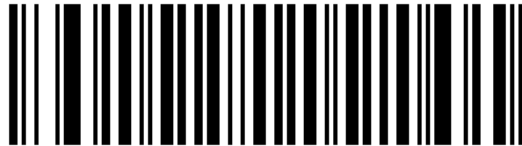

two check digits

Transmit Code 11 check digit

Scan the barcode below to choose whether to transmit the Code 11 check digit.

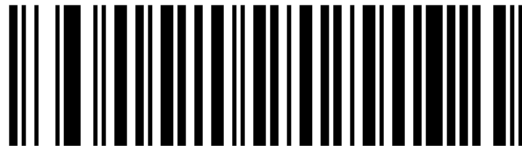

Transmit Code 11 check digit



* Code 11 check digit is not transmitted

Note

In order for this parameter function to be implemented, Code 11 check code verification must be enabled.

Interleaved 2 of 5/ITF/Crossed 25 yards

Enable/Disable Interleaved 2 of 5

Scan the corresponding barcode below to enable or disable Interleaved 2 of 5.



* Enable Interleaved 2 of 5



Disable Interleaved 2 of 5

Interleaved 2 of 5 Length Settings

Allows reading of Interleaved 2 of 5 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Interleaved 2 of 5 arbitrary length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

4-99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Interleaved 2 of 5 any length



Interleaved 2 of 5 specified length

I 2 of 5 check code verification

When enabled, this parameter checks the integrity of the I 2 of 5 symbology to ensure compliance with specified algorithms, including USS (Uniform Symbol Specification) or OPCC (Optical Product Code Council)




* Disable



Enable

Transmit I 2 of 5 check digits

Scanning this barcode transmits a checksum of the data.

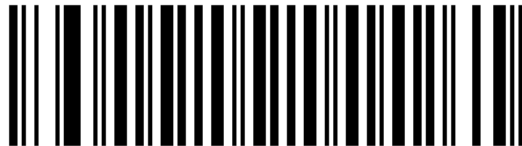

Transmit I 2 of 5 check digits



* Do not transmit I 2 of 5 check digits

Discrete 2 of 5/Industrial 2 of 5/IND25/Industrial 25 yards

Enable/disable Discrete 2 of 5

Scan the corresponding barcode below to enable or disable Discrete 2 of 5.



Enable Discrete 2 of 5



* Disable Discrete 2 of 5

Discrete 2 of 5 Length Settings

Allows reading of Discrete 2 of 5 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Discrete 2 of 5 arbitrary length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

4-99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Discrete 2 of 5 any length




Discrete 2 of 5 specified length

Discrete 2 of 5 Verification



Enable

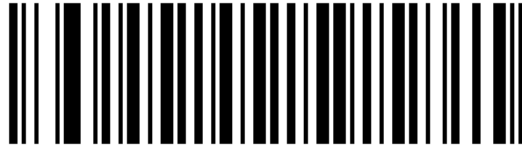

* Disable

Discrete 2 of 5 Send check character



Enable Discrete 2 of 5 to send check characters




Disable Discrete 2 of 5 Send check characters

Matrix 25(Matrix 25)

Enable/disable Matrix 25



Enable Matrix 25

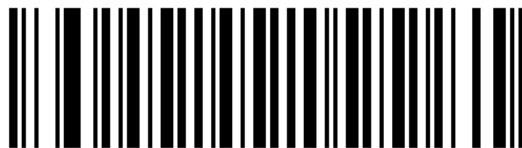

* Disable Matrix 25

Matrix 25 check digit verification



Enable Matrix 25 checksum confirmation



* Disable Matrix 25 checksum confirmation

Transmitting Matrix 25 check characters



Enable Matrix 25 transmission check characters



* Disable Matrix 25 transmission check characters

Matrix 25 length setting

Allows reading of Matrix 25 codes of specific lengths. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Matrix 25 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

4-99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Matrix 25 any length



Matrix 25 specifies the length

Standard 25/IATA 25(Standard 25)

Enable/disable Standard 25

Scan the corresponding barcode below to enable or disable Standard 25.



* Disable



Enable

Standard 25 check digit verification



* Disable Standard 25 checksum confirmation



Enable Standard 25 checksum confirmation

Transmission check character



* Disable Standard 25 transmission check characters



Enable Standard 25 transmission check characters

Standard 25 length setting

Allows reading of Standard 25 codes of specific lengths. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Standard 25 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

4-99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Standard 25 any length



Standard 25 specified length

Codabar

Enable/disable Codabar

Scan the corresponding barcode below to enable or disable Codabar.



Enable Codabar



* Disable Codabar

Codabar length setting

Allows reading of Codabar codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Codabar Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

2-99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Codabar any length



Codabar specifies the length

Codabar verification



Enable



* Disable

Codabar sends check characters




Enable




* Disable

NOTICE Edit

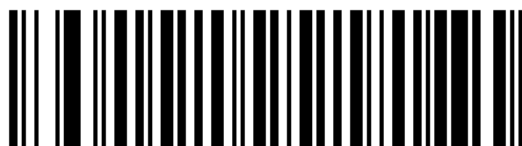

Enable NOTIS editing

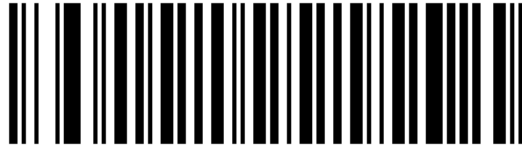

* Disable NOTIS editing

Start and stop character format

The start and stop characters can each be one of A, B, C, or D. The stop character can also be one of T, N, *, or E.




* ABCD/ABCD



ABCD/TN*E

Start and stop character letter case

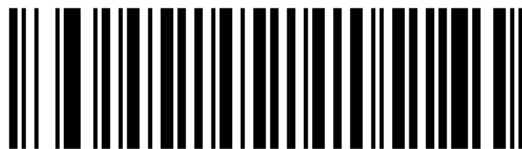

* uppercase letter



lowercase letters

MSI/MSI PLESSEY

Enable/disable MSI

Scan the corresponding barcode below to enable or disable MSI.



Enable MSI



* Disable MSI

MSI length settings

Allows reading MSI codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “MSI Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

2-99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.




MSI arbitrary length




MSI specified length

MSI check digit

These check digits at the end of the barcode verify data integrity. At least one check digit is always required, and check digits are not transmitted with the data automatically. If you select two check digits, you must also set the MSI check digit algorithm.

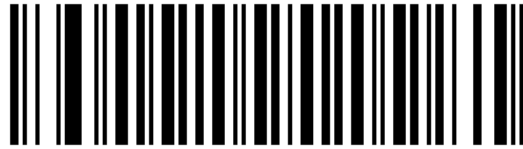


* An MSI check digit

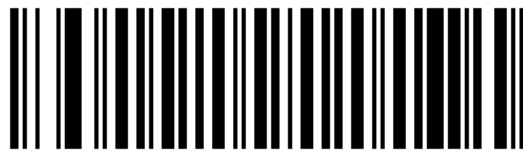

Two MSI check digits


Transmit MSI check code

Scan this barcode to be set to transmit a checksum with data.

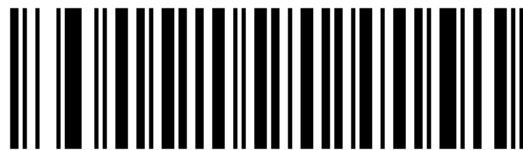

Transmit MSI check code

Scan this barcode to set up data transmission without a checksum.

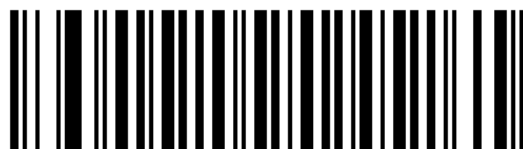

* MSI check code is not transmitted

MSI check code algorithm

When selecting two MSI check digits, one of the following algorithms needs to be selected.



MOD 10 / MOD 11




* MOD 10 / MOD 10


GS1 DataBar/RSS

Enable/disable GS1 DataBar/RSS

Scan the corresponding barcode below to enable or disable GS1 DataBar/RSS.

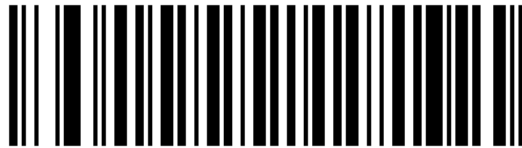

Enable GS1 DataBar/RSS

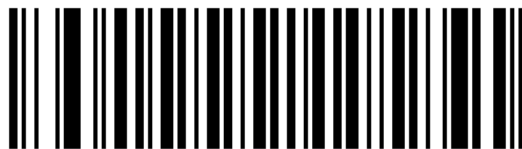

* Disable GS1 DataBar/RSS

RSS AI characters



* Enable



Disable

PDF417

Enable/disable PDF417

Scan the corresponding barcode below to enable or disable PDF417.



Disable PDF417



* Enable PDF417

PDF417 positive/negative reading



* read only positive



Read only invert



Both forward and reverse phases can be read.


QR Code

Enable/disable QR Code

Scan the corresponding barcode below to enable or disable QR Code.



Disable QR Code

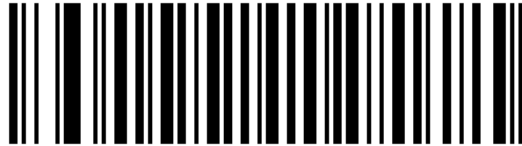

* Enable QR Code

ECI control



* ECI does not output



ECI output

QR positive/reverse phase reading



* read only positive



Read only invert



Both forward and reverse phases can be read.

Remove UTF-8 BOM encoding format of QR Code

When enabled, UTF-8 BOM encoding format is removed when outputting QR Code data.



* Disable



Enable

Data Matrix (DM)

Both normal images and mirror images can be read.

Enable/disable Data Matrix (DM)

Scan the corresponding barcode below to enable or disable the Data Matrix (DM).



Disable Data Matrix



* Enable Data Matrix

Positive/negative reading



* read only positive



Read only invert



Both forward and reverse phases can be read.

ECI control



* ECI does not output



ECI output

Maxi Code

Enable/disable Maxi Code

Scan the corresponding barcode below to enable or disable Maxi Code.



* Disable Maxi Code



Enable Maxi Code


Aztec Code

Enable/disable Aztec Code

Scan the corresponding barcode below to enable or disable Aztec Code.



* Disable Aztec Code

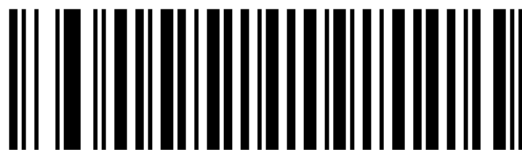

Enable Aztec Code

Han Xin Code

Enable/disable Han Xin Code

Scan the corresponding barcode below to enable or disable Han Xin Code.



* Disable Han Xin Code



Enable Han Xin Code


Positive/negative reading



* read only positive



Read only invert

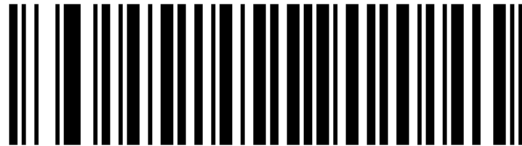


Both forward and reverse phases can be read.

ISSN

Converts to EAN-13 when disabled.



* Disable

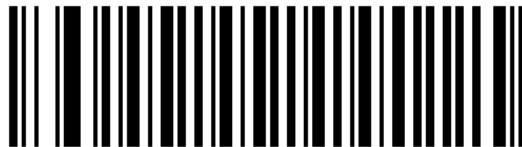

Enable

NEC-25(COOP25)

NEC-25(COOP25) switch



Enable



* Disable

NEC-25(COOP25) Verification



Enable




* Disable

NEC-25(COOP25) Send check character



Enable

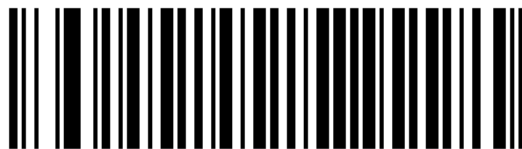

* Disable

NEC-25 (COOP 25) length setting

Allows reading of NEC-25 codes of specific lengths. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “NEC-25 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

4-99

Set range

01-99

condition	Description
L1 < L2	L1 is the minimum length, L2 is the maximum length
L1 > L2	L1 is the maximum length, L2 is the minimum length
L1 = L2	Only read fixed length

Example

Only 4–8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



NEC-25 any length



NEC-25 specified length

COMPOSITE

Enable/disable COMPOSITE



* Disable



Enable

12.6 Engine Setup Codes

Numeric Setup Codes


For parameters that require an exact value, scan the appropriate numeric setup codes.




0



1

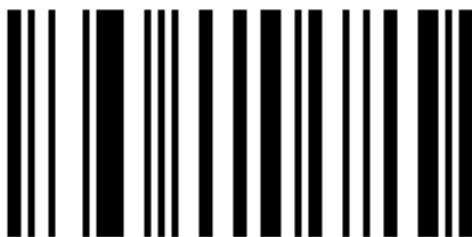

2

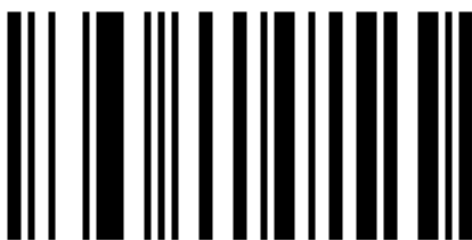


3




4




5

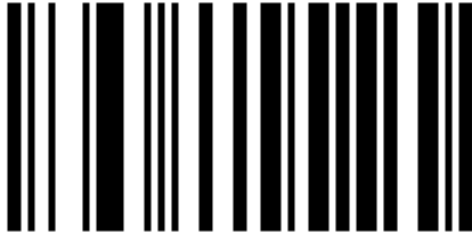


6

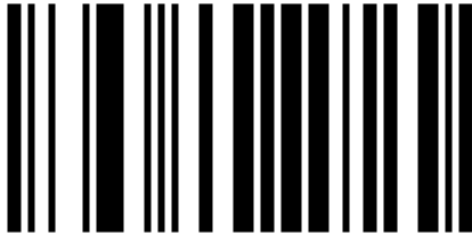

7

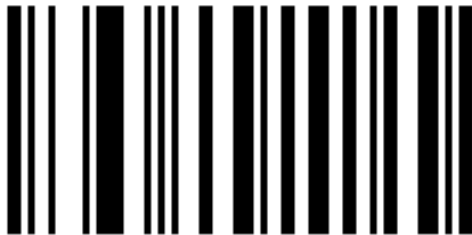


8

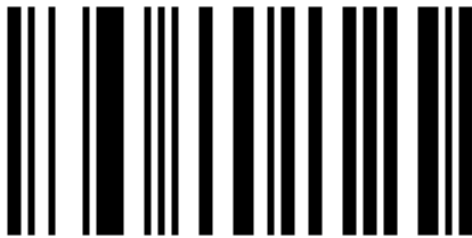

9

Cancel Barcode

To change a selection or cancel an incorrect entry, scan the barcode below.

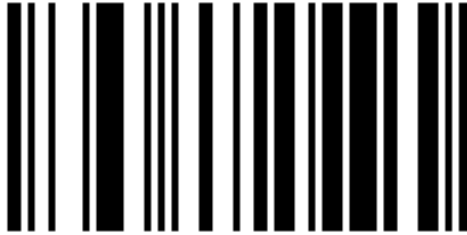

Setup Code: Cancel

12.7 Engine Character Table

Character Reference Table

When appending prefixes and suffixes to decoded data, follow these steps to select character values:

1. Set Output Data Transmission Format (parameter 0xE2) to the required option.
2. Query the ASCII code value to be set according to the table, and enter it into prefix (0x69), suffix 1 (0x68) or suffix 2 (0x6A) in hexadecimal form.

Character Reference Table (Control Characters)

Scan Value	Hex Value	Character	Keyboard Function Key	Keyboard Ctrl Key Combination
1000	00h	NUL	Null	CTRL 2
1001	01h	SOH	Keypad Enter	CTRL A
1002	02h	STX	Caps lock	CTRL B
1003	03h	ETX	Right Arrow	CTRL C
1004	04h	EOT	Up Arrow	CTRL D
1005	05h	ENQ	Null	CTRL E
1006	06h	ACK	Null	CTRL F
1007	07h	BEL	Enter	CTRL G
1008	08h	BS	Left Arrow	CTRL H
1009	09h	HT	Horizontal Tab	CTRL I
1010	0Ah	LF	Down Arrow	CTRL J
1011	0Bh	VT	Vertical Tab	CTRL K
1012	0Ch	FF	Delete	CTRL L
1013	0Dh	CR	Enter	CTRL M
1014	0Eh	SO	Insert	CTRL N
1015	0Fh	SI	Esc	CTRL O
1016	10h	DLE	F11	CTRL P
1017	11h	DC1	Home	CTRL Q
1018	12h	DC2	Print Screen	CTRL R
1019	13h	DC3	Backspace	CTRL S
1020	14h	DC4	tab+shift	CTRL T
1021	15h	NAK	F12	CTRL U
1022	16h	SYN	F1	CTRL V
1023	17h	ETB	F2	CTRL W

Scan Value	Hex Value	Character	Keyboard Function Key	Keyboard Ctrl Key Combination
1024	18h	CAN	F3	CTRL X
1025	19h	EM	F4	CTRL Y
1026	1Ah	SUB	F5	CTRL Z
1027	1Bh	ESC	F6	CTRL [
1028	1Ch	FS	F7	CTRL \
1029	1Dh	GS	F8	CTRL]
1030	1Eh	RS	F9	CTRL 6
1031	1Fh	US	F10	CTRL -
1032	20h	(space)	Space	Space

Character comparison table (visible characters) (continued table)

Scan Value	Hex Value	Keyboard Function Key
1033	21h	!
1034	22h	'
1035	23h	#
1036	24h	\$
1037	25h	%
1038	26h	&
1039	27h	'
1040	28h	(
1041	29h	)
1042	2Ah	*
1043	2Bh	+
1044	2Ch	,
1045	2Dh	-
1046	2Eh	.
1047	2Fh	/
1048	30h	0
1049	31h	1
1050	32h	2
1051	33h	3
1052	34h	4
1053	35h	5
1054	36h	6
1055	37h	7

Scan Value	Hex Value	Keyboard Function Key
1056	38h	8
1057	39h	9
1058	3Ah	:
1059	3Bh	;
1060	3Ch	<

continues on next page

Table 4 – continued from previous page

Scan Value	Hex Value	Keyboard Function Key
1061	3Dh	=
1062	3Eh	>
1063	3Fh	?
1064	40h	@
1065	41h	A
1066	42h	B
1067	43h	C
1068	44h	D
1069	45h	E
1070	46h	F
1071	47h	G
1072	48h	H
1073	49h	I
1074	4Ah	J
1075	4Bh	K
1076	4Ch	L
1077	4Dh	M
1078	4Eh	N
1079	4Fh	O
1080	50h	P
1081	51h	Q
1082	52h	R
1083	53h	S
1084	54h	T
1085	55h	U
1086	56h	V

Scan Value	Hex Value	Keyboard Function Key
1087	57h	W
1088	58h	X
1089	59h	Y
1090	5Ah	Z
1091	5Bh	[
1092	5Ch	\
1093	5Dh	]
1094	5Eh	^
1095	5Fh	_ ,
1096	60h	
1097	61h	a
1098	62h	b
1099	63h	c
1100	64h	d
1101	65h	e
1102	66h	f
1103	67h	g
1104	68h	h

continues on next page

Table 5 – continued from previous page

Scan Value	Hex Value	Keyboard Function Key
1105	69h	i
1106	6Ah	j
1107	6Bh	k
1108	6Ch	l
1109	6Dh	m
1110	6Eh	n
1111	6Fh	o
1112	70h	p
1113	71h	q
1114	72h	r
1115	73h	s
1116	74h	t
1117	75h	u

Scan Value	Hex Value	Keyboard Function Key
1118	76h	v
1119	77h	w
1120	78h	x
1121	79h	y
1122	7Ah	z
1123	7Bh	{
1124	7Ch	
1125	7Dh	}
1126	7Eh	~
1127	7Fh	Undefined

Values from 1128 to 1255 can also be set; hexadecimal values 80h to FFh are used for SSI.

13 Appendix

13.1 Character Reference Table

ASCII Function Key Character Reference Table

0FH

HEX	CODE	*Config0	Config3	Con- fig1	Con- fig4	Config2 Win- dows	Config5 Win- dows
00H	NUL	NUL	NUL	Ctrl+@	Ctrl+@	ALT+000	ALT+000
01H	SOH	NUL	NUL	Ctrl+A	Ctrl+A	ALT+001	ALT+001
02H	STX	NUL	NUL	Ctrl+B	Ctrl+B	ALT+002	ALT+002
03H	ETX	NUL	NUL	Ctrl+C	Ctrl+C	ALT+003	ALT+003
04H	EOT	NUL	NUL	Ctrl+D	Ctrl+D	ALT+004	ALT+004
05H	ENQ	NUL	NUL	Ctrl+E	Ctrl+E	ALT+005	ALT+005
06H	ACK	NUL	NUL	Ctrl+F	Ctrl+F	ALT+006	ALT+006
07H	BEL	NUL	NUL	Ctrl+G	Ctrl+G	ALT+007	ALT+007
08H	BS	Backspace	Backspace	Ctrl+H	Ctrl+H	ALT+008	ALT+008
09H	HT	TAB	TAB	TAB	Ctrl+I	ALT+009	ALT+009
0AH	LF	NUL	Enter	Ctrl+J	Ctrl+J	ALT+010	ALT+010
0BH	VT	TAB	TAB	Ctrl+K	Ctrl+K	ALT+011	ALT+011
0CH	FF	NUL	NUL	Ctrl+L	Ctrl+L	ALT+012	ALT+012
0DH	CR	Enter	Enter	Enter	Ctrl+M	Enter	ALT+013
0EH	SO	NUL	NUL	Ctrl+N	Ctrl+N	ALT+014	ALT+014
0FH	SI	NUL	NUL	Ctrl+O	Ctrl+O	ALT+015	ALT+015

1FH

HEX	CODE	*Config0/3	Config1/4	Config2/5 Windows
10H	DLE	NUL	Ctrl+P	ALT+016
11H	DC1	NUL	Ctrl+Q	ALT+017
12H	DC2	NUL	Ctrl+R	ALT+018
13H	DC3	NUL	Ctrl+S	ALT+019
14H	DC4	NUL	Ctrl+T	ALT+020
15H	NAK	NUL	Ctrl+U	ALT+021
16H	SYN	NUL	Ctrl+V	ALT+022
17H	ETB	NUL	Ctrl+W	ALT+023
18H	CAN	NUL	Ctrl+X	ALT+024
19H	EM	NUL	Ctrl+Y	ALT+025
1AH	SUB	NUL	Ctrl+Z	ALT+026
1BH	ESC	ESC	Ctrl+[	ALT+027
1CH	FS	NUL	Ctrl+\	ALT+028
1DH	GS	NUL	Ctrl+]	ALT+029
1EH	RS	NUL	Ctrl+^	ALT+030
1FH	US	NUL	Ctrl+-	ALT+031

Note

On Mac systems, the Ctrl key corresponds to the Command key.

ASCII Character Reference Table**5FH**

HEX	ASCII	HEX	ASCII	HEX	ASCII	HEX	ASCII
20H	Space	30H	0	40H	@	50H	P
21H	!	31H	1	41H	A	51H	Q
22H	"	32H	2	42H	B	52H	R
23H	#	33H	3	43H	C	53H	S
24H	\$	34H	4	44H	D	54H	T
25H	%	35H	5	45H	E	55H	U
26H	&	36H	6	46H	F	56H	V
27H	'	37H	7	47H	G	57H	W
28H	(	38H	8	48H	H	58H	X
29H	)	39H	9	49H	I	59H	Y
2AH	*	3AH	:	4AH	J	5AH	Z
2BH	+	3BH	;	4BH	K	5BH	[
2CH	,	3CH	<	4CH	L	5CH	\
2DH	-	3DH	=	4DH	M	5DH	]
2EH	.	3EH	>	4EH	N	5EH	^
2FH	/	3FH	?	4FH	O	5FH	_

9DH

HEX	ASCII	HEX	ASCII	HEX	Fun Key	HEX	Fun Key
60H	`	70H	p	80H	F1	90H	End
61H	a	71H	q	81H	F2	91H	Page Down
62H	b	72H	r	82H	F3	92H	Right Arrow
63H	c	73H	s	83H	F4	93H	Left Arrow
64H	d	74H	t	84H	F5	94H	Down Arrow
65H	e	75H	u	85H	F6	95H	Up Arrow
66H	f	76H	v	86H	F7	96H	Print Screen
67H	g	77H	w	87H	F8	97H	*Ctrl
68H	h	78H	x	88H	F9	98H	*Shift
69H	i	79H	y	89H	F10	99H	*Left Alt
6AH	j	7AH	z	8AH	F11	9AH	*Right Alt
6BH	k	7BH	{	8BH	F12	9BH	1s Delay
6CH	l	7CH		8CH	Insert	9CH	*Win-GUI
6DH	m	7DH	}	8DH	Home	9DH	*Keystroke
6EH	n	7EH	~	8EH	Page Up		
6FH	o	7FH	DEL	8FH	Delete		

 Note

When Ctrl, Shift, Alt, GUI are set as prefix or suffix, they will be output in combination with the next character (not supported when set to ALT, TH keyboard). The character after Keystroke is directly output as the key value.