



# **DS7500 User Manual**

*Release v1.0.0*

**2026-06-27**

# Contents


|          |                                                                                   |           |
|----------|-----------------------------------------------------------------------------------|-----------|
| <b>1</b> | <b>System Settings</b>                                                            | <b>4</b>  |
| 1.1      | Read firmware version . . . . .                                                   | 4         |
| 1.2      | Restore Factory Defaults . . . . .                                                | 4         |
| 1.3      | working mode . . . . .                                                            | 4         |
| <b>2</b> | <b>Power management</b>                                                           | <b>6</b>  |
| 2.1      | Read sleep time . . . . .                                                         | 6         |
| 2.2      | Set sleep time . . . . .                                                          | 6         |
| 2.3      | Get scanner battery level . . . . .                                               | 8         |
| <b>3</b> | <b>Feedback Indicators</b>                                                        | <b>8</b>  |
| 3.1      | Buzzer control . . . . .                                                          | 8         |
| 3.2      | Vibration motor control . . . . .                                                 | 9         |
| 3.3      | Buzzer sound definition . . . . .                                                 | 10        |
| 3.4      | Indicator definition . . . . .                                                    | 10        |
| <b>4</b> | <b>wired mode</b>                                                                 | <b>10</b> |
| 4.1      | USB transfer method . . . . .                                                     | 10        |
| 4.2      | USB keyboard transfer speed . . . . .                                             | 11        |
| 4.3      | USB HID multi-key send settings . . . . .                                         | 12        |
| <b>5</b> | <b>wireless mode</b>                                                              | <b>13</b> |
| 5.1      | Read Interface Settings . . . . .                                                 | 13        |
| 5.2      | Wireless transmission method . . . . .                                            | 13        |
| 5.3      | 2.4G pairing . . . . .                                                            | 13        |
| 5.4      | Receiver working mode . . . . .                                                   | 14        |
| 5.5      | 2.4G transmission cache . . . . .                                                 | 16        |
| <b>6</b> | <b>Bluetooth Mode</b>                                                             | <b>16</b> |
| 6.1      | Read Interface Settings . . . . .                                                 | 16        |
| 6.2      | Bluetooth Transmission Mode . . . . .                                             | 16        |
| 6.3      | Bluetooth Operating Mode . . . . .                                                | 17        |
| 6.4      | Change Bluetooth Name . . . . .                                                   | 18        |
| 6.5      | Clear Bluetooth HID Pairing . . . . .                                             | 18        |
| 6.6      | System Keyboard Functions . . . . .                                               | 18        |
| 6.7      | Switch between Bluetooth and 2.4G by pressing and holding for 8 seconds . . . . . | 19        |
| 6.8      | Bluetooth keyboard transmission speed . . . . .                                   | 20        |
| 6.9      | Bluetooth connection status non-sleep setting . . . . .                           | 21        |
| <b>7</b> | <b>Keyboard Settings</b>                                                          | <b>21</b> |
| 7.1      | HID Keyboard General Setting . . . . .                                            | 21        |
| 7.2      | Keyboard language settings . . . . .                                              | 28        |
| <b>8</b> | <b>Keyboard Language</b>                                                          | <b>28</b> |
| 8.1      | Read the current keyboard layout . . . . .                                        | 28        |
| <b>9</b> | <b>Data Editing</b>                                                               | <b>35</b> |
| 9.1      | Standard Data Editing Settings . . . . .                                          | 35        |
| 9.2      | Extended Data Editing Settings . . . . .                                          | 41        |
| 9.3      | Terminal character settings . . . . .                                             | 43        |

|           |                                         |            |
|-----------|-----------------------------------------|------------|
| 9.4       | GS1 AI field bracket settings . . . . . | 44         |
| <b>10</b> | <b>Scan Mode</b>                        | <b>46</b>  |
| 10.1      | Barcode Decode Mode . . . . .           | 46         |
| <b>11</b> | <b>Module Settings</b>                  | <b>48</b>  |
| 11.1      | Device function settings . . . . .      | 48         |
| 11.2      | Trigger settings . . . . .              | 49         |
| 11.3      | Engine Code ID . . . . .                | 54         |
| 11.4      | Engine output format . . . . .          | 58         |
| 11.5      | Barcode Settings . . . . .              | 60         |
| 11.6      | Engine Setup Codes . . . . .            | 104        |
| 11.7      | Engine Character Table . . . . .        | 107        |
| <b>12</b> | <b>Appendix</b>                         | <b>111</b> |
| 12.1      | Character Reference Table . . . . .     | 111        |

---

# 1 System Settings

## 1.1 Read firmware version

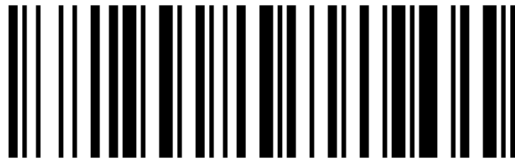

Read firmware version

## 1.2 Restore Factory Defaults

### Note

If Write Custom Defaults has been performed, Restore Defaults restores those custom defaults; otherwise it restores factory defaults.

### Important

Set Factory Defaults clears all custom defaults and restores factory defaults.



Restore custom defaults



Write custom default values



Set factory defaults

## 1.3 working mode

### Note

During the data upload process, if you scan the “data upload” command again, the current upload will be canceled or stopped.

**Note**

In wireless transmission mode, if automatic storage is turned on, barcodes that fail to be transmitted will be automatically saved, and the stored data can be read through “data upload” .



\* Normal mode



storage mode



Upload storage data



Read the total number of stored barcodes



Clear storage data after uploading



Read storage space usage



Clear stored barcode



\* Autosave mode off



Automatic storage mode is on

## 2 Power management

### 2.1 Read sleep time



Read sleep time

### 2.2 Set sleep time



Hibernate now



Sleep after 1 minute



Sleep after 3 minutes (default)



Sleep after 5 minutes




Sleep after 10 minutes



Sleep after 30 minutes



Sleep after 1 hour

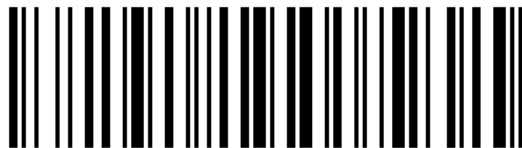

Sleep after 2 hours



never sleep

## 2.3 Get scanner battery level



Get battery level

## 3 Feedback Indicators

### 3.1 Buzzer control



mute



\* high volume



medium volume




low volume



\* high pitch



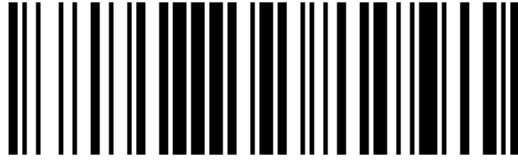

low pitch



\* SDK voice response off



SDK voice response enabled



Base connection buzzer prompt switch

## 3.2 Vibration motor control

### Note

The vibration motor works with a beep prompt, not all models support this feature.



Disable



Enable

### 3.3 Buzzer sound definition

| Type        | Sound                           | Description                                               | Audio file                        |
|-------------|---------------------------------|-----------------------------------------------------------|-----------------------------------|
| Beep        | Single tone (2 pitches)         | Storage mode decode; power-off prompt.                    | storage-mode.m4a, shutdown.m4a    |
| Beep        | Single tone (3 pitches)         | Power-on prompt; setting saved; upload complete.          | startup.m4a, wireless-setting.m4a |
| Beep        | Short single tone               | Successful decode.                                        | one-beeps.m4a                     |
| Beep        | 30-second continuous short tone | 2.4G pairing waits for the receiver; stops after pairing. | pair2.4G.m4a                      |
| Alarm sound | Two tones (same pitch)          | Low-battery alarm during decoding.                        | two-beeps.m4a                     |
| Alarm sound | Three tones (same pitch)        | Inventory storage error or capacity exceeded.             | three-beeps.m4a                   |
| Alarm sound | Transmission failure            | Alarm when barcode transmission fails.                    | No audio available                |
| Alarm sound | Five tones (same pitch)         | Boot failure caused by low battery.                       | five-beeps.m4a                    |

### 3.4 Indicator definition

| Indicator               | Status                                                                                                                                                                                              |
|-------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| red light / green light | When charging, the red light is on and the green light is off; when fully charged, the red light is off and the green light is on.                                                                  |
| blue light              | Following the buzzer action, the buzzer lights up when it sounds and goes out when it does not sound; models that support Bluetooth mode are also used to indicate the Bluetooth connection status. |

## 4 wired mode


#### Note

Only applicable to scanners that support wired transmission.

### 4.1 USB transfer method




\* USB keyboard mode

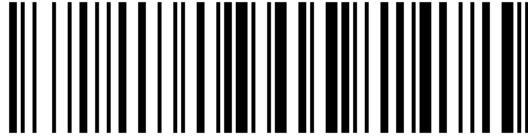


USB virtual serial port mode

**Note**

After the automatic interface selection is turned on, the device will automatically switch between wired and wireless; when plugging in the USB cable, the wired mode will be used first. When the USB cable is not plugged in or USB is unavailable, the scanner works in 2.4G mode. Some models may not support this feature.

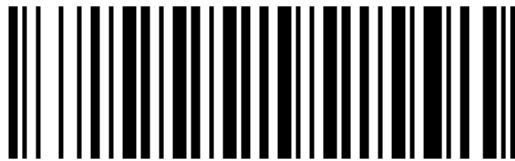

\* Wired/wireless automatic selection turns on

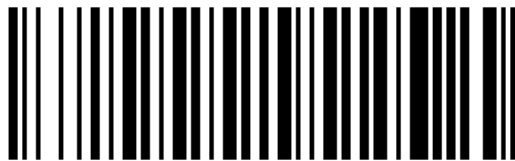

Wired/wireless automatic selection off

## 4.2 USB keyboard transfer speed

**Note**

This setting also affects the speed of RF and Bluetooth transmission of very long barcodes and stored data uploads.



\* top speed



top speed




medium speed



medium speed



Read keyboard speed

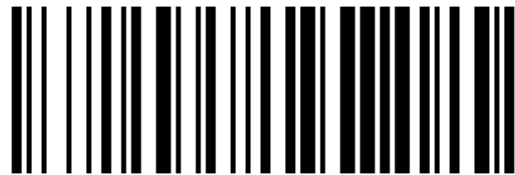

Read keyboard speed

### 4.3 USB HID multi-key send settings

#### Note

The settings in this section are only applicable to Windows systems.



USB HID multi-key sending enabled



\* USB HID multi-key sending off

## 5 wireless mode

### Note

Only suitable for scanners that support 2.4G transmission.

### 5.1 Read Interface Settings



Current Interface Settings

### 5.2 Wireless transmission method

### Note

The blue light is always on or flashing to indicate that it is currently in Bluetooth mode; the blue light is off to indicate that it is currently in 2.4G mode or USB wired mode.



2.4G transmission mode

### 5.3 2.4G pairing

### Important

Only valid in wireless 2.4G mode.



Start 2.4G pairing



one-to-one pairing



One-to-one pairing


## 5.4 Receiver working mode

### Note

Composite device mode is only available on receivers running FWVerL or later. You can also use `ReceiverAddress.exe` to generate a pairing barcode and complete pairing by scanning it.



Receiver as composite device

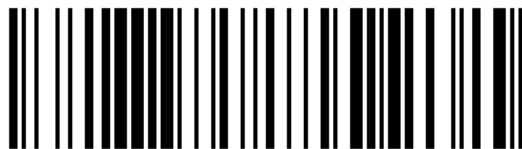

Receiver as virtual serial port

### Note

This mode requires the virtual serial port driver to be installed.



receiver as keyboard

## Receiver keyboard transmission speed

### Note

The instructions in this section are only applicable to receivers of FWVerL and above. The transmission speeds of the scanner and receiver must match, otherwise errors may occur when transmitting long barcodes.

### Important


This command is only valid in wireless 2.4G mode and the receiver is connected normally.



Read keyboard speed

### Example

KB SP=2, 4 represents a USB keyboard speed of 2ms and a receiver keyboard speed of 4ms.

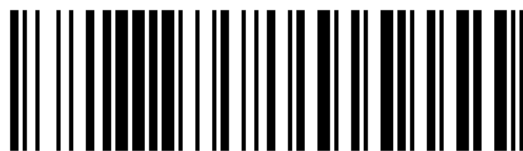

receiver keyboard high speed



Receiver Keyboard Medium Speed



Receiver Keyboard Low Speed

### Note

It is only valid in wireless 2.4G mode and the receiving end receives normally.

## 5.5 2.4G transmission cache

### **Note**

This command is only available on some scanners that support this feature. After scanning the setup code, two short beeps indicate disabled, and one three-tone beep indicates enabled.

When scanning ordinary barcodes, if the amount of barcode data is large and the scanning interval is short, and the data is not uploaded in time, you can use this setting barcode to turn on or off data caching.



SRAM cache switch

In normal mode, after data caching is turned on, if the device briefly leaves the communication distance and enters offline state, you can use this setting to choose to wait for connection before uploading the cached data, or to clear the cached data.



Offline caching switch

## 6 Bluetooth Mode

### **Note**

Only suitable for RF+BT scanners with Bluetooth function.

### 6.1 Read Interface Settings



Current Interface Settings

### 6.2 Bluetooth Transmission Mode



**Note**

The blue light is always on or flashing to indicate that it is currently in Bluetooth mode; the blue light is off to indicate that it is currently in 2.4G mode or USB wired mode.



Bluetooth Transmission

### 6.3 Bluetooth Operating Mode

**Note**

Valid only in Bluetooth mode.

**Note**

Before switching the Bluetooth working mode, you need to clear the pairing information between the host device and the scanner.




Bluetooth HID Keyboard (Default)



Bluetooth SPP Serial Port



Bluetooth BLE Serial Port

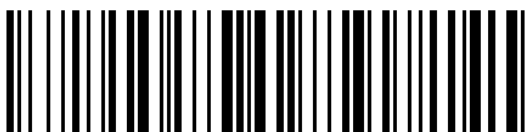

Bluetooth cradle transmission mode

#### Note

It is suitable for pairing with a Bluetooth cradle that has already been paired. When the barcode on the base is damaged, you can also use the gadget BluetoothAddress.exe to generate a pairing barcode.

## 6.4 Change Bluetooth Name

After entering the new Bluetooth name, scan the generated QR code to complete the setup. If the host has saved old pairing records after modification, please delete the old pairing first and search for connection again.

## 6.5 Clear Bluetooth HID Pairing

After scanning “Clear Pairing” in Bluetooth transmission mode, the scanner will disconnect the currently paired device and clear the pairing list, then wait for new devices to be paired. Historically paired devices need to be deleted and paired again.



Clear Bluetooth Pairing

## 6.6 System Keyboard Functions


### iOS system pop-up keyboard function



iOS pop up/hide keyboard



Press and hold the trigger for 4 seconds to toggle the iOS on-screen keyboard

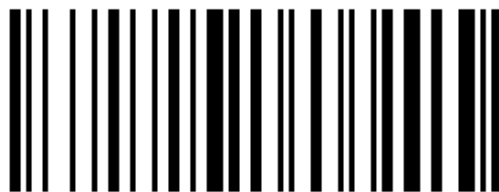

Double-press the trigger to toggle the iOS on-screen keyboard



Pop up iOS keyboard switch after sending

## Windows Caps Lock detection

### Note

This command is only available on some Bluetooth scanners. After scanning the setup code, two short beeps indicate disabled, and one three-tone beep indicates enabled.



Windows Caps Lock detection switch

## 6.7 Switch between Bluetooth and 2.4G by pressing and holding for 8 seconds

### Note

This command is only available on some RF+BT scanners (DS, C, RT). When enabled, press and hold the trigger for more than 8 seconds and release it to switch between RF and BT. If you hold it for more than 16 seconds, the scanner powers off and the mode does not switch. After scanning the setup code, two short beeps indicate disabled, and one three-tone beep indicates enabled.



Press and hold the trigger for 8 seconds to toggle RF/BT switching


## 6.8 Bluetooth keyboard transmission speed

### Note

Valid only in Bluetooth mode.



Read Bluetooth HID delay

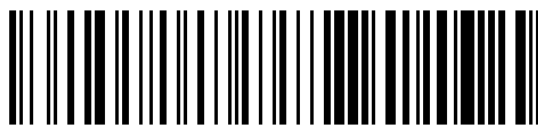

High speed (2 ms)



High speed (6 ms)



\* Medium speed (10 ms)



Medium speed (18 ms)



Low speed (25 ms)



Low speed (30 ms)

## 6.9 Bluetooth connection status non-sleep setting

### **Note**

After scanning the setup code, two short beeps indicate disabled, and one three-tone beep indicates enabled.



Bluetooth connection status non-sleep switch

## 7 Keyboard Settings

### 7.1 HID Keyboard General Setting

HID common settings

### **Note**

The general HID mode settings in this section are applicable to USB keyboard, RF2.4G keyboard, and BT HID keyboard.

#### Ctrl key combination settings



\\* Combine-Key Off



Ctrl+ Key Config1




Alt+ Key Config2



Normal-Key Config3



Ctrl+ Key Config4

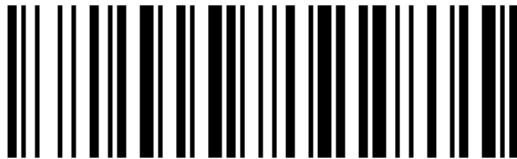

Alt+ Key Config5

**Note**

only for ASCII <0x20 chars, Alt+ key only for Windows system.

## Case settings




normal



Swap case



all caps

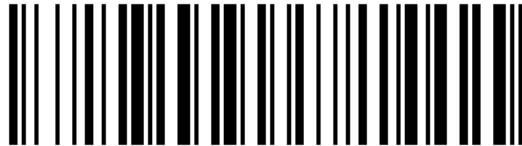

all lowercase

\*When set to ALT, TH keyboard language, the case setting does not apply.

### Num Lock Settings



Num Lock Settings




Num Lock on

\*When the receiving device is a mobile phone, you need to keep the Num Lock off setting, otherwise the numbers will not be displayed.

### Enter character set settings

#### Note

Applicable only to certain mod's of 2D scanners, this setting matches the 2D module's output character set.

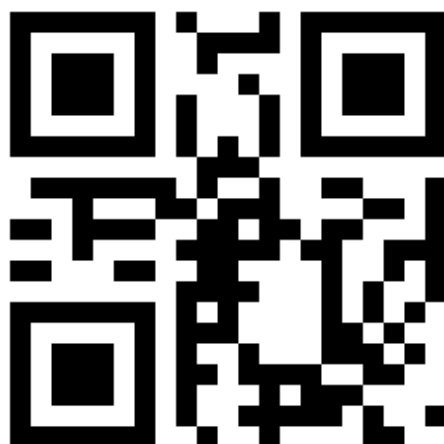

Read the current character set settings



automatic





GBK / BIG5 / HANGUL / SJIS



ISO/IEC 8859



UTF8 (Word)



UTF8 (Txt)



Normal mode

illustrate:

| model        | Applicable scenarios                                                                                                        | Code scan engine<br>output character set | limit                                                   |
|--------------|-----------------------------------------------------------------------------------------------------------------------------|------------------------------------------|---------------------------------------------------------|
| Auto         | Automatically select the input character set as UTF8 or ISO/IEC 8859; Word or Txt output is based on the last UTF8 setting. | primitive type                           | none                                                    |
| GBK          | Windows Notepad, Excel Chinese input.                                                                                       | GBK (GB2312) or original type            | Applies to Windows systems only.                        |
| UTF8 (Word)  | Word, QQ Chinese input.                                                                                                     | UTF8 or primitive type                   | Applies to Windows systems only.                        |
| ISO/IEC 8859 | European single-byte special characters ( $\geq C0H$ ), applicable to FR, GE, TR, PT, ES, CS, IT, UK, HU, SK.               | primitive type                           | Languages not listed need to be added by customization. |
| UTF8 (Txt)   | To input special characters in Windows Notepad, you need to install the Unicode plug-in.                                    | UTF8 or primitive type                   | Applies to Windows systems only.                        |
| Normal       | Multi-language special characters, suitable for characters on FR, GE, TR, PT, ES, CS, IT, UK, HU, SK keyboards.             | UTF8 or primitive type                   | Languages not listed need to be added by customization. |

## Receiving device selection

**Note**

This section is used to set the way different receiving devices input ASCII characters (0x20 to 0x7F) and needs to be used in conjunction with [Keyboard Language Settings](#).



Read the current receiving device settings



Windows device



iPhone/iPad/Mac devices



Android device

\*IOS/MAC devices are currently valid: FR, DE, TR, PT, ES, CS, IT, UK, HU, SK. Please refer to the document “MAC iphone ipad keyboard layout for barcode scanner.docx”

\*It is recommended to install Google Gboard input method uniformly on Android devices. Please refer to the document “Android device keyboard layout for barcode scanner.docx”


## 7.2 Keyboard language settings

**See also**

Keyboard language settings have been split into a separate page: [Keyboard Language Settings](#).

## 8 Keyboard Language

### 8.1 Read the current keyboard layout

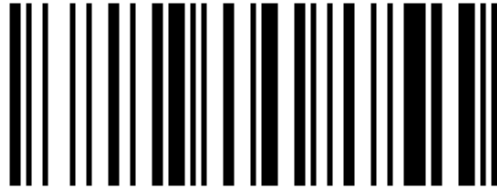

Read the current keyboard layout

**L1 \*ENUSA EN key**



\* US English keyboard

**L2 FR France French key**



French French keyboard

**L3 DE Germany key**



german german keyboard

**L4 IT Italy Italy key**



Italian keyboard

**L5 PT Portugal Portugal key**



Portuguese keyboard

**L6 ES Spain Spain key**



spanish keyboard

**L7 TR Turkey Turkey key**



Turkish Q keyboard



Turkish F keyboard

**L8 ENUK UK key**



British English keyboard

**L9 CS Czech Czech key**



Czech keyboard




Czech standard keyboard

**L10 HU Hungary Hungary key**



Hungarian keyboard

**L11 FR Belgium (French) Belgium FR Key**

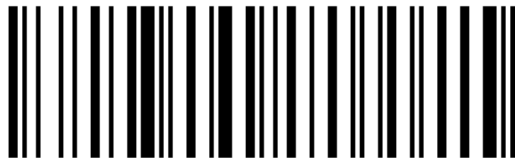

Belgian French keyboard

**L12 PT Brazil (Portuguese) Brazil PT Key**



Brazilian Portuguese keyboard

**L13 FR Canadian French (Traditional) Canadian FR Key**



Canadian French (traditional) keyboard

**L14 HRCroatia Key**



Croatian keyboard

**L15 SK Slovak Key**



Slovak QWERTY keyboard



Slovak keyboard

**L16 DA Denmark Denmark Key**



Danish keyboard

**L17 FI Finland Key**



Finnish keyboard

**L18 ES Latin America (Spanish) Latin-America ES Key**



Latin American Spanish keyboard

**L19 NL Netherlands Netherlands Key**





Dutch keyboard

**L20 NO Norway Norway Key**



Norwegian keyboard

**L21 PL Poland Poland Key**



Polish keyboard

**L22 SR Serbia (Latin) Serbia Key**



Serbian Latin keyboard

**L23 SL Slovenia Key**



Slovenian keyboard

**L24 SV Sweden Sweden Key**




Swedish keyboard

#### L25 DE Switzerland (German) Swiss DE Key



Swiss German keyboard

#### L26 JP Japanese Japanese Key

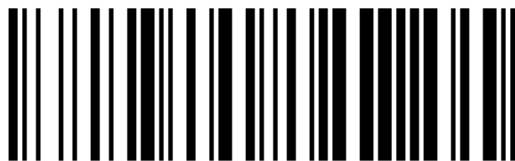

Japanese keyboard

#### L27 TH Thai Thailand Key

##### Note

When using a Thai keyboard, the code scan engine also needs to be set to TH output.



Thai keyboard

##### See also

Reference file: RF2.4G, Bluetooth Settings\_Chinese, Thai, Korean.docx.

#### L28 ALT International Keyboard ALT Global Key

##### Note

The ALT international keyboard layout is only available on Windows systems. It is not affected by the host keyboard layout, but it reduces transmission speed.



ALT international keyboard

## L29 ALT Single Byte Special Keyboard ALT Single Byte Special Key



ALT single-byte special character keyboard

### Note

Languages not listed in this section need to be customized to be supported.

## 9 Data Editing

### 9.1 Standard Data Editing Settings

This section describes how to configure common output rules such as prefixes, suffixes, and hidden characters by scanning setup codes.

#### Prefix/Suffix and Hidden Character Settings

You can add up to 10 prefixes and/or 10 suffixes to the output data. To configure them, scan the two-digit hexadecimal numeric setup codes that correspond to the required ASCII value (that is, two barcodes per character).

#### See also

For character values, please refer to *ASCII Function Key Character Reference Table* and *ASCII Character Reference Table*; for parameters that require input of numerical values, please scan *Numeric Setup Codes*; for specific procedures, see *Add a Prefix or Suffix*.

Can be set to hide the first, middle or last characters of the barcode. After scanning the corresponding hidden setting barcode, scan the two-digit hexadecimal setting barcode corresponding to the length of the characters to be hidden (00~FF, for example, scan 0 and 4 in sequence when hiding 4 characters).


#### See also

See *Steps to Hide the First/Middle/Tail Characters of a Barcode* for the hidden character process.


## Operation Code



Add Prefix

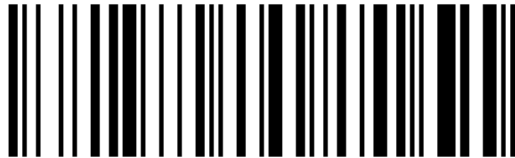


Add Suffix

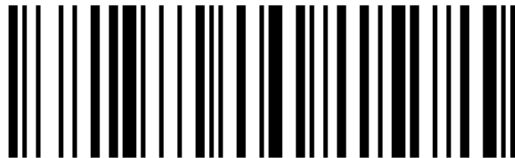

Clear all prefixes



Clear all suffixes

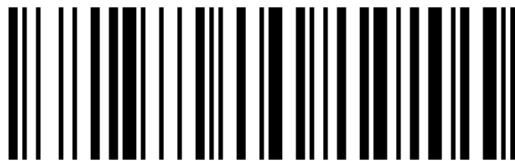


Hide Leading Characters



Hide Middle Section Start Position




Hide Middle Section Length

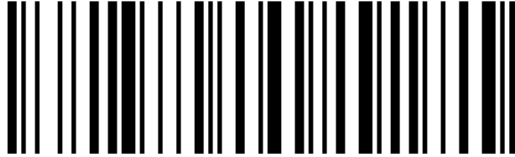


Hide Trailing Characters

## Numeric Setup Codes

For parameters that require a numeric value, scan the corresponding numeric setup codes.

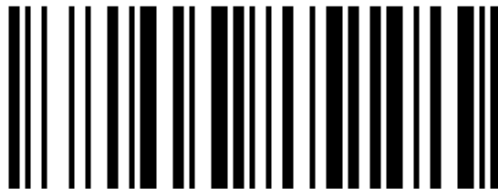


Numeric Setup Code 0

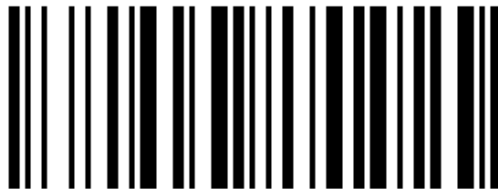

Numeric Setup Code 1



Numeric Setup Code 2

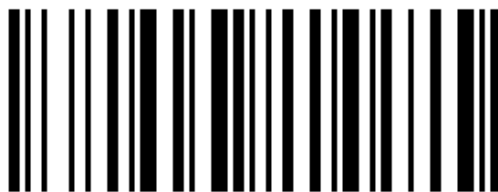

Numeric Setup Code 3



Numeric Setup Code 4



Numeric Setup Code 5



Numeric Setup Code 6



Numeric Setup Code 7



Numeric Setup Code 8



Numeric Setup Code 9



Numeric Setup Code A



Numeric Setup Code B




Numeric Setup Code C



Numeric Setup Code D



Numeric Setup Code E

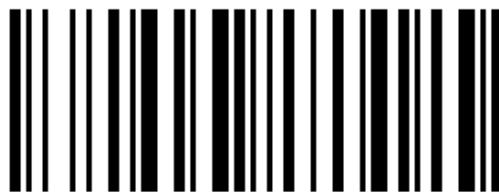

Numeric Setup Code F

## Output Format Settings

To change the output data format, scan the corresponding setup barcode below.



Default Output Format



Allow Suffix Output



Allow Prefix Output




Allow Hiding Leading Data



Allow Hiding Middle Data



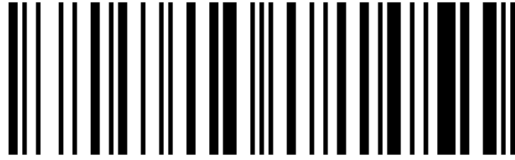

Allow Hiding Trailing Data

## Procedure Examples

### Add a Prefix or Suffix

1. If prefix and suffix output has not been enabled, please scan the corresponding output formatting code first.
2. The new characters will be appended to the existing suffixes; if you want to abandon the original suffixes, please scan “Clear all prefixes/suffixes” and then reset them.
3. Scan the “Add Prefix” or “Add Suffix” setting barcode.
4. Determines the hexadecimal value of the prefix or suffix to be entered based on *ASCII Function Key Character Reference Table* or *ASCII Character Reference Table*.
5. Scan the corresponding two-digit hexadecimal setting barcode.
6. To continue adding characters, repeat steps 4 and 5.

#### Example

If you need to add `Ctrl+A` as a prefix, scan “Add Prefix” “9” “7” “4” “1” in sequence.

#### Example

If you need to add `Ctrl+Alt+A` as a suffix, scan “Add suffix” “9” “7” “9” “9” “4” “1” in sequence.

### Steps to Hide the First/Middle/Tail Characters of a Barcode

1. Scan the setting barcode that hides the header, middle starting bit, middle length or trailing characters of the barcode.
2. Determine the hexadecimal value corresponding to the character length to be hidden (for example, hide 4 characters scan 0, 4; hide 12 characters scan 0, C).
3. Scan the corresponding two-digit hexadecimal setting barcode.
4. Enable or disable the hidden character function through the output formatting code.

## 9.2 Extended Data Editing Settings

This section lets you generate data editing setup codes from complete commands in one step. It is intended for batch configuration, remote serial-command delivery, or character replacement.

Online One-Code Setup Generator

Note

The online generator is shown only in the HTML manual. After generating a setup code, scan the generated barcode to complete the setting, or send the command by serial command using the format below.

Add Prefix

Add Suffix

Hide Leading Barcode Characters

Hide Middle Barcode Characters

Hide Trailing Barcode Characters

Character Replacement

One-Code Setup Command Format

Edit format:

\$DATA#ncllxx#

- n**  
1 suffix; 2 prefix; 3 hides the tail content of the barcode; 4 hides the middle content of the barcode; 5 hides the first content of the barcode; 7 replaces characters.
- c**  
Code ID currently supports only 0, which indicates all symbologies.
- 11**  
Length, hexadecimal value: 01~0A, hide 01~FF, replace 01~05.
- xx**  
ASCII value. Hexadecimal can be represented by \x plus two characters, and the character range is 0~9, A~F.

Table 1: One-Code Setup Examples

| Command                | Description                                                        |
|------------------------|--------------------------------------------------------------------|
| \$DATA#1005abcd\x03#   | Add 0x05 suffixes: abcd + 0x03.                                    |
| \$DATA#200ANETUM12345# | Add 0x0A prefix NETUM12345.                                        |
| \$DATA#3008#           | Hide the last 0x08 characters of the barcode.                      |
| \$DATA#40050A#         | Hides the 0x0A characters after the 0x05 character in the barcode. |
| \$DATA#5011#           | Hide barcode header 0x11 bytes.                                    |
| \$DATA#7001\x1D02GS#   | Replace GS (0x1D) characters with GS.                              |
| \$DATA#7002NT01Z#      | Replace NT with Z.                                                 |

## Character replacement operation

Format: \$DATA#70 + replaced character length + replaced characters + replacement data length + replacement data #

The sum of the lengths of the replaced characters and the replacement characters is  $\leq 6$ , supporting 1~6 characters being replaced by 5~0 characters.



Read replacement settings



Clear replacement settings

### Example

\$DATA#7001\x1D02GS# means replacing the non-displayable character GS (0x1D) with GS for display.



Character replacement operation: GS to text GS

### Example

\$DATA#7001\x0A01\x0D# means replacing LF (0x0A) with CR (0x0D).



Character replacement operation: LF to CR

### Example

\$DATA#7006ABCDEF00# means replacing the string ABCDEF with an empty string, that is, not displaying it.

## 9.3 Terminal character settings

**Note**

This terminal character is independent of the scan engine suffix and wireless suffix, which facilitates quick setting when the scan engine has no suffix.



None (Default)



Carriage Return CR



Tab TAB



Carriage Return + Line Feed CRLF



Line Feed LF

## 9.4 GS1 AI field bracket settings

**Note**

Only some AI fields are applicable and require special version support.



Raw Format (Default)



Add Parentheses



Add brackets and separate with CR



Add brackets and separate them with TAB

## 10 Scan Mode

### 10.1 Barcode Decode Mode



Key scan mode (default)



Continuous scan mode

**Note**


Continuous Scan Mode is suitable for high-volume scanning workflows. Press the Trigger button once to start or stop scanning.



Key pulse scan mode

**Note**

Scanning starts when a key-level change is detected and maintained for about 30 ms. Scanning stops when another key-level change is detected, or when a decode succeeds or times out.

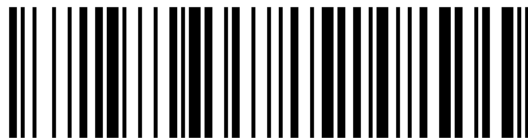

Host trigger mode (only applicable to some customized models)

**Note**

Host trigger mode is only applicable to some customized models.



Batch scanning mode (only applicable to some customized models)

## Decoding timeout

This parameter sets the maximum time that decoding processing lasts during a scan attempt. Default: 3000ms, range: 0500-9999ms.



3 seconds (default)



6 seconds

## Scan Interval

The interval between two readings in continuous mode. Default: 500ms, range: 0100-9999ms.



0.5 seconds (default)




1 second

## 11 Module Settings

### 11.1 Device function settings

#### URL blocking

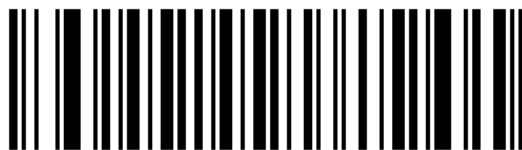

\* Disable



Enable



## Invoice function

Turn on the invoice function and automatically turn off Code 128. If you need to read Code 128, you can turn on Code 128 again.

## Automatic identification and output of VAT invoices



\* Disable



Enable

## Invoice type



\* Special invoice



Ordinary invoice

## 11.2 Trigger settings

### Trigger Mode

#### Key hold (level)


Press the button to trigger the reading, release the button to end the reading; after the reading is successful or the single reading time times out, the reading ends.



\* Key hold (level)

### Single key trigger (pulse)

Reading begins after a change in key level is detected and maintained for about 30 ms (the specific time depends on the product); reading ends when a change in key level is detected again. This reading ends after the reading is successful or the single reading time times out.

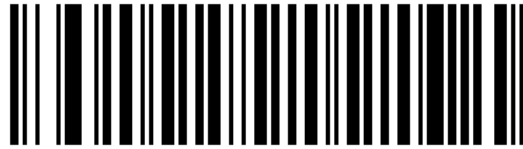

Single key trigger (pulse)

### Continuous Mode

The reading engine works continuously; each time the reading is successful or the single reading time expires, the reading ends, and the next reading is automatically triggered after the continuous reading interval is reached.



Continuous Mode

### Auto sensing mode

The reading engine detects the brightness of the surrounding environment and triggers reading when the brightness changes. After the reading is successful or the single reading time times out, the current reading ends and the environment brightness detection is re-entered.



Auto sensing mode

### Single scan time (scan duration)

Set the maximum duration of a single scan. After scanning this setup code, scan three numeric setup codes to enter the time coefficient. If the value has fewer than three digits, pad it with leading 0.

#### Default

3000 ms

#### Unit

100 ms

#### Range

500–25500 ms



Single scan time

#### Example


To set 500 ms, scan this setup code, then scan numeric setup codes 0, 0, and 5 in sequence.

To set 10500 ms, scan this setup code, then scan numeric setup codes 1, 0, and 5 in sequence.


To change a selection or cancel an incorrect setting, scan *Cancel Barcode*.

### Single Scan Time (Scan Duration) Quick Setup

To select a commonly used duration directly, scan one of the quick setup barcodes below.

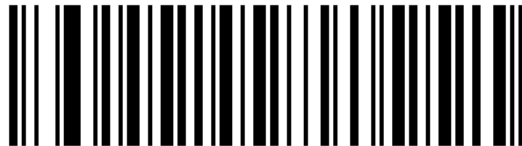

Unlimited

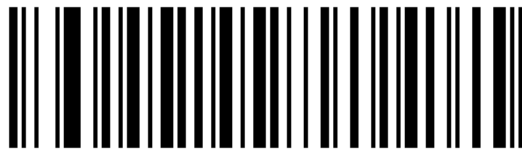

3 s



5 s




10 s




15 s



20 s

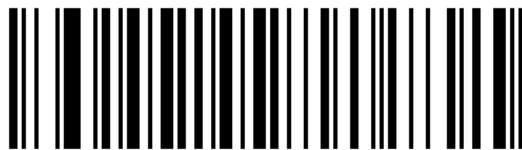

30 s

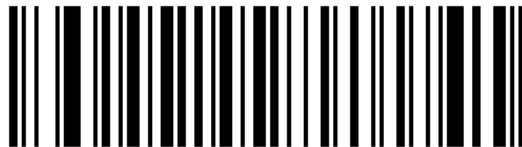

60 s

### Continuous reading interval

In Continuous Mode, this parameter defines the wait time between two scan attempts. After the configured interval elapses, the next scan starts automatically whether the previous attempt succeeded or failed.

After scanning this setup code, scan two numeric setup codes to enter the time coefficient. If the value has fewer than two digits, pad it with a leading 0.

#### Default

500 ms

#### Unit

100 ms

#### Range

0-9900 ms



Continuous reading interval

### Example

To set 500 ms, scan this setup code, then scan numeric setup codes 0 and 5 in sequence.

To change a selection or cancel an incorrect setting, scan *Cancel Barcode*.

## Same code delay

To prevent the same barcode from being decoded repeatedly in Continuous Mode or Auto-sense Mode, you can require the decode engine to wait for the configured delay before reading the same barcode again.

After scanning this setup code, scan two numeric setup codes to enter the time coefficient. If the value has fewer than two digits, pad it with a leading 0.

### Default

500 ms

### Unit

100 ms

### Range

0–9900 ms



Same code delay

### Example

To set 200 ms, scan this setup code, then scan numeric setup codes 0 and 2 in sequence.

To set 1500 ms, scan this setup code, then scan numeric setup codes 1 and 5 in sequence.

To change a selection or cancel an incorrect setting, scan *Cancel Barcode*.

## Same code delay quick setting


To select a commonly used same-code delay directly, scan one of the quick setup barcodes below. Six preset levels are available: 0 s, 1 s, 3 s, 5 s, 7 s, and unlimited delay.




No delay




1 s Delay

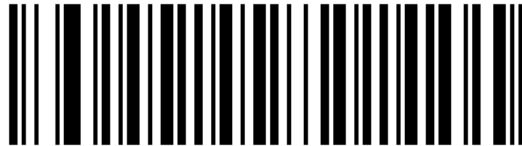


3 s Delay

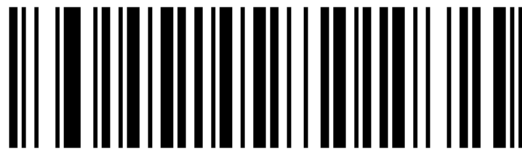

5 s Delay

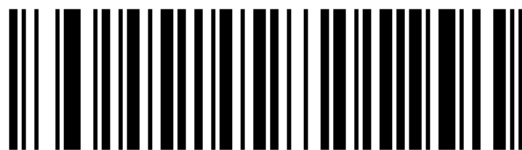

7 s Delay

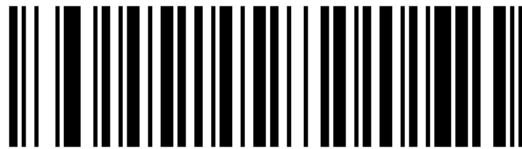

Unlimited Delay (Disable Same-Code Reads)

## 11.3 Engine Code ID

### Transport code ID characters

#### Parameter number

0x2D


#### Default

None

Code ID characters are used to identify the barcode type. When a device may decode multiple barcode types, the Code ID or AIM ID can be inserted between the prefix characters and the decoded data. See [Code ID](#) for Code ID characters and [AIM code identifier](#) for AIM ID characters.



Code ID

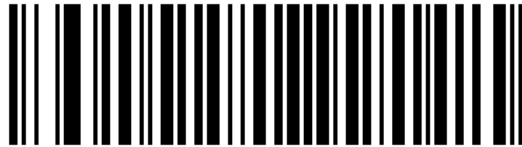

AIM ID



\* None

## Code ID

| Barcode Type                            | Code ID |
|-----------------------------------------|---------|
| Code 128                                | D       |
| GS1-128(UCC/EAN-128)                    | K       |
| AIM 128                                 | D       |
| ISBT-128                                | D       |
| EAN-8                                   | A       |
| EAN-13                                  | A       |
| ISSN                                    | L       |
| ISBN/Bookland EAN                       | L       |
| UPC-E                                   | A       |
| UPC-A                                   | A       |
| Interleaved 2 of 5/ITF                  | F       |
| ITF-14                                  | F       |
| Deutsche Post 14                        | w       |
| Deutsche Post 12                        | l       |
| NEC-25(COOP 2 of 5)                     | o       |
| Matrix 2 of 5                           | V       |
| Industrial 2 of 5/Discrete 2 of 5/IND25 | G       |
| Standard 2 of 5 (IATA 25)               | G       |
| Code 39                                 | B       |
| Code 93                                 | E       |
| Codabar                                 | C       |
| Code 11                                 | H       |
| Plessey                                 | J       |
| MSI-Plessey                             | J       |
| GS1-DataBar (RSS)                       | R       |

continues on next page

Table 2 – continued from previous page

| Barcode Type              | Code ID |
|---------------------------|---------|
| PDF417                    | r       |
| QR                        | q       |
| AZTEC(Aztec Code)         | a       |
| Data Matrix (DM)          | u       |
| MaxiCode                  | x       |
| Han Xin Code/Han Xin Code | c       |
| Code 32                   | B       |
| Trioptic Code 39          | M       |
| Coupon Code               | N       |
| GS1 DataBar-14            | R       |
| GS1 DataBar Limited       | R       |
| GS1 DataBar Expanded      | R       |
| SETUP128                  | S       |
| Veri Code                 | v       |

### AIM code identifier

| Barcode Type           | AIM ID       | Description                                   |
|------------------------|--------------|-----------------------------------------------|
| Code 128               | JC0          | Normal data                                   |
| GS1-128(UCC/EAN-128)   | JC1          | FNC1 is at the 1st code word position.        |
| AIM 128                | JC2          | FNC1 is at the 2nd code word position.        |
| ISBT-128               | JC0          |                                               |
| EAN-8                  | JE4          | Normal data                                   |
|                        | JE4...JE1... | EAN-8 data plus a 2-digit additional code.    |
|                        | JE4...JE2... | EAN-8 data plus a 5-digit additional code.    |
| EAN-13                 | JE0          | Normal data                                   |
|                        | JE3          | EAN-13 data plus 2/5 digit additional code.   |
| ISSN                   | JX0          | Normal data                                   |
| ISBN/Bookland EAN      | JX0          | Normal data                                   |
| UPC-E                  | JE0          | Normal data                                   |
|                        | JE3          | UPC-E data plus a 2/5-digit add-on code.      |
| UPC-A                  | JE0          | Ordinary data.                                |
|                        | JE3          | UPC-A data plus a 2/5-digit add-on code.      |
| Interleaved 2 of 5/ITF | J10          | Normal data                                   |
|                        | J11          | Verify and output check characters.           |
|                        | J13          | Verify but do not output the check character. |
| ITF-14                 | J11          | Output check characters.                      |

continues on next page



Table 3 – continued from previous page

| Barcode Type                             | AIM ID | Description                                                                          |
|------------------------------------------|--------|--------------------------------------------------------------------------------------|
|                                          | JL3    | Check characters are not output.                                                     |
| Deutsche Post 14                         | JX0    | Normal data                                                                          |
| Deutsche Post 12                         | JX0    | Normal data                                                                          |
| NEC-25(COOP 2 of 5)                      | JX0    | Normal data                                                                          |
| Matrix 2 of 5                            | JX0    | Normal data                                                                          |
| Industrial 2 of 5/ Discrete 2 of 5/IND25 | JS0    | Normal data                                                                          |
| Standard 2 of 5 (IATA 25)                | JR0    | Normal data                                                                          |
| Code 39                                  | JA0    | No parity, no Full ASCII extension, data output as it is.                            |
|                                          | JA1    | MOD43 check and output check characters.                                             |
|                                          | JA3    | MOD43 checks, but does not output check characters.                                  |
|                                          | JA4    | Full ASCII extension, but no parity.                                                 |
|                                          | JA5    | Full ASCII expansion is performed, and check characters are output.                  |
|                                          | JA7    | Full ASCII expansion is performed, but check characters are not output.              |
| Code 93                                  | JG0    | Normal data                                                                          |
| Codabar                                  | JF0    | Normal data                                                                          |
|                                          | JF2    | Verification, and output verification characters.                                    |
|                                          | JF4    | Verification, but does not output the verification character.                        |
| Code 11                                  | JH3    | Normal data                                                                          |
|                                          | JH0    | MOD11 single character verification and output verification characters.              |
|                                          | JH3    | MOD11 single character verification, but does not output the verification character. |
| Plessey                                  | JP0    | Normal data                                                                          |
| MSI-Plessey                              | JM0    | Normal data                                                                          |
|                                          | JM0    | MOD10 verification, and output verification characters                               |
|                                          | JM1    | MOD10 verification, but does not output verification characters                      |
| GS1-DataBar (RSS)                        | Je0    | Standard data package                                                                |
| PDF417                                   | JL0    | No options specified at this time, always transmit 3                                 |
| QR                                       | JQ0    | QR Code Mode 1 (Complies with AIM ISS 97-001)                                        |
|                                          | JQ1    | QR Code mode 2 (2005 symbol), not using ECI protocol                                 |

continues on next page

Table 3 – continued from previous page

| Barcode Type              | AIM ID | Description                                                             |
|---------------------------|--------|-------------------------------------------------------------------------|
|                           | JQ2    | QR Code mode 2 (2005 symbol), using the ECI protocol                    |
|                           | JQ3    | QR Code mode 2 (2005 symbol), ECI protocol not used, FNC1 in position 1 |
|                           | JQ4    | QR Code mode 2 (2005 symbol), using ECI protocol, FNC1 is in position 1 |
|                           | JQ5    | QR Code mode 2 (2005 symbol), ECI protocol not used, FNC1 in position 2 |
|                           | JQ6    | QR Code mode 2 (2005 symbol), using ECI protocol, FNC1 is in position 2 |
| AZTEC(Aztec Code)         | jz0    | No options specified at this time, always transmit 3                    |
| Data Matrix (DM)          | jd0    | ECC 000 - 140                                                           |
|                           | jd1    | ECC 200                                                                 |
|                           | jd2    | ECC 200, FNC1 in position 1 or 5                                        |
|                           | jd3    | ECC 200, FNC1 in position 2 or 6                                        |
|                           | jd4    | ECC 200 supports ECI protocol                                           |
|                           | jd5    | ECC 200, FNC1 in position 1 or 5 and supports ECI protocol              |
|                           | jd6    | ECC 200, FNC1 in position 2 or 6 and supports ECI protocol              |
| MaxiCode                  | JU1    | No options specified at this time, always transmit 3                    |
| Han Xin Code/Han Xin Code | JX0    | No options specified at this time, always transmit 3                    |

## 11.4 Engine output format

### Terminator settings


A terminator is a control character appended after the output data. The output format is: output data + terminator.



\* Disable



Carriage return and line feed CR LF

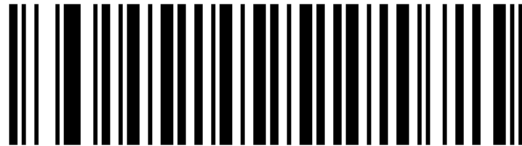


Carriage Return CR



TAB



Enter Enter Enter CR CR

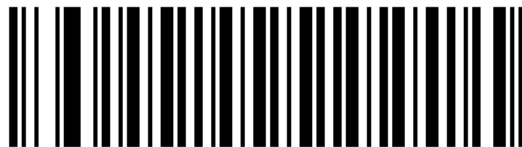

Carriage return and line feed Carriage return and line feed CR LF CR LF

### Support for GS1 rules using brackets to include AI fields

Currently supporting GS1 rules, the supported AI segments are: (00) Transport container serial number, (01) Commodity transaction item, (02) Commodity transaction item, (10) Batch number, (11) Production date, (13) Packaging date, (15) Best date, (17) Expiration date, (21) Serial number, (30) Quantity, (240) Internal code, (712) National medical insurance reimbursement number - Spain CN, (8012) software version, (90) consistent information between trading partners



\* Disable



Enable

## 11.5 Barcode Settings

### Common Symbology Entries

| Symbology          | Entry                                          |
|--------------------|------------------------------------------------|
| UPC-A              | <i>UPC-A</i>                                   |
| UPC-E              | <i>UPC-E</i>                                   |
| EAN-8              | <i>EAN-8</i>                                   |
| EAN-13             | <i>EAN-13</i>                                  |
| Bookland EAN       | <i>Enable/disable Bookland EAN (ISBN)</i>      |
| Code 128           | <i>Code 128</i>                                |
| GS1-128            | <i>GS1-128 (formerly UCC/EAN-128)</i>          |
| Code 39            | <i>Code 39</i>                                 |
| Code 93            | <i>Code 93</i>                                 |
| Code 11            | <i>Code 11</i>                                 |
| Interleaved 2 of 5 | <i>Interleaved 2 of 5/ITF/Crossed 25 yards</i> |
| Codabar            | <i>Codabar</i>                                 |
| MSI                | <i>MSI/MSI PLESSEY</i>                         |
| PDF417             | <i>PDF417</i>                                  |
| QR Code            | <i>QR Code</i>                                 |
| Data Matrix        | <i>Data Matrix (DM)</i>                        |
| Maxi Code          | <i>Maxi Code</i>                               |
| Aztec Code         | <i>Aztec Code</i>                              |
| Han Xin Code       | <i>Han Xin Code</i>                            |

### 1D inverted barcode reading



\* Disable




Enable

## Barcode global switch

### One-dimensional code switch




Disable

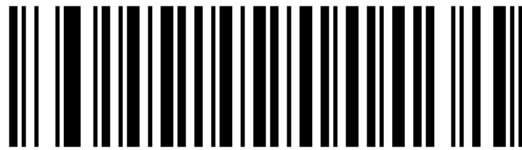


Enable

### QR code switch

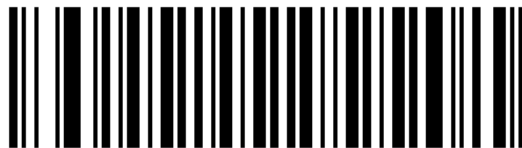

Disable

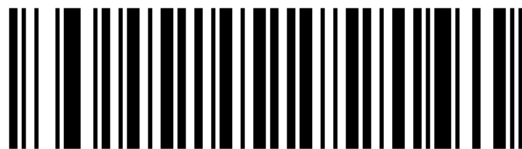

Enable

### All barcode switches



Disable all barcodes



Enable all barcodes


## Linear code type safety level

The reading engine provides four levels of decoded security linear encoding types. Select a higher security level for declining barcode quality levels. Follow

As the security level increases, the reading engine becomes less aggressive. Choose the security level that suits your barcode quality.

### Linear safety level 1


All code types must be successfully read 1 time before being decoded

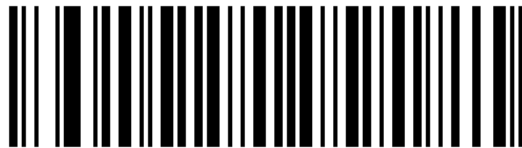

\* Linear safety level 1

### Linear safety level 2


All code types must be read successfully 2 times before being decoded.

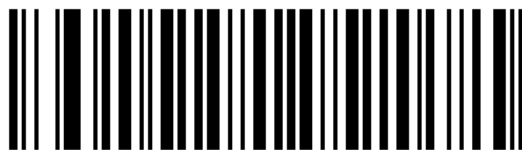

Linear safety level 2

### Linear safety level 3


All code types must be successfully read 3 times before being decoded.

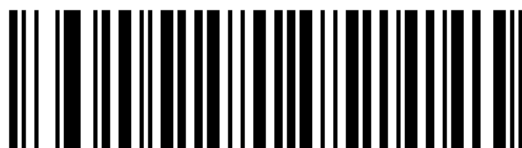

Linear safety level 3

### Linear safety level 4

All code types must be successfully read 4 times before being decoded

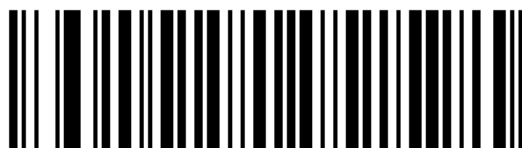

Linear safety level 4


## UPC-A

### Enable/disable UPC-A

Scan the corresponding barcode below to enable or disable UPC-A.



\* Enable UPC-A

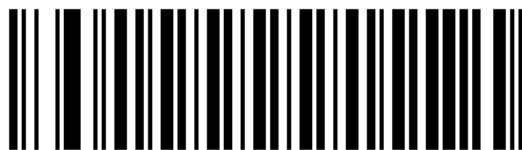

Disable UPC-A

### UPC-A preamble

Preamble characters (country code and system characters) may be transmitted as part of the UPC-A code system. Select one of the following options to set and transmit the UPC-A preamble to the host: transmit system characters only, transmit system characters and country code ( “0” for United States), or transmit no preamble.



No preamble (<DATA>)




\* System characters (<SYSTEM CHARACTER> <DATA>)



System characters & country code (<COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)

## Transmit UPC-A check digit

Scan the corresponding barcode below to set whether to transmit the UPC-A check code.

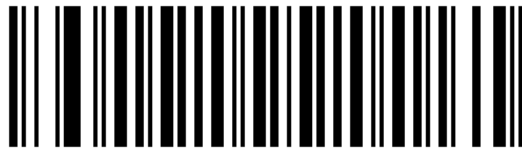


\* Transmit UPC-A check digit



Do not transmit UPC-A check digit

## UPC-A 2-digit add-on code

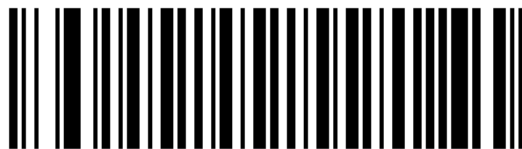

Enable



\* Disable

## UPC-A 5-digit add-on code



Enable




\* Disable



## UPC-A must read additional code



To enable UPC-A, the additional code must be read

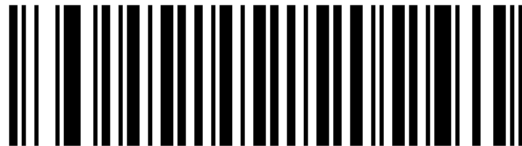

Disable UPC-A Additional code must be read

## UPC-E

### Enable/disable UPC-E

Scan the corresponding barcode below to enable or disable UPC-E.



\* Enable UPC-E



Disable UPC-E


## UPC-E preamble



No preamble (<DATA>)




\* System characters (<SYSTEM CHARACTER> <DATA>)

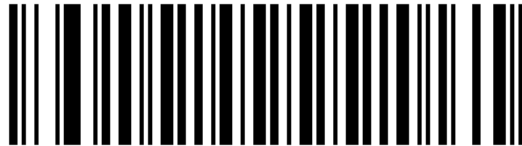


System characters & country code (<COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)

### Transmit UPC-E check digit

Scan the corresponding barcode below to set whether to transmit the UPC-E check digit.

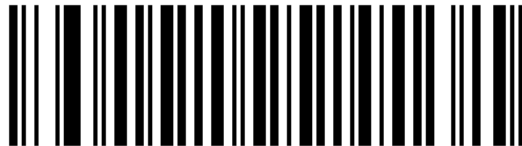

\* Transmit UPC-E check digit

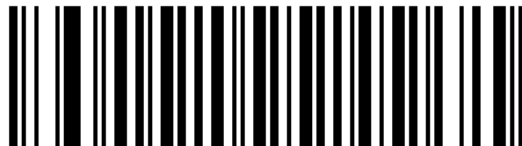

Do not transmit UPC-E check digit


### Convert UPC-E to UPC-A

This parameter allows this parameter to be converted from UPC-E (zero suppression) decoded data to UPC-A format before transmission. After conversion, the data follows UPC-A format and is protected by UPC-A

Impact of programming choices (eg: preamble, checksum).



Convert UPC-E to UPC-A

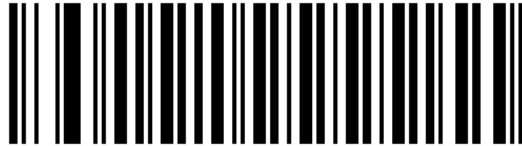

\* Does not convert UPC-E to UPC-A

#### UPC-E 2-digit add-on code



Enable



\* Disable

#### UPC-E 5-digit add-on code



Enable



\* Disable

#### UPC-E must read additional codes




Enable



\* Disable

## UPC-E1 switch

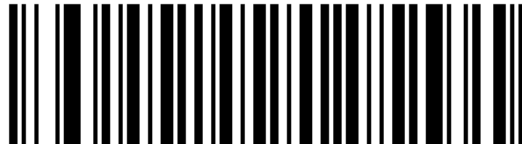

\* Disable UPC-E1



Enable UPC-E1

## EAN-8

### Enable/disable EAN-8

Scan the corresponding barcode below to enable or disable EAN-8.



\* Enable EAN-8



Disable EAN-8

### EAN-8 zero extension

When this parameter is enabled, this parameter plus 5 leading 0s decodes EAN-8 to make it compatible with the EAN-13 format. When this parameter is disabled, the EAN-8 code system is transmitted



Enable EAN-8 zero extension




\* Disable EAN-8 zero extension

### **EAN-8 2-digit additional code**



Enable

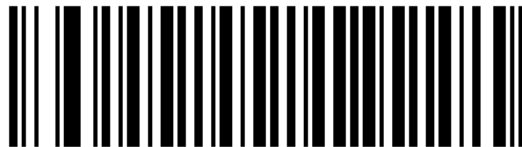

\* Disable

### **EAN-8 5-digit add-on code**



Enable



\* Disable

### **EAN-8 must read additional code**



Enable



\* Disable

### **EAN-8 sends check digit**



Disable



\* Enable


## **EAN-13**

### **Enable/disable EAN-13**

Scan the corresponding barcode below to enable or disable EAN-13.



\* Enable EAN-13

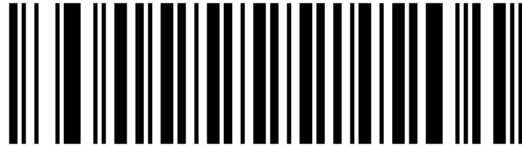

Disable EAN-13

#### **EAN-13 2-digit additional code**



Enable



\* Disable

#### **EAN-13 5-digit add-on code**



Enable



\* Disable

#### **EAN-13 must read additional code**




Enable



\* Disable

### EAN-13 send check character

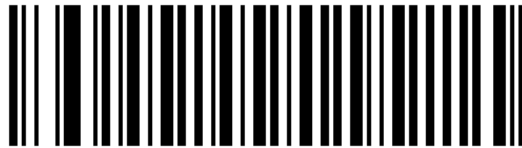

Disable EAN-13 sending check characters




Enable EAN-13 to send check characters

### Enable/disable Bookland EAN (ISBN)

Scan the corresponding barcode below to enable or disable Bookland EAN (ISBN).



Enable Bookland EAN

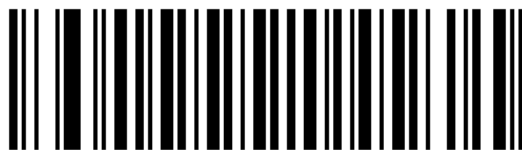

\* Disable Bookland EAN

### Code 128

#### Note

The enable/disable control of Code 128 also applies to AIM128; the output type identification of AIM128 is different from that of ordinary Code 128.

### Enable/disable Code 128

Scan the corresponding barcode below to enable or disable Code 128.





\* Enable Code 128




Disable Code 128

### Code 128 Send check character



Enable

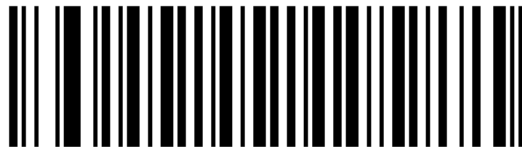

\* Disable

### Code 128 length setting

Allows reading of Code 128 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Code 128 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

#### Default

0-99

#### Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

### Example

Only 4–8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Code 128 any length




Code 128 specifies the length

### GS1-128 (formerly UCC/EAN-128)



GS1-128 (formerly UCC/EAN-128)

any length

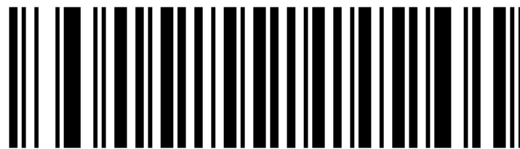

\* Enable GS1-128

Disable GS1-128

### UCC/EAN-128 sending check characters



Enable



\* Disable

## UCC/EAN-128 length setting

Allows reading of UCC/EAN-128 codes of specific lengths. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “UCC/EAN-128 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

### Default

0-99

### Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

### Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



UCC/EAN-128 any length



UCC/EAN-128 specified length

## ISBT 128

any length

Scan the appropriate barcode below to enable or disable ISBT 128.



\* Enable ISBT 128



any length

## Code 39


Disable ISBT 128

### Enable/disable Code 39

Scan the corresponding barcode below to enable or disable Code 39.



\* Enable Code 39

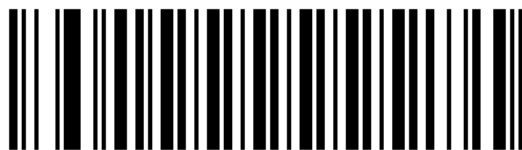

Disable Code 39

### Code 39 length setting

Allows reading of Code 39 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Code 39 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

#### Default

0-99

#### Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

### Example

Only 4–8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.




Code 39 any length



Code 39 specifies the length

## Code 39 check digit verification

When this feature is enabled, the reading engine checks the integrity of all Code 39 encodings to verify that the data conforms to the specified check digit algorithm. Only Code 39 encodings containing a modulo 43 check digit can be decoded. This feature can only be enabled if the Code 39 code format containing the modulo 43 check digit can be decoded.

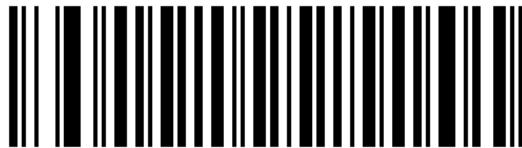

Verify Code 39 check digit



\* Do not verify Code 39 check digit

Transmit Code 39 Check Digit Scan this barcode to transmit the data check digit.



Transmit Code 39 check digit




\* Do not transmit Code 39 check digit

### Enable/disable Code 39 Full ASCII

Code 39 Full ASCII is evolved from Code 39 and can encode double characters into Full ASCII characters. Scan the corresponding barcode below to enable or disable Code 39 Full ASCII.

See *Character Reference Table* for the mapping of Code 39 characters to ASCII values.

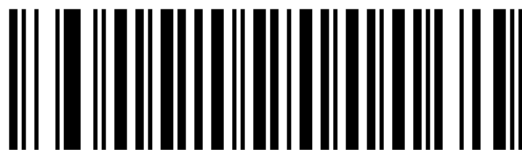

Enable Code 39 Full ASCII



\* Disable Code 39 Full ASCII

### Transmit Code 39 start and stop characters



\* Disable



Enable

### Convert Code 39 to Code 32 (Italian Medical Code)

Code 32 is a Code 39 variant used in the Italian pharmaceutical industry. Scan the corresponding barcode below to enable or disable conversion from Code 39 to Code 32.




\* Disable



Enable

### Code 32 prefix

Enabling this parameter adds the prefix character “A” to all Code 32. Code 39 must be converted to Code 32 (Italian pharmaceutical code) before enabling this parameter.

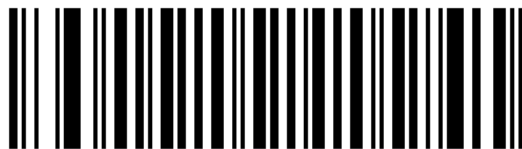

\* Disable



Enable

### Code 32 check code verification




\* Disable



Enable

## Transmit Code 32 check digit

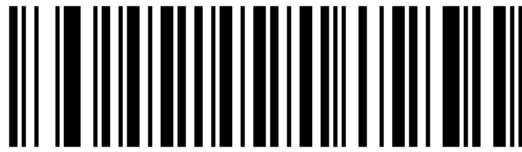

\* Transmit check digit 0x00



Enable transmission of Code 32 check digits


## Code 93

Transmit start character, stop character, and check digit

0x01

## Enable/disable Code 93

Scan the corresponding barcode below to enable or disable Code 93.

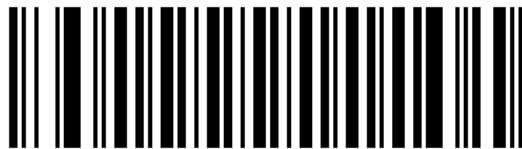

Enable Code 93



\* Disable Code 93

## Set Code 93 length

Allows reading of Code 93 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Code 93 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

### Default

0–99



## Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

### Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Code 93 any length




Code 93 specifies the length

## Code 11

### Enable/disable Code 11

Scan the corresponding barcode below to enable or disable Code 11.

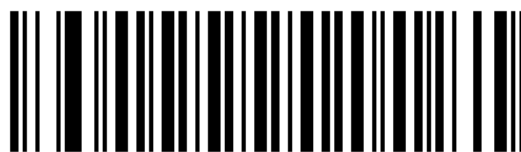

Enable Code 11



\* Disable Code 11

### Code 11 length setting

Allows reading of Code 11 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Code 11 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

#### Default

4–99

#### Set range

01–99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

#### Example

Only 4–8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Code 11 any length



Code 11 specifies the length

## Check code verification

This feature allows the reading engine to check the integrity of all Code 11 encodings to verify that the data complies with the specified check digit algorithm. This will select the check digit mechanism for the decoded Code 11 barcode. Options include checking one parity digit, checking two parity digits, or disabling the feature.


To enable this feature, scan the Code 11 barcode below that matches the required number of check digits.



\* Enable




a check digit

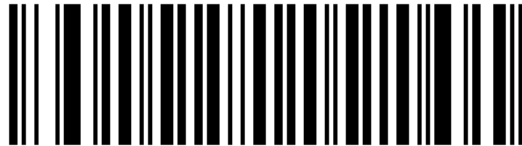

two check digits

### Transmit Code 11 check digit

Scan the barcode below to choose whether to transmit the Code 11 check digit.

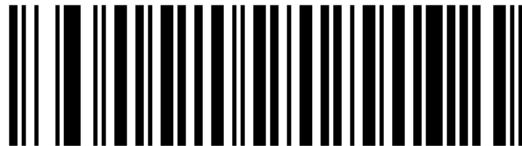

Transmit Code 11 check digit



\* Code 11 check digit is not transmitted

#### **Note**

In order for this parameter function to be implemented, Code 11 check code verification must be enabled.

### Interleaved 2 of 5/ITF/Crossed 25 yards

#### Enable/Disable Interleaved 2 of 5

Scan the corresponding barcode below to enable or disable Interleaved 2 of 5.



\* Enable Interleaved 2 of 5



Disable Interleaved 2 of 5

## Interleaved 2 of 5 Length Settings

Allows reading of Interleaved 2 of 5 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Interleaved 2 of 5 arbitrary length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

### Default

4-99

### Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

### Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Interleaved 2 of 5 any length



Interleaved 2 of 5 specified length

## I 2 of 5 check code verification

When enabled, this parameter checks the integrity of the I 2 of 5 symbology to ensure compliance with specified algorithms, including USS (Uniform Symbol Specification) or OPCC (Optical Product Code Council)




\* Disable



Enable

### Transmit I 2 of 5 check digits

Scanning this barcode transmits a checksum of the data.

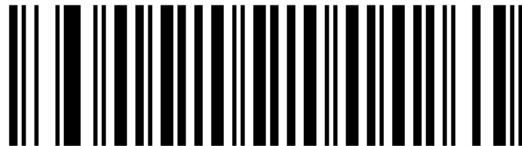

Transmit I 2 of 5 check digits



\* Do not transmit I 2 of 5 check digits

### Discrete 2 of 5/Industrial 2 of 5/IND25/Industrial 25 yards

#### Enable/disable Discrete 2 of 5

Scan the corresponding barcode below to enable or disable Discrete 2 of 5.



Enable Discrete 2 of 5



\* Disable Discrete 2 of 5

## Discrete 2 of 5 Length Settings

Allows reading of Discrete 2 of 5 codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Discrete 2 of 5 arbitrary length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

### Default

4-99

### Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

### Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Discrete 2 of 5 any length




Discrete 2 of 5 specified length

## Discrete 2 of 5 Verification



Enable

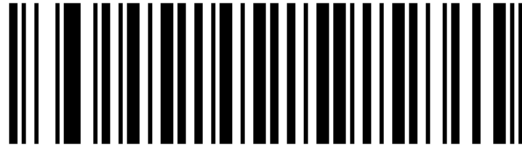

\* Disable

## Discrete 2 of 5 Send check character



Enable Discrete 2 of 5 to send check characters




Disable Discrete 2 of 5 Send check characters

## Matrix 25(Matrix 25)

### Enable/disable Matrix 25



Enable Matrix 25

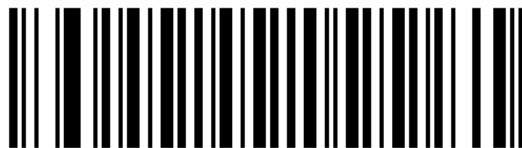

\* Disable Matrix 25

## Matrix 25 check digit verification



Enable Matrix 25 checksum confirmation



\* Disable Matrix 25 checksum confirmation

### Transmitting Matrix 25 check characters



Enable Matrix 25 transmission check characters



\* Disable Matrix 25 transmission check characters

### Matrix 25 length setting

Allows reading of Matrix 25 codes of specific lengths. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Matrix 25 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

#### Default

4-99

#### Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

#### Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.





Matrix 25 any length



Matrix 25 specifies the length

## Standard 25/IATA 25(Standard 25)

### Enable/disable Standard 25

Scan the corresponding barcode below to enable or disable Standard 25.



\* Disable



Enable

### Standard 25 check digit verification



\* Disable Standard 25 checksum confirmation



Enable Standard 25 checksum confirmation

### Transmission check character



\* Disable Standard 25 transmission check characters



Enable Standard 25 transmission check characters

### Standard 25 length setting

Allows reading of Standard 25 codes of specific lengths. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Standard 25 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

#### Default

4-99

#### Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

#### Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Standard 25 any length



Standard 25 specified length


## Codabar

### Enable/disable Codabar

Scan the corresponding barcode below to enable or disable Codabar.



Enable Codabar

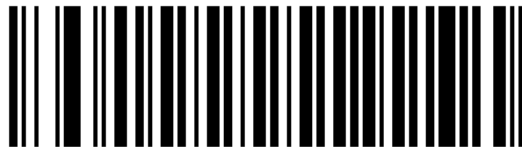

\* Disable Codabar

### Codabar length setting

Allows reading of Codabar codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “Codabar Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

#### Default

2-99

#### Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

#### Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.



Codabar any length



Codabar specifies the length

## Codabar verification



Enable



\* Disable

## Codabar sends check characters



Enable




\* Disable

## NOTICE Edit



Enable NOTIS editing

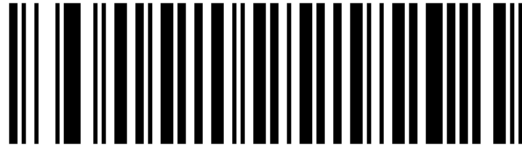

\* Disable NOTIS editing

### Start and stop character format

The start and stop characters can each be one of A, B, C, or D. The stop character can also be one of T, N, \*, or E.




\\* ABCD/ABCD



ABCD/TN\*E

### Start and stop character letter case

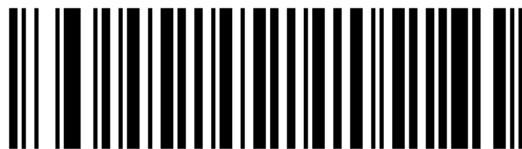

\* uppercase letter



lowercase letters

### MSI/MSI PLESSEY

#### Enable/disable MSI

Scan the corresponding barcode below to enable or disable MSI.



Enable MSI



\* Disable MSI

## MSI length settings

Allows reading MSI codes of a specific length. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “MSI Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

### Default

2-99

### Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

### Example

Only 4-8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.




MSI arbitrary length




MSI specified length

## MSI check digit

These check digits at the end of the barcode verify data integrity. At least one check digit is always required, and check digits are not transmitted with the data automatically. If you select two check digits, you must also set the MSI check digit algorithm.

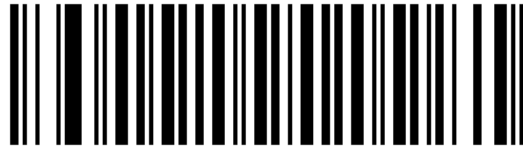


\* An MSI check digit

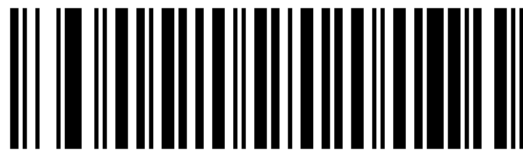

Two MSI check digits

## Transmit MSI check code

Scan this barcode to be set to transmit a checksum with data.

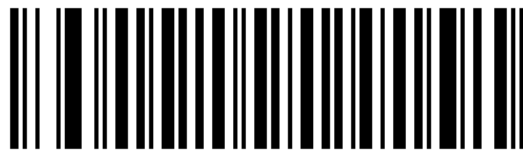

Transmit MSI check code

Scan this barcode to set up data transmission without a checksum.



\* MSI check code is not transmitted

## MSI check code algorithm

When selecting two MSI check digits, one of the following algorithms needs to be selected.



MOD 10 / MOD 11




\\* MOD 10 / MOD 10


## GS1 DataBar/RSS

### Enable/disable GS1 DataBar/RSS

Scan the corresponding barcode below to enable or disable GS1 DataBar/RSS.

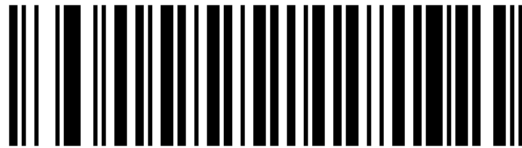

Enable GS1 DataBar/RSS

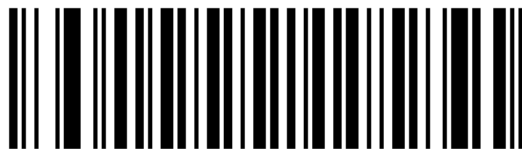

\* Disable GS1 DataBar/RSS

## RSS AI characters



\* Enable



Disable

## PDF417

### Enable/disable PDF417

Scan the corresponding barcode below to enable or disable PDF417.





Disable PDF417



\* Enable PDF417

### PDF417 positive/negative reading



\* read only positive



Read only invert



Both forward and reverse phases can be read.

### QR Code

#### Enable/disable QR Code

Scan the corresponding barcode below to enable or disable QR Code.



Disable QR Code



\* Enable QR Code

## ECI control




\* ECI does not output



ECI output

## QR positive/reverse phase reading

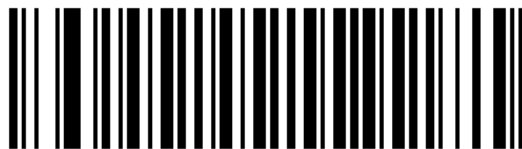

\* read only positive



Read only invert



Both forward and reverse phases can be read.

## Remove UTF-8 BOM encoding format of QR Code

When enabled, UTF-8 BOM encoding format is removed when outputting QR Code data.



\* Disable



Enable

## Data Matrix (DM)

Both normal images and mirror images can be read.

### Enable/disable Data Matrix (DM)

Scan the corresponding barcode below to enable or disable the Data Matrix (DM).



Disable Data Matrix



\* Enable Data Matrix

## Positive/negative reading



\* read only positive



Read only invert



Both forward and reverse phases can be read.

## ECI control



\* ECI does not output



ECI output

## Maxi Code

### Enable/disable Maxi Code

Scan the corresponding barcode below to enable or disable Maxi Code.



\* Disable Maxi Code



Enable Maxi Code


## Aztec Code

### Enable/disable Aztec Code

Scan the corresponding barcode below to enable or disable Aztec Code.



\* Disable Aztec Code

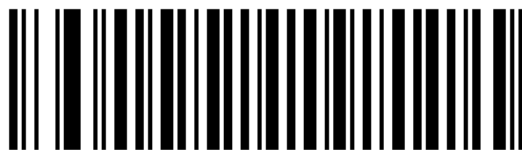

Enable Aztec Code

## Han Xin Code

### Enable/disable Han Xin Code

Scan the corresponding barcode below to enable or disable Han Xin Code.



\* Disable Han Xin Code



Enable Han Xin Code


## Positive/negative reading



\* read only positive



Read only invert

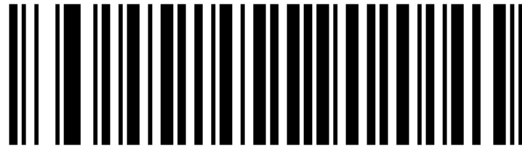


Both forward and reverse phases can be read.

## ISSN

Converts to EAN-13 when disabled.



\* Disable

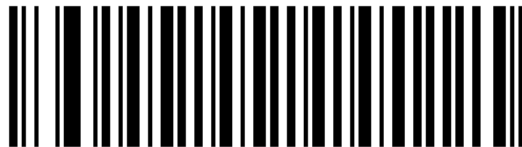

Enable

## NEC-25(COOP25)

NEC-25(COOP25) switch




Enable




\* Disable

NEC-25(COOP25) Verification

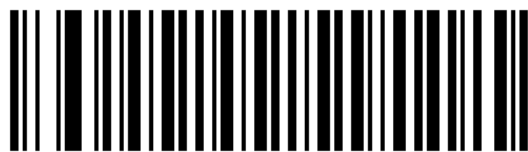


Enable

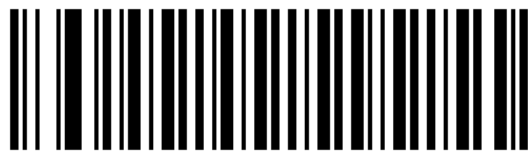


\* Disable

NEC-25(COOP25) Send check character

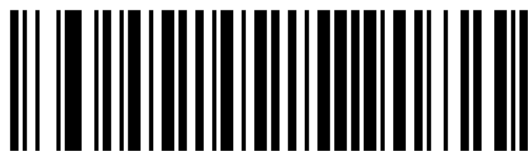

Enable

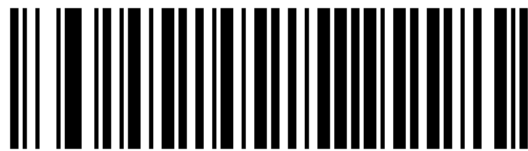

\* Disable

NEC-25 (COOP 25) length setting

Allows reading of NEC-25 codes of specific lengths. After scanning the length setting barcode, scan the 4-digit setting barcode to set L1 and L2; L1 and L2 each occupy 2 digits. If there are less than 2 digits, add 0 in front.

When scanning the “NEC-25 Any Length” setting barcode, any length can be read, and there is no need to scan the numeric setting barcode.

Default

4-99

Set range

01-99

| condition | Description                                        |
|-----------|----------------------------------------------------|
| L1 < L2   | L1 is the minimum length, L2 is the maximum length |
| L1 > L2   | L1 is the maximum length, L2 is the minimum length |
| L1 = L2   | Only read fixed length                             |

### Example

Only 4–8 characters are allowed to be read: scan the numeric setting barcode 0, 4, 0, 8, or 0, 8, 0, 4.

Fixed reading of 12 characters: Scan the numeric setting barcodes 1, 2, 1, 2.




NEC-25 any length




NEC-25 specified length

## COMPOSITE

Enable/disable COMPOSITE

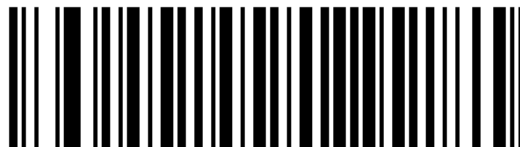

\* Disable

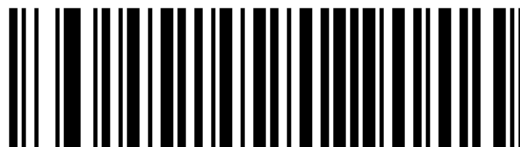

Enable

## 11.6 Engine Setup Codes

### Numeric Setup Codes

For parameters that require an exact value, scan the appropriate numeric setup codes.




0






1

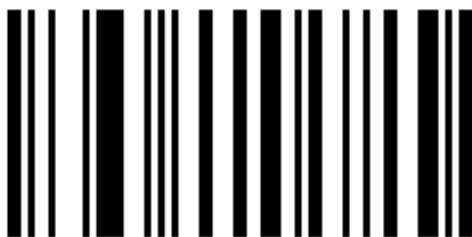

2

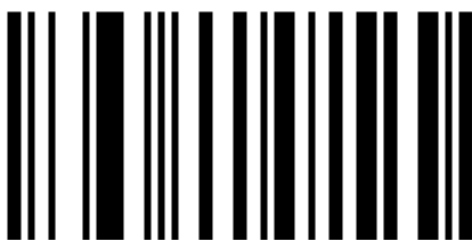

3




4



5



6

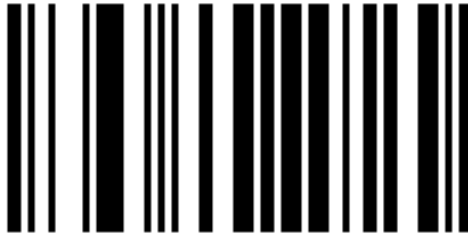

7




8



9

### Cancel Barcode

To change a selection or cancel an incorrect entry, scan the barcode below.

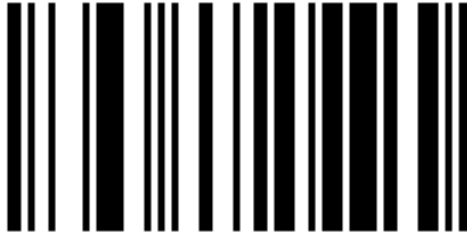

Setup Code: Cancel

## 11.7 Engine Character Table

### Character Reference Table

When appending prefixes and suffixes to decoded data, follow these steps to select character values:

1. Set Output Data Transmission Format (parameter 0xE2) to the required option.
2. Query the ASCII code value to be set according to the table, and enter it into prefix (0x69), suffix 1 (0x68) or suffix 2 (0x6A) in hexadecimal form.

### Character Reference Table (Control Characters)

| Scan Value | Hex Value | Character | Keyboard Function Key | Keyboard Ctrl Key Combination |
|------------|-----------|-----------|-----------------------|-------------------------------|
| 1000       | 00h       | NUL       | Null                  | CTRL 2                        |
| 1001       | 01h       | SOH       | Keypad Enter          | CTRL A                        |
| 1002       | 02h       | STX       | Caps lock             | CTRL B                        |
| 1003       | 03h       | ETX       | Right Arrow           | CTRL C                        |
| 1004       | 04h       | EOT       | Up Arrow              | CTRL D                        |
| 1005       | 05h       | ENQ       | Null                  | CTRL E                        |
| 1006       | 06h       | ACK       | Null                  | CTRL F                        |
| 1007       | 07h       | BEL       | Enter                 | CTRL G                        |
| 1008       | 08h       | BS        | Left Arrow            | CTRL H                        |
| 1009       | 09h       | HT        | Horizontal Tab        | CTRL I                        |
| 1010       | 0Ah       | LF        | Down Arrow            | CTRL J                        |
| 1011       | 0Bh       | VT        | Vertical Tab          | CTRL K                        |
| 1012       | 0Ch       | FF        | Delete                | CTRL L                        |
| 1013       | 0Dh       | CR        | Enter                 | CTRL M                        |
| 1014       | 0Eh       | SO        | Insert                | CTRL N                        |
| 1015       | 0Fh       | SI        | Esc                   | CTRL O                        |
| 1016       | 10h       | DLE       | F11                   | CTRL P                        |
| 1017       | 11h       | DC1       | Home                  | CTRL Q                        |
| 1018       | 12h       | DC2       | Print Screen          | CTRL R                        |
| 1019       | 13h       | DC3       | Backspace             | CTRL S                        |
| 1020       | 14h       | DC4       | tab+shift             | CTRL T                        |
| 1021       | 15h       | NAK       | F12                   | CTRL U                        |
| 1022       | 16h       | SYN       | F1                    | CTRL V                        |
| 1023       | 17h       | ETB       | F2                    | CTRL W                        |

| Scan Value | Hex Value | Character | Keyboard Function Key | Keyboard Ctrl Key Combination |
|------------|-----------|-----------|-----------------------|-------------------------------|
| 1024       | 18h       | CAN       | F3                    | CTRL X                        |
| 1025       | 19h       | EM        | F4                    | CTRL Y                        |
| 1026       | 1Ah       | SUB       | F5                    | CTRL Z                        |
| 1027       | 1Bh       | ESC       | F6                    | CTRL [                        |
| 1028       | 1Ch       | FS        | F7                    | CTRL \                        |
| 1029       | 1Dh       | GS        | F8                    | CTRL ]                        |
| 1030       | 1Eh       | RS        | F9                    | CTRL 6                        |
| 1031       | 1Fh       | US        | F10                   | CTRL -                        |
| 1032       | 20h       | (space)   | Space                 | Space                         |

**Character comparison table (visible characters) (continued table)**

| Scan Value | Hex Value | Keyboard Function Key |
|------------|-----------|-----------------------|
| 1033       | 21h       | !                     |
| 1034       | 22h       | '                     |
| 1035       | 23h       | #                     |
| 1036       | 24h       | \$                    |
| 1037       | 25h       | %                     |
| 1038       | 26h       | &                     |
| 1039       | 27h       | '                     |
| 1040       | 28h       | (                     |
| 1041       | 29h       | )                     |
| 1042       | 2Ah       | *                     |
| 1043       | 2Bh       | +                     |
| 1044       | 2Ch       | ,                     |
| 1045       | 2Dh       | -                     |
| 1046       | 2Eh       | .                     |
| 1047       | 2Fh       | /                     |
| 1048       | 30h       | 0                     |
| 1049       | 31h       | 1                     |
| 1050       | 32h       | 2                     |
| 1051       | 33h       | 3                     |
| 1052       | 34h       | 4                     |
| 1053       | 35h       | 5                     |
| 1054       | 36h       | 6                     |
| 1055       | 37h       | 7                     |

| Scan Value | Hex Value | Keyboard Function Key |
|------------|-----------|-----------------------|
| 1056       | 38h       | 8                     |
| 1057       | 39h       | 9                     |
| 1058       | 3Ah       | :                     |
| 1059       | 3Bh       | ;                     |
| 1060       | 3Ch       | <                     |

continues on next page

Table 4 – continued from previous page

| Scan Value | Hex Value | Keyboard Function Key |
|------------|-----------|-----------------------|
| 1061       | 3Dh       | =                     |
| 1062       | 3Eh       | >                     |
| 1063       | 3Fh       | ?                     |
| 1064       | 40h       | @                     |
| 1065       | 41h       | A                     |
| 1066       | 42h       | B                     |
| 1067       | 43h       | C                     |
| 1068       | 44h       | D                     |
| 1069       | 45h       | E                     |
| 1070       | 46h       | F                     |
| 1071       | 47h       | G                     |
| 1072       | 48h       | H                     |
| 1073       | 49h       | I                     |
| 1074       | 4Ah       | J                     |
| 1075       | 4Bh       | K                     |
| 1076       | 4Ch       | L                     |
| 1077       | 4Dh       | M                     |
| 1078       | 4Eh       | N                     |
| 1079       | 4Fh       | O                     |
| 1080       | 50h       | P                     |
| 1081       | 51h       | Q                     |
| 1082       | 52h       | R                     |
| 1083       | 53h       | S                     |
| 1084       | 54h       | T                     |
| 1085       | 55h       | U                     |
| 1086       | 56h       | V                     |

| Scan Value | Hex Value | Keyboard Function Key |
|------------|-----------|-----------------------|
| 1087       | 57h       | W                     |
| 1088       | 58h       | X                     |
| 1089       | 59h       | Y                     |
| 1090       | 5Ah       | Z                     |
| 1091       | 5Bh       | [                     |
| 1092       | 5Ch       | \                     |
| 1093       | 5Dh       | ]                     |
| 1094       | 5Eh       | ^                     |
| 1095       | 5Fh       | _                     |
| 1096       | 60h       | ‘                     |
| 1097       | 61h       | a                     |
| 1098       | 62h       | b                     |
| 1099       | 63h       | c                     |
| 1100       | 64h       | d                     |
| 1101       | 65h       | e                     |
| 1102       | 66h       | f                     |
| 1103       | 67h       | g                     |
| 1104       | 68h       | h                     |

continues on next page

Table 5 – continued from previous page

| Scan Value | Hex Value | Keyboard Function Key |
|------------|-----------|-----------------------|
| 1105       | 69h       | i                     |
| 1106       | 6Ah       | j                     |
| 1107       | 6Bh       | k                     |
| 1108       | 6Ch       | l                     |
| 1109       | 6Dh       | m                     |
| 1110       | 6Eh       | n                     |
| 1111       | 6Fh       | o                     |
| 1112       | 70h       | p                     |
| 1113       | 71h       | q                     |
| 1114       | 72h       | r                     |
| 1115       | 73h       | s                     |
| 1116       | 74h       | t                     |
| 1117       | 75h       | u                     |

| Scan Value | Hex Value | Keyboard Function Key |
|------------|-----------|-----------------------|
| 1118       | 76h       | v                     |
| 1119       | 77h       | w                     |
| 1120       | 78h       | x                     |
| 1121       | 79h       | y                     |
| 1122       | 7Ah       | z                     |
| 1123       | 7Bh       | {                     |
| 1124       | 7Ch       |                       |
| 1125       | 7Dh       | }                     |
| 1126       | 7Eh       | ~                     |
| 1127       | 7Fh       | Undefined             |

Values from 1128 to 1255 can also be set; hexadecimal values 80h to FFh are used for SSI.

## 12 Appendix

### 12.1 Character Reference Table

#### ASCII Function Key Character Reference Table

##### 0FH

| HEX | CODE | *Config0  | Config3   | Con-<br>fig1 | Con-<br>fig4 | Config2 Win-<br>dows | Config5 Win-<br>dows |
|-----|------|-----------|-----------|--------------|--------------|----------------------|----------------------|
| 00H | NUL  | NUL       | NUL       | Ctrl+@       | Ctrl+@       | ALT+000              | ALT+000              |
| 01H | SOH  | NUL       | NUL       | Ctrl+A       | Ctrl+A       | ALT+001              | ALT+001              |
| 02H | STX  | NUL       | NUL       | Ctrl+B       | Ctrl+B       | ALT+002              | ALT+002              |
| 03H | ETX  | NUL       | NUL       | Ctrl+C       | Ctrl+C       | ALT+003              | ALT+003              |
| 04H | EOT  | NUL       | NUL       | Ctrl+D       | Ctrl+D       | ALT+004              | ALT+004              |
| 05H | ENQ  | NUL       | NUL       | Ctrl+E       | Ctrl+E       | ALT+005              | ALT+005              |
| 06H | ACK  | NUL       | NUL       | Ctrl+F       | Ctrl+F       | ALT+006              | ALT+006              |
| 07H | BEL  | NUL       | NUL       | Ctrl+G       | Ctrl+G       | ALT+007              | ALT+007              |
| 08H | BS   | Backspace | Backspace | Ctrl+H       | Ctrl+H       | ALT+008              | ALT+008              |
| 09H | HT   | TAB       | TAB       | TAB          | Ctrl+I       | ALT+009              | ALT+009              |
| 0AH | LF   | NUL       | Enter     | Ctrl+J       | Ctrl+J       | ALT+010              | ALT+010              |
| 0BH | VT   | TAB       | TAB       | Ctrl+K       | Ctrl+K       | ALT+011              | ALT+011              |
| 0CH | FF   | NUL       | NUL       | Ctrl+L       | Ctrl+L       | ALT+012              | ALT+012              |
| 0DH | CR   | Enter     | Enter     | Enter        | Ctrl+M       | Enter                | ALT+013              |
| 0EH | SO   | NUL       | NUL       | Ctrl+N       | Ctrl+N       | ALT+014              | ALT+014              |
| 0FH | SI   | NUL       | NUL       | Ctrl+O       | Ctrl+O       | ALT+015              | ALT+015              |

##### 1FH

| HEX | CODE | *Config0/3 | Config1/4 | Config2/5 Windows |
|-----|------|------------|-----------|-------------------|
| 10H | DLE  | NUL        | Ctrl+P    | ALT+016           |
| 11H | DC1  | NUL        | Ctrl+Q    | ALT+017           |
| 12H | DC2  | NUL        | Ctrl+R    | ALT+018           |
| 13H | DC3  | NUL        | Ctrl+S    | ALT+019           |
| 14H | DC4  | NUL        | Ctrl+T    | ALT+020           |
| 15H | NAK  | NUL        | Ctrl+U    | ALT+021           |
| 16H | SYN  | NUL        | Ctrl+V    | ALT+022           |
| 17H | ETB  | NUL        | Ctrl+W    | ALT+023           |
| 18H | CAN  | NUL        | Ctrl+X    | ALT+024           |
| 19H | EM   | NUL        | Ctrl+Y    | ALT+025           |
| 1AH | SUB  | NUL        | Ctrl+Z    | ALT+026           |
| 1BH | ESC  | ESC        | Ctrl+[    | ALT+027           |
| 1CH | FS   | NUL        | Ctrl+\    | ALT+028           |
| 1DH | GS   | NUL        | Ctrl+]    | ALT+029           |
| 1EH | RS   | NUL        | Ctrl+^    | ALT+030           |
| 1FH | US   | NUL        | Ctrl+-    | ALT+031           |

**Note**

On Mac systems, the Ctrl key corresponds to the Command key.

**ASCII Character Reference Table****5FH**

| HEX | ASCII | HEX | ASCII | HEX | ASCII | HEX | ASCII |
|-----|-------|-----|-------|-----|-------|-----|-------|
| 20H | Space | 30H | 0     | 40H | @     | 50H | P     |
| 21H | !     | 31H | 1     | 41H | A     | 51H | Q     |
| 22H | "     | 32H | 2     | 42H | B     | 52H | R     |
| 23H | #     | 33H | 3     | 43H | C     | 53H | S     |
| 24H | \$    | 34H | 4     | 44H | D     | 54H | T     |
| 25H | %     | 35H | 5     | 45H | E     | 55H | U     |
| 26H | &     | 36H | 6     | 46H | F     | 56H | V     |
| 27H | '     | 37H | 7     | 47H | G     | 57H | W     |
| 28H | (     | 38H | 8     | 48H | H     | 58H | X     |
| 29H | )     | 39H | 9     | 49H | I     | 59H | Y     |
| 2AH | *     | 3AH | :     | 4AH | J     | 5AH | Z     |
| 2BH | +     | 3BH | ;     | 4BH | K     | 5BH | [     |
| 2CH | ,     | 3CH | <     | 4CH | L     | 5CH | \     |
| 2DH | -     | 3DH | =     | 4DH | M     | 5DH | ]     |
| 2EH | .     | 3EH | >     | 4EH | N     | 5EH | ^     |
| 2FH | /     | 3FH | ?     | 4FH | O     | 5FH | _     |

**9DH**

| HEX | ASCII | HEX | ASCII | HEX | Fun Key | HEX | Fun Key      |
|-----|-------|-----|-------|-----|---------|-----|--------------|
| 60H | `     | 70H | p     | 80H | F1      | 90H | End          |
| 61H | a     | 71H | q     | 81H | F2      | 91H | Page Down    |
| 62H | b     | 72H | r     | 82H | F3      | 92H | Right Arrow  |
| 63H | c     | 73H | s     | 83H | F4      | 93H | Left Arrow   |
| 64H | d     | 74H | t     | 84H | F5      | 94H | Down Arrow   |
| 65H | e     | 75H | u     | 85H | F6      | 95H | Up Arrow     |
| 66H | f     | 76H | v     | 86H | F7      | 96H | Print Screen |
| 67H | g     | 77H | w     | 87H | F8      | 97H | *Ctrl        |
| 68H | h     | 78H | x     | 88H | F9      | 98H | *Shift       |
| 69H | i     | 79H | y     | 89H | F10     | 99H | *Left Alt    |
| 6AH | j     | 7AH | z     | 8AH | F11     | 9AH | *Right Alt   |
| 6BH | k     | 7BH | {     | 8BH | F12     | 9BH | 1s Delay     |
| 6CH | l     | 7CH |       | 8CH | Insert  | 9CH | *Win-GUI     |
| 6DH | m     | 7DH | }     | 8DH | Home    | 9DH | *Keystroke   |
| 6EH | n     | 7EH | ~     | 8EH | Page Up |     |              |
| 6FH | o     | 7FH | DEL   | 8FH | Delete  |     |              |



 **Note**

When Ctrl, Shift, Alt, GUI are set as prefix or suffix, they will be output in combination with the next character (not supported when set to ALT, TH keyboard). The character after Keystroke is directly output as the key value.